

Telit EVK2 User Guide

1w0300704 Rev.19 – 2015/01/26



APPLICABILITY LIST:



Model	Part Number	Engine
EVK2	3990150474	Mother Board
EVK2-M2MAIR	3990150502	Mother Board + m2mAIR SIM
GM862 INTERFACE	3990250670	GM862
GE863-PY INTERFACE	3990250684	GE863-PY
GE863-GPS INTERFACE	3990250696	GE863-GPS
GE863-SIM INTERFACE	3990250703	GE863-SIM
GE864-PY INTERFACE	3990250672	GE864-PY
GE864-QUAD V2 INTERFACE	3990250777	GE864-QUAD V2
GE864-DUAL V2 INTERFACE	3990250778	GE864-DUAL V2
GE864-QUAD AUTOMOTIVE V2 INTERFACE	3990250773	GE864-QUAD AUTOMOTIVE V2
GE864-QUAD ATEX V2 INTERFACE	3990250772	GE864-QUAD ATEX V2
GE864-QUAD SIM V2 INTERFACE	3990250771	GE864-QUAD SIM V2
GE864-GPS INTERFACE	3990250820	
	3990250821	GE864-GPS
	3990250822	
GC864 INTERFACE	3990250680	GC864
GC864-QUAD-C2 INTERFACE	3990250683	GC864-QUAD-C2
GE865-QUAD INTERFACE	3990250766	GE865-QUAD
GE865/SE867-AGPS INTERFACE	3990250814	GE865-QUAD
GE865/JF2 INTERFACE	3990250868	GE865-QUAD
GL865/JN3 INTERFACE	3990250954	GL865-QUAD
GL865-QUAD INTERFACE	3990250812	GL865-QUAD
GL865-DUAL INTERFACE	3990250783	GL865-DUAL
GL868-DUAL INTERFACE	3990250790	GL868-DUAL
UC864 INTERFACE	4990150470	UC864
HE863-EUR INTERFACE	3990250797	HE863
HE863-EUG INTERFACE	3990250798	HE863



HE863-NAD INTERFACE	3990250799	HE863
HE863-NAR INTERFACE	3990250800	HE863
HE863-NAG INTERFACE	3990250801	HE863
HE863-AUR INTERFACE	3990250803	HE863
HE863-AUG INTERFACE	3990250804	HE863
HE910 INTERFACE	3990250845	HE910
UE910-EUR INTERFACE	3990250918	UE910-EUR
UE910-NAR INTERFACE	3990250919	UE910-NAR
UE910-N3G INTERFACE	3990251140	UE910-N3G
GE910 INTERFACE	3990250882	GE910
GE910-GNSS INTERFACE	3990250941	GE910-GNSS
GE910-QUAD V3 INTERFACE	3990251006	GE910-QUAD V3
DE910 INTERFACE	3990250886	DE910
CE910 INTERFACE	3990250887	CE910
GL865-DUAL V3 1.8V INTERFACE	3990250948	GL865-DUAL V3
LE920-EU INTERFACE	3990251000	LE920-EU
LE920-NA INTERFACE	3990250999	LE920-NA
HE920-EU INTERFACE	3990250966	HE920-EU
HE920-NA INTERFACE	3990250967	HE920-NA
HE910 V2-EUG INTERFACE	3990250977	HE910 V2-EUG
HE910 V2-NAG INTERFACE	3990250978	HE910 V2-NAG
UE910-EU V2 INTERFACE	3990250989	UE910-EU V2
UE910-NA V2 INTERFACE	3990250988	UE910_NA V2
CL865-DUAL INTERFACE	3990251051	CL865-DUAL
GE866-QUAD INTERFACE	3990251119	GE866-QUAD
UE866-N3G INTERFACE	3990251092	UE866-N3G
UL865-EUR INTERFACE	3990250961	UL865-EUR
UL865-NAR INTERFACE	3990250962	UL865-NAR
LE910-NAG INTERFACE	3990251036	LE910-NAG
LE910-NVG INTERFACE	3990251037	LE910-NVG
LE910-SVG INTERFACE	3990251087	LE910-SVG
LE910-EUG INTERFACE	3990251061	LE910-EUG



SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party



supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.

Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk ActivitiesTM). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A.



Contents

1. Introduction.....	18
1.1. Scope.....	18
1.2. Audience.....	18
1.3. Contact Information, Support.....	18
1.4. Text Conventions.....	19
1.5. Related Documents.....	19
1.6. Content of the kit.....	20
2. Description.....	21
2.1. PCB characteristics	22
2.2. Mechanical characteristics of the assembled PCBs.....	23
2.2.1. Mother Board CS1139B	23
2.2.2. GM862 Interface CS1150B	23
2.2.3. GE863 Interface CS1151A	23
2.2.4. GE864 Interface CS1152B	23
2.2.5. GE864-GPS Interface CS1439B.....	23
2.2.6. GC864 Interface CS1203B	24
2.2.7. GC864-C2 Interface CS1231X.....	24
2.2.8. GE865 Interface CS1324A	24
2.2.9. GE865/SE867-AGPS Interface CS1433	24
2.2.10. GE865/JF2 Interface CS1521	24
2.2.11. GL865 Interface CS1431A	24
2.2.12. UC864-CC864 Interface KS0101C	25
2.2.13. HE910 Interface CS1467C	25
2.2.14. UE910 Interface CS1467D	25
2.2.15. GE910 Interface CS1467D	25
2.2.16. GE910-GNSS Interface CS1467F	25
2.2.17. GE910-QUAD V3 Interface CS1467F	25
2.2.18. DE910 Interface CS1467D	25
2.2.19. CE910 Interface CS1467D	25
2.2.20. GL865 V3 Interface CS1531B.....	26
2.2.21. LE920 Interface KS0145B.....	26
2.2.22. HE920 Interface KS0145B	26
2.2.23. HE910 V2 Interface CS1467D	26
2.2.24. UE910 V2 Interface CS1467D	26
2.2.25. CL865 Interface CS1531B.....	26
2.2.26. GE866-QUAD Interface CS1634	26
2.2.27. UE866 Interface CS1634	26
2.2.28. UL865 Interface CS1531B	27
2.2.29. LE910 Interface CS1467F	27
3. Startup procedure.....	28
4. Insertion of the Interface Boards.....	29
5. Power supply setting	30



13.	Module Interface Boards	53
13.1.	Generality	53
13.2.	Short Description.....	53
13.3.	Further Accessories for GPS version.....	53
14.	GM862 Interface	54
14.1.	Stand-alone setup	54
14.2.	Interface connectors	55
14.3.	Content of the kit.....	55
15.	GE863 Interface.....	56
15.1.	Stand-alone setup	56
15.2.	Content of the kits	57
15.2.1.	GE863-PY/QUAD version	57
15.2.2.	GE863-GPS version.....	57
15.2.3.	GE863-SIM version.....	57
15.3.	Interface connectors	57
15.4.	Additional components for GPS version	57
15.5.	USB connector	58
15.6.	Serial port configuration.....	59
15.6.1.	GE863-PY/QUAD	60
15.6.2.	GE863 – GPS.....	60
15.7.	ANTENNA connectors.....	62
15.7.1.	GPS ANTENNA connector	62
15.7.2.	GSM ANTENNA connector.....	62
15.7.3.	RFU ANTENNA connector.....	62
16.	GE864 Interface.....	63
16.1.	Stand-alone setup	63
16.2.	Interface connectors	64
16.3.	Content of the kit.....	64
17.	GE864-GPS Interface	65
17.1.	Part numbering.....	65
17.2.	Stand-alone setup	66
17.3.	Interface connectors	66
17.4.	Contents of the kit	66
17.5.	Power supply.....	67
17.6.	GPS external LNA enable signal.....	67



17.7. Serial port configuration.....68

 17.7.1. ASC1 to RS-23269

 17.7.2. GPS to ASC1 (internal host controlling configuration)69

 17.7.3. GPS to RS-232 (external host controlling configuration)70

 17.7.4. GPS to USB70

17.8. GPIO settings.....71

 17.8.1. Internal host controlling configuration71

 17.8.2. External host controlling configuration72

17.9. Antenna connectors.....74

 17.9.1. GSM antenna connector.....74

 17.9.2. GPS antenna connector74

18. GE865 – SE867 AGPS Interface75

18.1. Stand-alone setup75

18.2. Interface connectors76

18.3. Contents of the kit76

18.4. Serial connections77

 18.4.1. GSM to GPS (GSM controlling configuration)77

 18.4.2. GSM to Trace78

 18.4.3. GPS to Trace(external host controlling configuration)79

18.5. Antenna connectors.....79

 18.5.1. GSM antenna connector.....79

 18.5.2. GPS antenna connector79

19. GE865 – JF2 Interface80

19.1. Stand-alone setup80

19.2. Interface connectors81

19.3. Contents of the kit81

19.4. Power supply.....81

19.5. GPS external LNA enable signal.....82

19.6. Serial port configuration.....84

19.7. GSM to Trace.....85

19.8. GPS to Trace.....85

19.9. GSM to USB.....86

19.10. GPS to USB86

19.11. GPS to GSM (internal host controlling configuration).....87

19.12. GPIO settings.....87

 19.12.1. Internal host controlling configuration88

 19.12.2. External host controlling configuration89

19.13. GPS serial interface setting90



19.14. MEMS Sensor/EEPROM Interface	90
19.15. GPS power-on management	90
19.16. Antenna connectors	91
19.16.1. GSM antenna connector.....	91
19.16.2. GPS antenna connector.....	91
20. GL865 – SL869/JN3 Interface	92
20.1. Stand-alone setup	93
20.2. Interface connectors	93
20.3. Contents of the kit	93
20.1. Power supply	94
20.2. GPS external LNA enable signal	95
20.3. Serial port configuration	96
20.4. GSM to Trace	97
20.5. GPS to Trace	97
20.6. GSM to USB	98
20.7. GPS to USB	98
20.8. GPS to GSM (internal host controlling configuration)	99
20.9. GPIO settings	100
20.9.1. Internal host controlling configuration.....	100
20.9.2. External host controlling configuration.....	101
20.10. Antenna connectors	102
20.10.1. GSM antenna connector.....	102
20.10.2. GPS antenna connector.....	102
21. GC864 Interface	103
21.1. Stand-alone setup	103
21.2. Interface connectors	104
21.3. Content of the kit	104
22. GC864-C2 family Interface	105
22.1. Stand-alone setup	105
22.2. Interface connectors	106
22.3. Content of the kit	106
23. GE865 Interface	107
23.1. Stand-alone setup	107
23.2. Interface connectors	108



23.3.	Content of the kit.....	108
24.	GL865 Interface.....	109
24.1.	Stand-alone setup	109
24.2.	Interface connectors	110
24.3.	Content of the kit.....	110
25.	UC864 family Interface.....	111
25.1.	Stand-alone setup	111
25.2.	Interface connectors	112
25.3.	Content of the kit.....	112
26.	HE910 family Interface.....	113
26.1.	Stand-alone setup	114
26.2.	Interface connectors	114
26.3.	Antenna connectors.....	115
26.3.1.	GSM/UMTS Antenna connector	115
26.3.2.	Receiver Diversity Antenna connector	115
26.3.3.	GPS antenna connector	115
26.4.	Expansion Connectors	116
26.4.1.	PL301/PL302.....	116
26.4.2.	PL303/PL304/PL305	117
26.4.3.	PL102.....	118
26.4.4.	ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	118
26.5.	Content of the kit.....	118
27.	UE910 family Interface.....	119
27.1.	Stand-alone setup	120
27.2.	Interface connectors	120
27.2.1.	GSM/UMTS Antenna connector	121
27.3.	Expansion Connectors	121
27.3.1.	PL301/PL302.....	121
27.3.2.	PL303/PL304/PL305	122
27.3.3.	PL102.....	123
27.3.4.	ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	123
27.4.	Content of the kit.....	123
28.	GE910 Interface.....	124
28.1.	Stand-alone setup	125
28.2.	Interface connectors	125
28.3.	Antenna connectors.....	126
28.3.1.	GSM/GPRS Antenna connector.....	126



28.4. Expansion Connectors	126
28.4.1. PL301/PL302	126
28.4.2. PL303/PL304	127
28.4.3. PL102.....	127
28.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	128
28.5. Content of the kit.....	128
29. GE910-GNSS Interface.....	129
29.1. Stand-alone setup	130
29.2. Interface connectors	130
29.3. Antenna connectors.....	131
29.3.1. GSM/GPRS Antenna connector.....	131
29.3.2. GNSS antenna connector	131
29.4. Expansion Connectors	132
29.4.1. PL301/PL302.....	132
29.4.2. PL303/PL304.....	133
29.4.3. PL102.....	133
29.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	134
29.5. Content of the kit.....	134
30. GE910-QUAD V3 Interface.....	135
30.1. Stand-alone setup	136
30.2. Interface connectors	136
30.3. Antenna connectors.....	137
30.3.1. GSM/GPRS Antenna connector.....	137
30.4. Expansion Connectors	137
30.4.1. PL301/PL302.....	137
30.4.2. PL303/PL304.....	138
30.4.3. PL102.....	138
30.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	139
30.5. Content of the kit.....	139
31. DE910 family Interface.....	140
31.1. Stand-alone setup	141
31.2. Interface connectors	141
31.3. Antenna connectors.....	142
31.3.1. CDMA Antenna connector	142
31.3.2. Receiver Diversity Antenna connector	142
31.3.3. GPS antenna connector.....	142
31.4. Expansion Connectors	143
31.4.1. PL301/PL302.....	143
31.4.2. PL303/PL304/PL305	144
31.4.3. PL102.....	145
31.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	145



31.5.	Content of the kit	145
32.	CE910 family Interface	146
32.1.	Stand-alone setup	147
32.2.	Interface connectors	147
32.3.	Antenna connectors	148
32.3.1.	CDMA Antenna connector.....	148
32.4.	Expansion Connectors	148
32.4.1.	PL301/PL302.....	148
32.4.2.	PL303/PL304.....	149
32.4.3.	PL102.....	149
32.4.4.	ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS.....	150
32.5.	Content of the kit	150
33.	GL865 V3 Interface	151
33.1.	Stand-alone setup	151
33.2.	Interface connectors	152
34.	LE920 Interface	153
34.1.	Stand-alone setup	154
34.2.	Interface connectors	154
34.3.	Antenna connectors	155
34.3.1.	Main Antenna connector.....	155
34.3.2.	Diversity Antenna connector.....	155
34.3.3.	GPS Antenna connector.....	155
34.4.	Expansion Connectors	155
34.4.1.	PL102/PL104.....	155
34.4.2.	ON_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS.....	157
34.5.	Content of the kit	157
35.	HE920 Family Interface	158
35.1.	Stand-alone setup	159
35.2.	Interface connectors	159
35.3.	Antenna connectors	160
35.3.1.	Main Antenna connector.....	160
35.3.2.	Diversity Antenna connector.....	160
35.3.3.	GPS Antenna connector.....	160
35.4.	Expansion Connectors	160
35.4.1.	PL102/PL104.....	160
35.4.2.	ON_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS.....	162
35.5.	Content of the kit	162
36.	HE910 V2 family Interface	163



36.1. Stand-alone setup	164
36.2. Interface connectors	164
36.3. Antenna connectors.....	165
36.3.1. GSM/UMTS Antenna connector	165
36.3.2. GPS antenna connector	165
36.4. Expansion Connectors	166
36.4.1. PL301/PL302.....	166
36.4.2. PL303/PL304/PL305	167
36.4.3. PL102.....	168
36.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	168
36.5. Content of the kit.....	168
37. UE910 V2 family Interface	169
37.1. Stand-alone setup	170
37.2. Interface connectors	170
37.3. Antenna connectors.....	171
37.3.1. GSM/UMTS Antenna connector	171
37.4. Expansion Connectors	171
37.4.1. PL301/PL302.....	171
37.4.2. PL303/PL304/PL305	172
37.4.3. PL102.....	173
37.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	173
37.5. Content of the kit.....	173
38. CL865 Interface.....	174
38.1. Stand-alone setup	174
38.2. Interface connectors	175
38.3. Antenna connectors.....	176
38.3.1. CDMA Antenna connector	176
38.4. Expansion Connectors	176
38.4.1. PL101.....	176
38.4.2. PL106.....	176
38.4.3. PL107.....	177
38.5. Content of the kit.....	177
39. GE866-QUAD Interface	178
39.1. Stand-alone setup	179
39.2. Interface connectors	179
39.3. Antenna connectors.....	181
39.3.1. GSM Antenna connector.....	181
39.4. Expansion Connectors	181
39.4.1. PL101.....	181



39.5. Audio configuration	182
39.5.1. PL301.....	182
39.5.2. PL302.....	182
39.5.3. PL304 & PL305	182
39.5.4. PL306 and PL307	184
39.6. Other interface connectors	185
39.6.1. PL104 & PL105 (POWER)	185
39.6.2. PL103 (SIMIN).....	185
39.6.3. PL202 (AUX UART).....	185
39.7. Content of the kit.....	185
40. UE866 Interface.....	186
40.1. Stand-alone setup	187
40.2. Interface connectors	187
40.3. Antenna connectors.....	189
40.3.1. Main Antenna connector.....	189
40.4. Expansion Connectors	189
40.4.1. PL101.....	189
40.5. Audio configuration	190
40.5.1. PL301.....	190
40.5.2. PL302.....	190
40.5.3. PL304 & PL305	191
40.5.4. PL306 and PL307	192
40.6. Other interface connectors	193
40.6.1. PL104 & PL105 (POWER)	193
40.6.2. PL103 (SIMIN).....	193
40.6.3. PL202 (AUX UART).....	193
40.7. Content of the kit.....	193
41. UL865 Interface.....	194
41.1. Stand-alone setup	194
41.2. Interface connectors	195
41.3. Antenna connectors.....	196
41.3.1. GSM Antenna connector.....	196
41.4. Expansion Connectors	196
41.4.1. PL101.....	196
41.4.2. PL106.....	196
41.5. Content of the kit.....	197
42. LE910 Interface	198
42.1. Stand-alone setup	199
42.2. Interface connectors	199



42.3. Antenna connectors	200
42.3.1. GSM/GPRS Antenna connector.....	200
42.3.2. GNSS antenna connector	200
42.4. Expansion Connectors	201
42.4.1. PL301/PL302.....	201
42.4.2. PL303/PL304.....	202
42.4.3. PL102.....	202
42.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS	203
42.5. Content of the kit	203
43. GPIO ports	204
43.1. GPIO location	205
43.1.1. GM862 Interface.....	205
43.1.2. GE863-GPS Interface	207
43.1.3. GE863 Interfaces (p/n 3990250684 -3990250685-3990250703)	209
43.1.4. GE864 Interface (p/n 3990250672)	210
43.1.5. GE864-GPS Interface (p/n 3990250822).....	211
43.1.6. GE865/SE867-AGPS Interface (p/n 3990250814)	212
43.1.7. GC864 Interface.....	213
43.1.8. GC864-C2 Interface (p/n 3990250683)	214
43.1.9. UC864 Interface.....	215
43.1.10. HE910 Interface	216
43.1.11. GE910 Interface	218
43.1.12. DE910 Interface	220
43.1.13. CE910 Interface	222
43.1.14. GL865 V3 Interface	224
43.1.15. UL865 Interface	226
43.1.16. HE920 Family Interface.....	228
43.1.17. HE910 V2 Interface	230
43.1.18. UE910 V2 Interface	232
43.1.19. CL865 Interface	234
43.1.20. GE866-QUAD Interface	235
43.1.21. UE866 Interface.....	236
43.1.22. LE910 Interface	237
44. SCHEMATICS	239
44.1. EVK2 Mother Board	240
44.2. GM862 Interface Board	245
44.3. GE863 Interface Board	246
44.4. GE864 Interface board	248
44.5. GE864 Interface board – Automotive	249
44.6. GE864 Interface board – V2	250
44.7. GE864-GPS Interface board	251
44.8. GE865/SE867-AGPS Interface board	253
44.9. GE865 Interface board	255



44.10. GL865 Interface board	256
44.11. GC864 Interface board	257
44.12. GC864-C2 Interface board	258
44.13. UC864 Interface board	259
44.14. HE910/UE910 Interface board	261
44.15. GE910 Interface board	265
44.16. GE910-GNSS Interface board.....	269
44.17. GE910-QUAD V3 Interface board.....	273
44.18. GE865 – JF2 Interface board	277
44.19. GL865 – SL869/JN3 Interface board.....	280
44.20. DE910 Interface board.....	283
44.21. CE910 Interface board.....	287
44.22. GL865 V3 Interface board.....	291
44.23. LE920 Interface board.....	293
44.24. HE920 family Interface board.....	296
44.25. HE910 V2 Interface board.....	299
44.26. UE910 V2 Interface board.....	303
44.27. CL865 Interface board.....	307
44.28. GE866-QUAD Interface board	309
44.29. UE866 Interface Board	313
44.30. LE910 Interface board.....	317
44.31. UL865 Interface board.....	321
45. Service and firmware update	323
46. SAFETY RECOMMENDATIONS	324
46.1. Disposal of this product in the European Union.....	325
46.2. Disposal of this product in other countries outside the European Union.....	325
47. Document History	326



1.6. Content of the kit

Please check out the content of your *EVK2* kit; if any of the items is missing, please contact your supplier.

Description	Quantity
EVK2 MOTHERBOARD	1
INFORMATION NOTE	1
2 PIN JUMPER FEMALE CONN	18
ASSEMBLED USB A-B CABLE	1
RED & BLACK CABLE WITH PLUGS	1
GSM-UMTS MAGNETIC ANTENNA CABLE RG174 WITH SMA/M	1

Table 1




GE863-PY Interface Board (upper) fitted on EVK2 Motherboard (lower).




2. Description

The motherboard *CS1139B* can be split into several functional blocks depending on the implemented function; the following drawings show a block diagram and the displacement of the main blocks on motherboard.

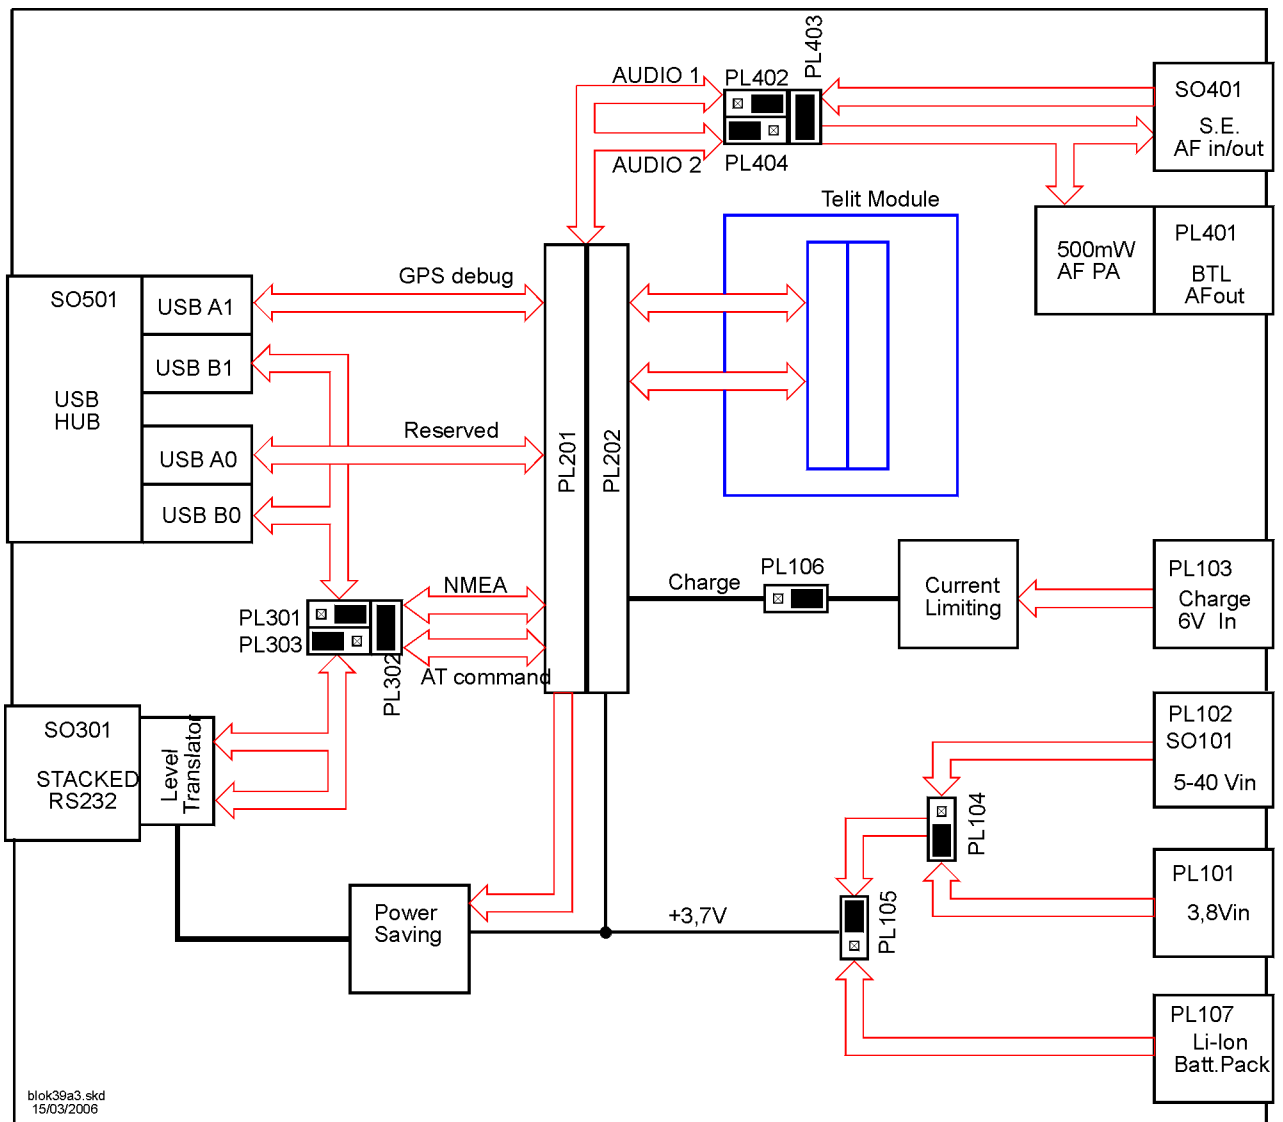

Miscellaneous signals, connections and routing on *CS1139B*.



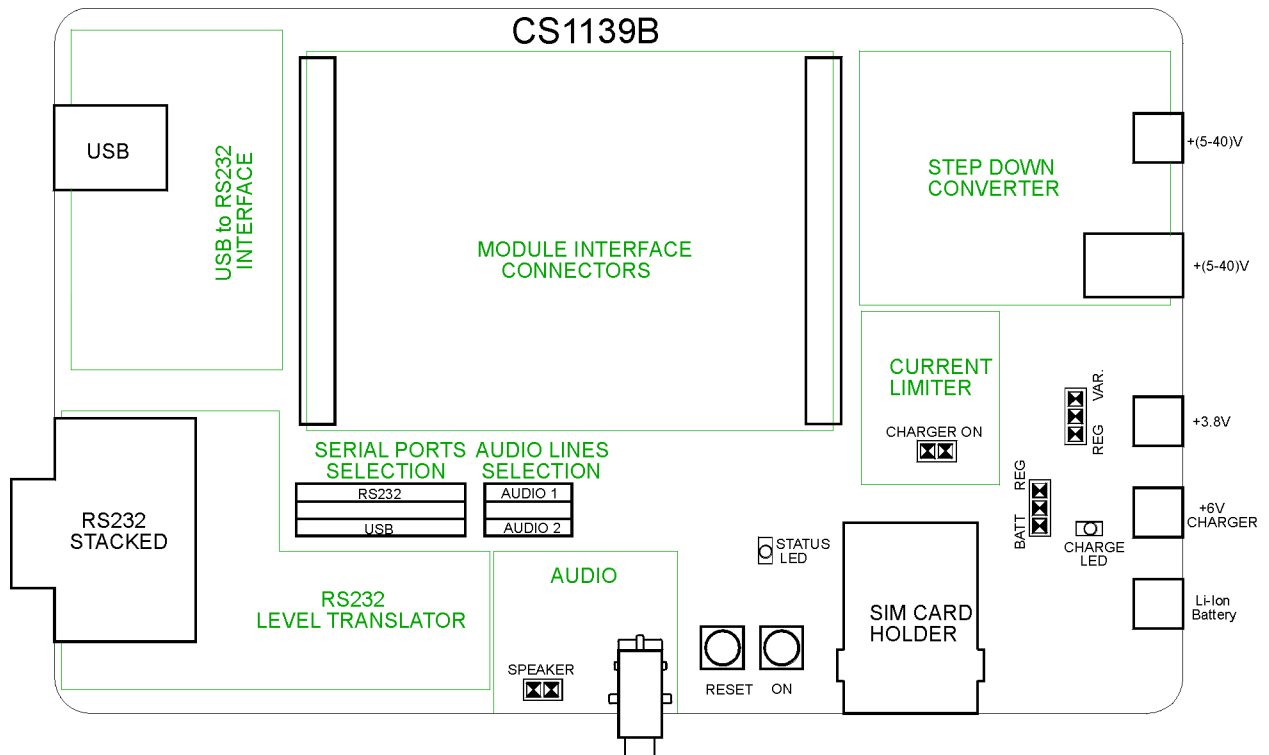

CS1139B circuitual displacement

2.1. PCB characteristics

Material: FR4
 Thickness: 0,95 mm
 Surface finishing: Chemical gold plate Ni 5um/ Au 0,1um



2.2. Mechanical characteristics of the assembled PCBs

2.2.1. Mother Board CS1139B

Length	100 mm (max 102,6 mm)
Width	160 mm (max 166,10mm)
Height	47,6 mm (included the support with columns)
Weight	200 gr (without any interface)

2.2.2. GM862 Interface CS1150B

Length	66,04 mm
Width	78,74 mm
Height	21,00 mm
Weight	27 gr (without the module)

2.2.3. GE863 Interface CS1151A

Length	75 mm (max 84,70mm)
Width	78,74 mm
Height	21,00 mm
Weight	40 gr (with module)
Weight	44,3 gr (with module for GPS version)

2.2.4. GE864 Interface CS1152B

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	36 gr (with module)

2.2.5. GE864-GPS Interface CS1439B

Length	78.70 mm (max mm)
Width	83.70 mm
Height	21 mm



2.2.6. GC864 Interface CS1203B

Length	66,04 mm
Width	78,74 mm
Height	21,00 mm
Weight	27 gr (without the module)

2.2.7. GC864-C2 Interface CS1231X

Length	50,00 mm
Width	33,00 mm
Height	5,60 mm
Weight	13,8 gr (with module)

2.2.8. GE865 Interface CS1324A

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	34 gr (with module)

2.2.9. GE865/SE867-AGPS Interface CS1433

Length	101.00 mm
Width	78.74 mm
Height	mm

2.2.10. GE865/JF2 Interface CS1521

Length	101,00 mm
Width	78,74 mm
Height	mm

2.2.11. GL865 Interface CS1431A

Length	66,04 mm (max 75,20mm)
Width	78,74 mm
Height	21,00 mm
Weight	34 gr (with module)



2.2.12. UC864-CC864 Interface KS0101C

Length	102,00 mm
Width	67,50 mm
Height	20,80 mm
Weight	55 gr (without module)

2.2.13. HE910 Interface CS1467C

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.14. UE910 Interface CS1467D

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.15. GE910 Interface CS1467D

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.16. GE910-GNSS Interface CS1467F

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.17. GE910-QUAD V3 Interface CS1467F

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.18. DE910 Interface CS1467D

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.19. CE910 Interface CS1467D

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm



2.2.20. GL865 V3 Interface CS1531B

Length	92,00 mm
Width	89,00 mm
Height	25,00 mm

2.2.21. LE920 Interface KS0145B

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm

2.2.22. HE920 Interface KS0145B

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm

2.2.23. HE910 V2 Interface CS1467D

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm

2.2.24. UE910 V2 Interface CS1467D

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm

2.2.25. CL865 Interface CS1531B

Length	92,00 mm
Width	89,00 mm
Height	25,00 mm

2.2.26. GE866-QUAD Interface CS1634

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm

2.2.27. UE866 Interface CS1634

Length	92,00 mm
Width	107,00 mm
Height	25,00 mm



2.2.28. UL865 Interface CS1531B

Length	92,00 mm
Width	89,00 mm
Height	25,00 mm

2.2.29. LE910 Interface CS1467F

Length	107,00 mm
Width	102,00 mm
Height	25,00 mm



NOTE:

The overall height for every combination (mother board + interface board) is still the height of the mother board




4. Insertion of the Interface Boards

Every *Interface Board* must be inserted on *CS1139B* paying great attention to match the position of the main connectors; this has been made easy:

optically by a triangle drawn on both printed circuits (except CS1231X) ;
mechanically shifting a column out of regular square cross position.

Both guide systems are highlighted by orange color as shown on the next figure.

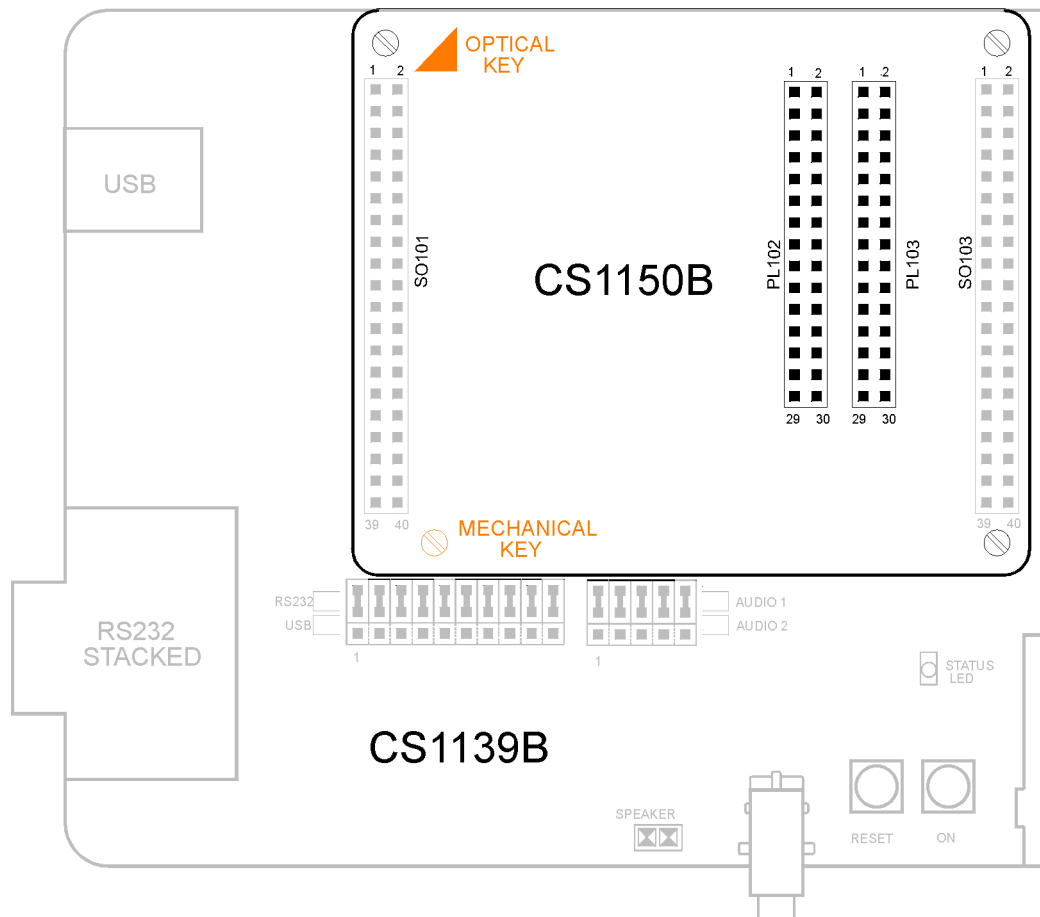


Positioning Guide Systems of *GM862 Interface Board* on CS1139B.



5.2.1. Coaxial Plug

The figure 7 shows the connections of the Power Plug of left part of figure 6.

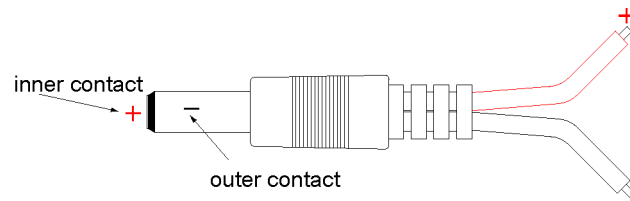


Coaxial “Power Plug” connection.

5.3. Li-Ion Battery pack and Charger

Connect a *Li-Ion battery pack* to PL107 with care to the polarity then short pin 2 & pin 3-PL105 by inserting the 2 contacts jumper connector.

If the battery pack needs to be recharged, connect a **+6V / $\geq 0,5A$** fixed DC source to PL103, with care to the polarity; short PL106 inserting a 2 contacts jumper connector as shown in figure 8: the yellow CHARGE LED will be on during the initial phase of charge. If you remove the battery pack when the charge stops (no current flows), immediately **REMOVE** also the jumper of PL106.

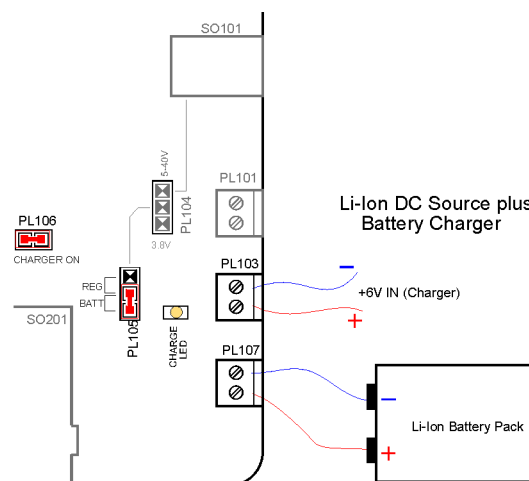

Battery Pack and Battery Charger wired connections and setting.



WARNING:

NEVER CONNECT any Battery Charging source to PL102 without connected Battery!!



5.4. Application Notes

5.4.1. Li-Ion Battery Pack

The 3.7V Li-Ion rechargeable Battery Pack should be connected directly to PL107 connector. Remember to use the connection cables as short as possible, with the appropriate conductors gauge and the other attributes, such as device power budget and cable flexibility, in order to match the specified voltage drop (especially during the high current absorption periods). To obtain the best performance we suggest a capacity of **1000 mAh** (not lower than 500 mAh).

5.4.2. About Current Charger

With a **+6V Current Unlimited Source** connected to PL103 connector, the battery pack will be directly charged through *VBATT connector pins* of the Telit Modules, under control of the *Internal Charge Algorithm* (only on models where is implemented).

Depending of the size, the Li-Ion cell manufacturers suggest a charge current value not greater than $1,5C$ (C = Capacity of the battery pack, expressed in mAh); even if a lower current means a longer charging time, a current equal to $0,5C$ is considered to be a good choice.

With reference to the schematic diagram *30276SE11139A –sheet1*, the Current Limiting Circuit (*Q102, Q103, R106, R107, R108, R109, R110, R111, R112, R113, C105*) sets the maximum value of the Charge Current in respect to the law:

$$I_{ch} = \frac{V_{be}Q102}{R_{par}} \rightarrow \text{where}$$

$$R_{par} = //R110, R111, R112, R113$$

With the default values, the charge current will be $\sim 470\text{mA}$, which will charge Battery Packs with a capacity from 350mAh to 1000mAh, **without any dissipation problem**.

If a higher capacity Battery Pack is needed, you must increment the Time Out in the Telit Modules.




WARNING:

SET THE MAXIMUM VOLTAGE OF the CURRENT UNLIMITED SOURCE LOWER than +8V.



6. Serial interface

The following figure shows the architecture of the serial ports.

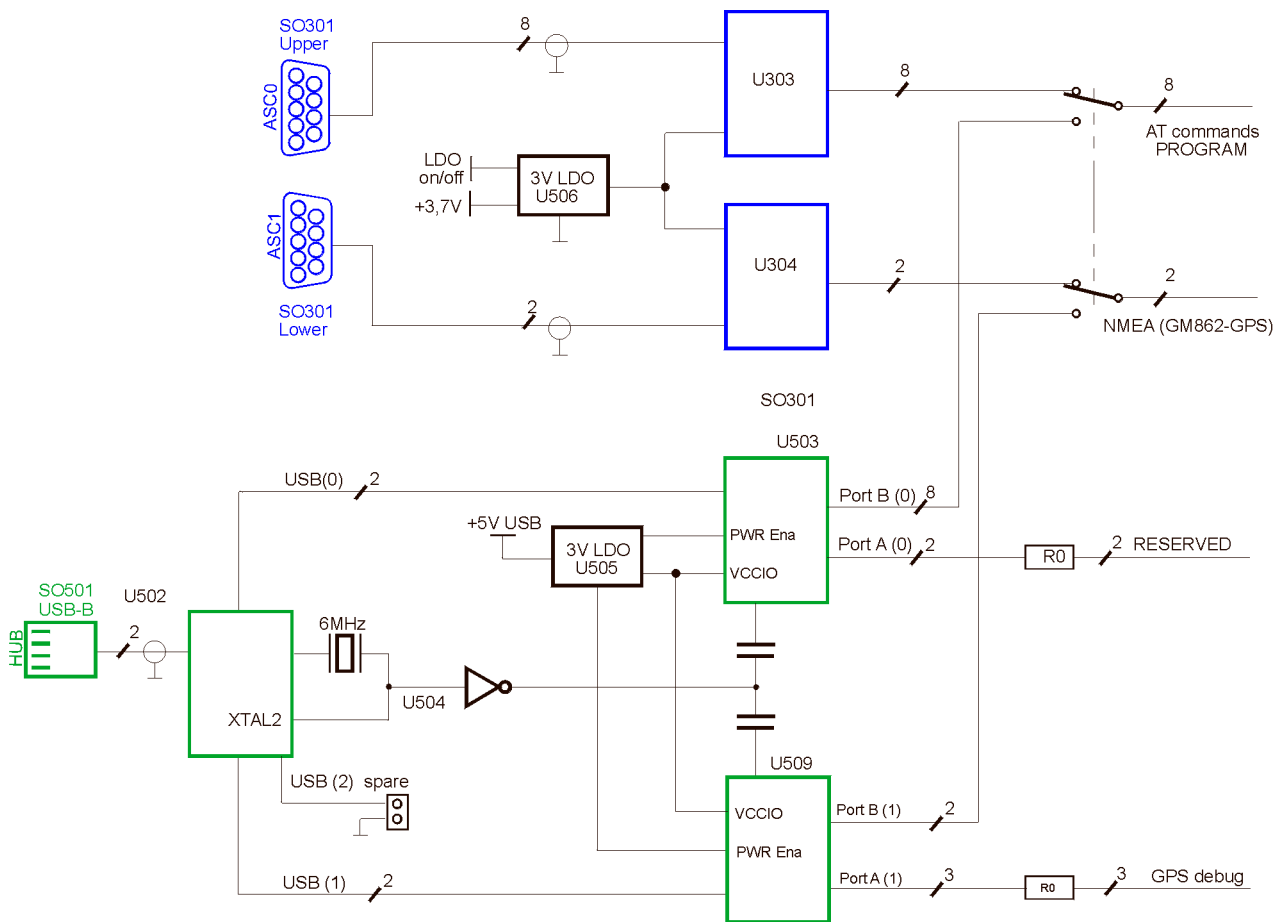


Serial ports block diagram.




6.1. Serial Port Setup

Communications between your application and the Telit modules are allowed connecting the DTE to the *Asynchronous Serial Interfaces* of Base-Band Chip, ASC0 and ASC1, through the *stacked standard RS232 communications port (double 9 way D-socket connector at slow data rates of RS232 protocol)* or a *standard USB-B Series receptacle (at higher data rates of USB1.1 specification through a CMOS HUB that realizes a multiple attachment point device)*.

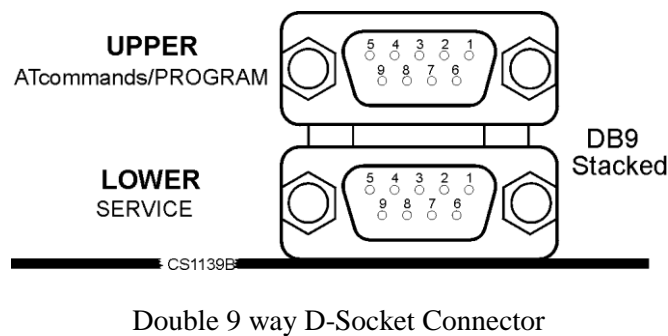

The selection is made short circuiting *PL302&PL303 (RS232 mode)* or *PL302&PL301 (USB 1.1 mode)* by 10 pieces of 2 contacts jumpers. This solution has been implemented because you can isolate every single line during the development.

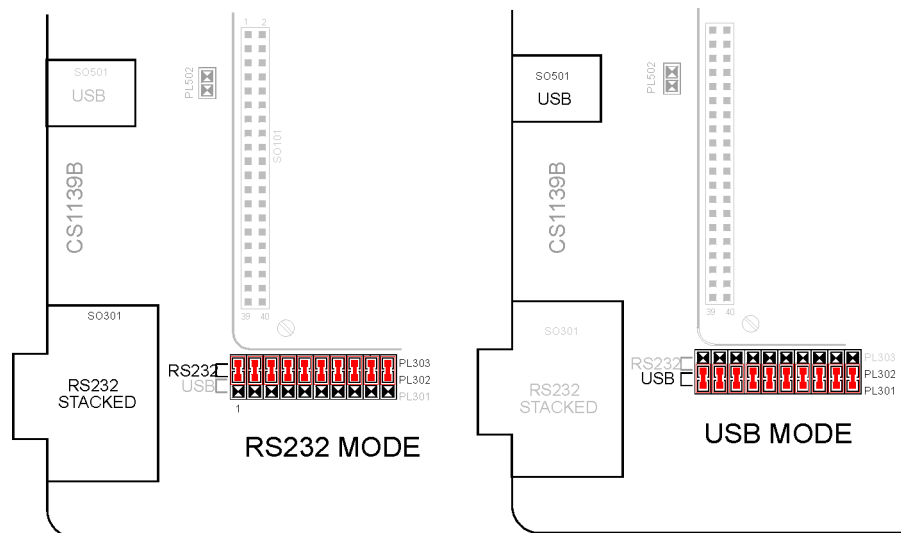

Serial Ports selection



7. Audio Section

7.1. Overview

The Base Band chip of the Telit’s modules provides one or two (depends of model) audio paths both in receive and in transmit sections, which could be active only one at time.

To turn on your well-suited section on EVK2, please refer to “*AF Amplifiers Setting*” paragraph and followings.

To know which are the suggested performances of the EVK2 audio transducers, refer to “*Audio Accessories*” paragraph.

7.1.1. History

The Baseband chip of our modules was developed for the cellular phones, which needed two separated amplifiers both in RX and in TX section. A couple of amplifiers had to be used with internal audio transducers (Handset mode, *HS*) while the other couple of amplifiers must be used with external audio transducers (Handsfree mode, *HF*).

Transducers definitions:

Headsets are transducers that receive an electrical signal from a receiver and use speakers placed in close proximity to the ears to convert the signal into audible sound waves. In the context of telecommunication, the word *Headset* is also commonly understood to refer to a combination of *Headphone* and *Microphone* used for two-way communication, like with a mobile phone.

Earphones are small Headphones that are placed directly outside of the ear canal, but without fully enveloping it. They are generally inexpensive and are favored for their portability and convenience.

Earpiece A part whether of a telephone receiver or hearing aid, that fits in or is held next to the ear.



7.2. Actual

The *HS* and *HF* definitions have been kept in the Software and on the schematics of the Telit modules, but with EVK2 we will refer to *Audio1* and *Audio2* section instead of *Handset* and *Handsfree* respectively, remembering that:

they can have fully equivalent electrical performances (*like the two microphone amplifiers*)
they can activate the same functionalities (*like the Echo Canceller module*)
they can offer slightly different performances (*like the two speaker buffering stages*)

7.2.1. The choice

The activation of the audio path is made Hardware by *AXE* line or Software by *AT#CAP* command.

If you don't have any load driving constraint (*like a speaker with an impedance coil lower than 16 ohm*), the choice between one or other "*block*" could be done without consideration related to the electrical performances; for example in order to overcome the PCB design difficulties.

7.3. Differential and Single Ended

7.3.1. Concepts

Any voltage can be characterized by a potential difference between two terminals.

The configuration of the two terminals and how the signal is delivered from output to input allows the signal to be more generally described in one of three ways:

Single-ended signal. This is a signal delivered between a signal trace and a ground. One terminal for a single-ended connection is always at fixed potential (*usually Ground*).

Differential Signals. These are signals that travel through a pair of traces. On the signal pair, neither of the terminals is Ground.

Common mode Signals. They represent a special case of differential signals, also travelling between a pair of traces, where the voltage potential on both signals is the same.



7.3.2. Benefits and disadvantages

Differential amplifiers are desirable to use, especially in audio applications where signal levels are very low such as those from microphones.

Classically, the benefits obtained from differential amplification are:

Increase of Common Mode Rejection Ratio (CMRR)

Differential inputs enable cancellation of any noise common on both inputs. Noise generated at the input of the amplifier has a greater effect than noise generated at the output, because any noise on the input is multiplied by the gain of the amplifier.

Increase Signal to Noise Ratio (SNR)

The inputs to the amplifier are especially sensitive to noise because they are typically not driven by a very low impedance source.

High Rejection in Electromagnetic Interference (EMI)

Noise immunity is very important in wireless phones because the RF signal is sent in bursts such that the frequency between bursts is in the audio band. RF rectification is such a problem that many manufacturers shield the audio portion of the phone.

Double Useful signals level

The signal levels from microphone and the voltage swing to the load are doubled. Then the AF power to the load it is 4 times the single-ended Afpower at the same voltage supply.

No output blocking capacitor is needed

Even if the differential outputs are biased at half-supply; no DC voltage exists across the load. You do not need the big, expensive and heavy blocking capacitors (generally from 33 μF to 1000 μF), lowering the cost and saving PCB space

There is no frequency limiting effect due to the high pass filter network created with the speaker impedance and the coupling capacitance.

Less shielding is required from amplifier to load

Mainly we have only one disadvantage using differential amplification: the routing of one more signal line could be more difficult and the additional trace requires more board space.




7.3.3. Settings

Connecting your accessories to *SO401 in/out connector*, you will implement Single Ended Input/Output configurations.

Removing all 2 *contacts jumpers* inserted between *PL402&PL403* or *PL403&PL404*, the *in/out lines* of our modules will be directly available on *PL402* and *PL404* connectors.

In such a way, you will be able to implement fully Differential Input/Output configurations. Only with GC864-QUAD/PY-C2 modules the *Ear output* lines are AC coupled.


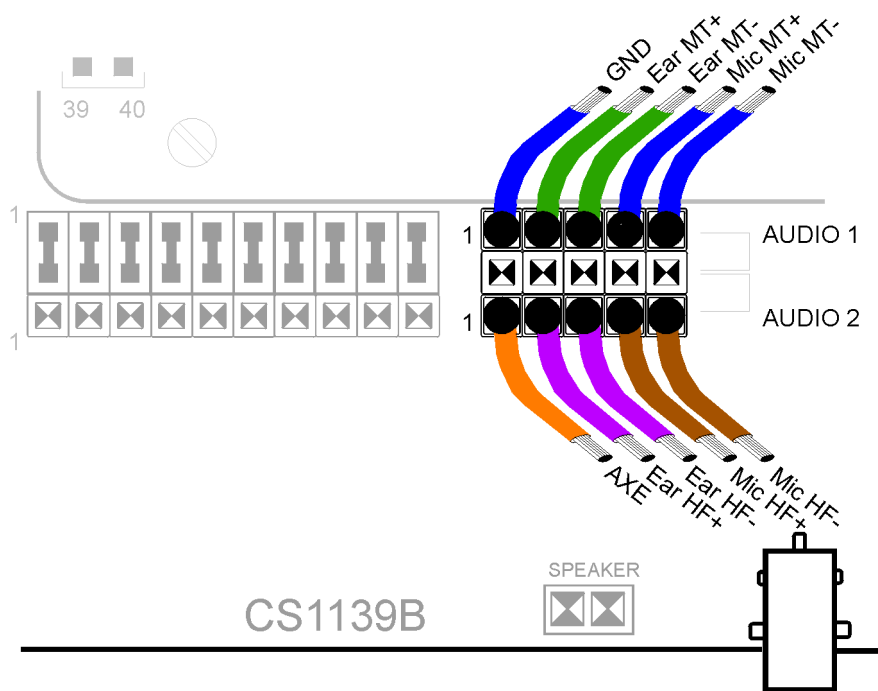


PL402 and PL404 Fully Differential audio lines.



8. AF Amplifiers Setting

The *Base Band Processor Audio Amplifiers* selection is made short-circuiting *PLA03&PLA02* (*RX Amplifier 1*) or *PLA03&PLA04* (*RX Amplifier 2*). In such a way you could verify the complete performance of both audio paths.

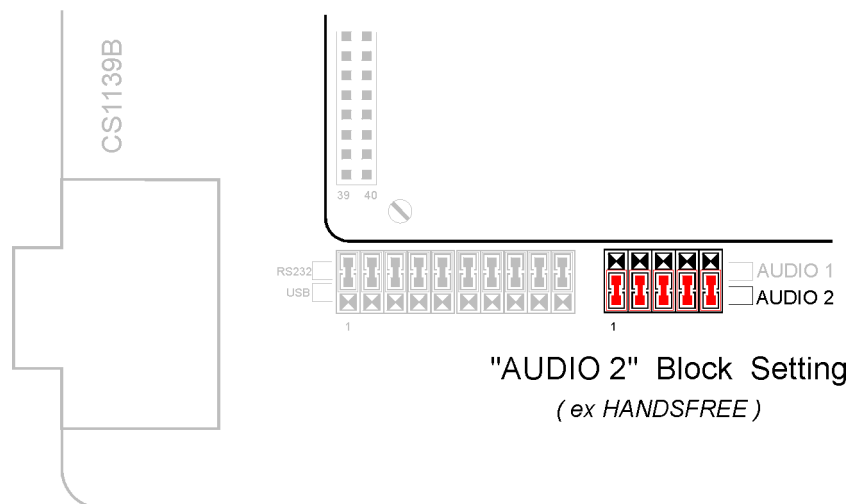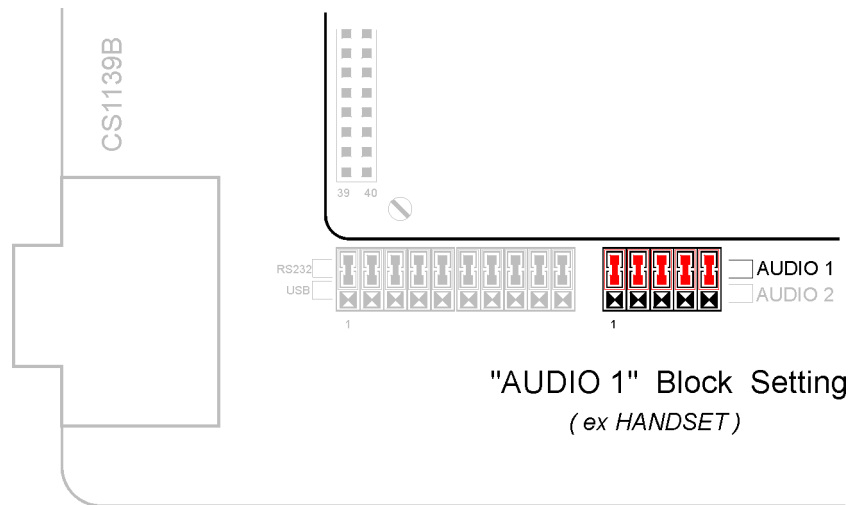

Base Band Audio Amplifiers selection



9. Audio outputs

The EVK2 output audio signals could be drive a device connected to *SO401* (LOW AF POWER mode) or to *PL401* (HIGH AF POWER mode).

9.1. Low AF Power Mode

Inserting the 2 *contacts jumpers* as explained at paragraph 9A, a standard *off-the-shelf Headset* should be connected to the *SO401* (3 contacts, 2.5mm diameter jack connector).


With such an insertion, the Telit Modules will power the Microphone through a Single Ended input circuit and the Earpiece through a Single Ended/ AC coupled output circuit.



NOTE:

The acoustic performance of the *Headset* (*frequency response, loudness*) largely depends by its housing, fitting and acoustic impedance.

The coil impedance of the Headset should be higher than 15 ohm @ 1KHz.

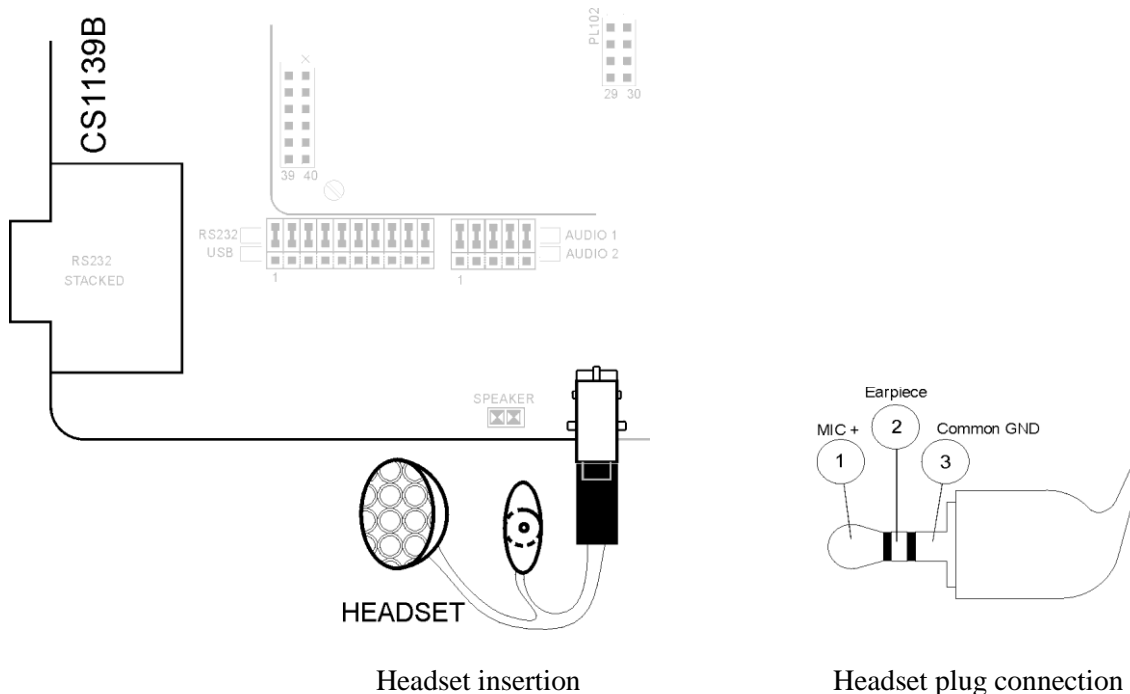

9.2. High AF Power Mode

Connecting an **8 ohm** Speaker to PL401 by a 2 contacts female connector, you could drive it through the 500mW Power Amplifier.

In this case the Speaker will be driven in fully differential configuration, with no side connected to ground and without any output coupling capacitor. Therefore care must be taken because there is DC voltage on both sides of the Speaker.


The overall gain of this amplifier can be modified varying the ratios R406/R404 and R407/R410:

$$A_v = 2 \cdot \frac{R404}{R406} = 2 \cdot \frac{R407}{R410} \quad \text{if } R404=R407 \text{ and } R406=R410$$



NOTE:

The coil impedance of the Speaker should be higher than 8 ohm @ 1KHz .

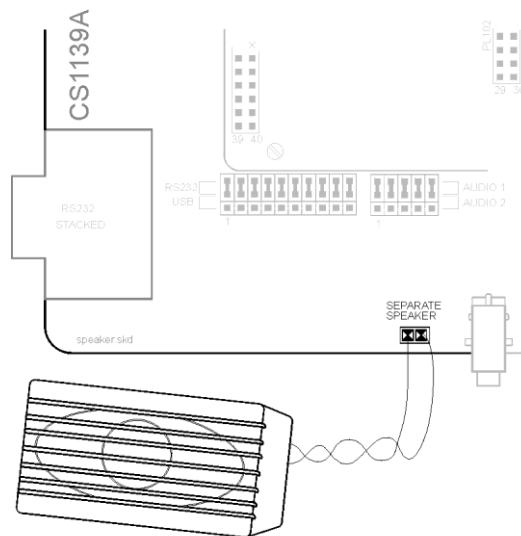

Speaker insertion



9.2.1. Speaker and Stand-alone Microphone

If you are using a Speaker, you can connect a *stand-alone electrete microphone* by a coaxial 2,5mm plug to SO401, respecting the following pin-out.


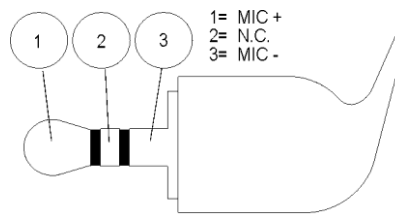


Figure 1: Microphone Plug Connection



Speaker & Microphone case insertion

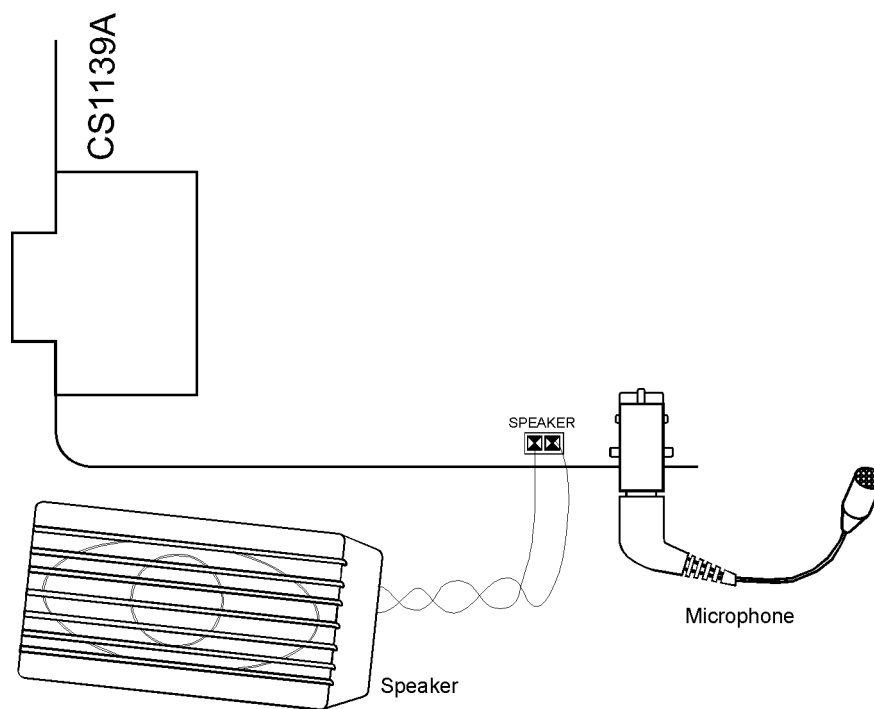

9.2.2. Speaker plus Headset

If you have chosen to connect the Speaker to *HIGH AF POWER* output, without having a stand-alone electret microphone, it is also possible to connect a standard *off-the-shelf Headset* to SO401 without any problem, as shown in the figure 18: the AF output signal will be heard on both Speaker and Earpiece.




WARNING:

You must use the right coil impedance depending from audio output you want to use.

If you sort out the LOW AF POWER solution connecting your Headset to SO401, the coil impedance **must be at least 16Ω@1KHz or higher**.

If you sort out the HIGH AF POWER solution connecting your Speaker to PL401, the coil impedance **must be at least 8Ω@1KHz or higher**

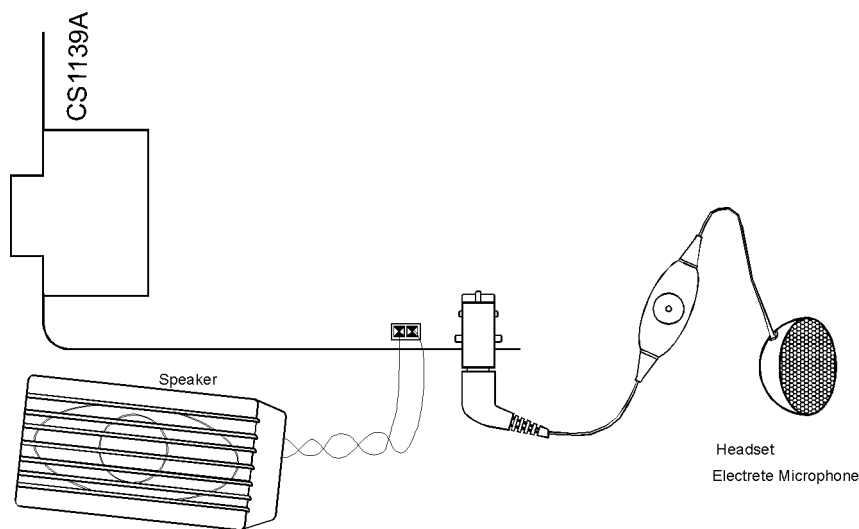

Speaker plus Headset insertion



10. Audio Accessories

The following tables show the suggested specification to obtain the best performance from *off-the-shelf* accessories.

10.1. Headset

Microphone electrical characteristics	
Nominal sensitivity	-45dBV _{rms} /1Pa (+/- 3dB)
Line coupling	AC
Nominal Voltage	2V
Range of Using Voltage	(1÷10)V
Consumption Current	(150÷500) μA
Impedance	2,2KΩ
Signal to Noise Ratio	56dB /1KHz/1Pa (A curve)
Inner EMI capacitor between terminals	10pF, 33pF

Earpiece electrical characteristics	
Rated Input Power	5mW
Maximum Input Power	20mW
Coil Impedance	32Ω ± 5Ω @ 1kHz
SPL	95±3 dB @ 1KHz/1mW sine wave
Resonance frequency (Fo)	< 350Hz
Useful Bandwidth	Fo ÷ 8000 Hz @ -3dB



10.2. Stand-alone microphone

Microphone electrical characteristics	
Nominal sensitivity	-45dBV _{rms} /1Pa (+/- 3dB)
Line coupling	AC
Nominal Voltage	2V
Range of Using Voltage	(1÷10)V
Consumption Current	(150÷500) μ A
Impedance	2,2K Ω
Signal to Noise Ratio	56dB /1KHz/1Pa /A curve
EMI capacitor between terminals	10pF, 33pF

10.3. Speaker

Speaker electrical characteristics	
Rated Input Power	500 mW
Maximum Input Power	1W
Coil Impedance	$\geq 8\Omega$
SPL	$\geq 85\pm 3$ dB @ 1KHz
Resonance frequency (Fo)	< 350 Hz
Useful Bandwidth	Fo \div 8000 Hz @ -3dB




11. Indication and services

11.1. Optical Indicators

11.1.1. Status Led

It is a debug aid that shows information on the network service availability and Call status.

LED status	Device Status
Permanently off	Device off
Fast blinking (period 1s, Ton 0,5s)	Net search / Not registered / turning off
Slow blinking (period 3s, Ton 0,3s)	Registered: full service
Permanently on	A call is active

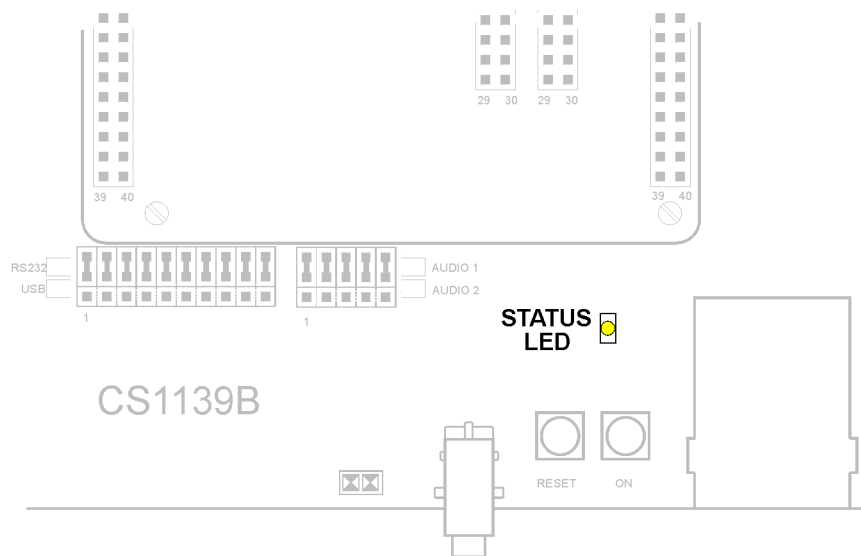

STAT_LED position




11.1.2. CHARGE Led

A yellow LED is used as *Charge In Act* Indicator, as explained in the following table.

CHARGE LED	Meaning
Always on	Start Charge/ Hugh current Charge in act
Always off	Low current Charge in act/Charge stop

Table 7: CHARGE LED indications

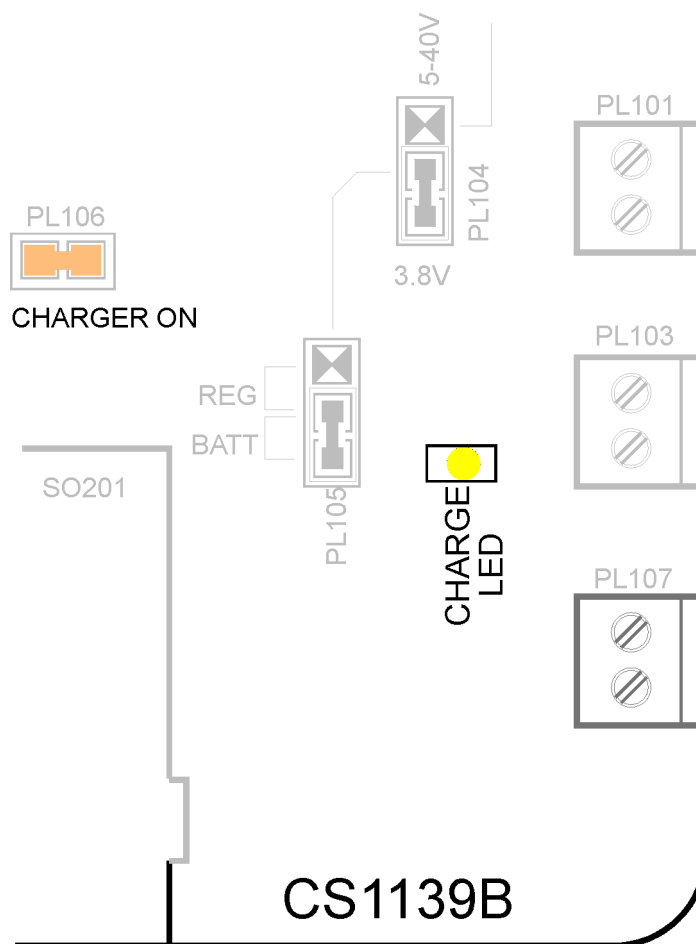

CHARGE LED position



11.2. Switches


You *turn On/Off* or *Reset* the EVK2 by 2 push buttons.

11.2.1. POWER ON Switch

Push ON/OFF button on **EVK Board** for at least 5 seconds, on the XX910 form factor products, push ON/OFF button on **Interface Board** for at least 5 seconds until the STATUS LED starts to slowly blink (*ON state*) or stops to blink (*OFF state*).

11.2.2. RESET Switch

Whenever the RESET SWITCH is pressed, you could reset the Telit module in use. When the device is reset, it stops any operation without doing any detach operation from the network where it is registered and it reboots after the release of the Reset Switch. This behavior is not a proper shut down because any GSM device is requested to issue a detach request at turning off. For this reason the Reset pressing action must not be used to normally reboot/shutting down the device, but only as an emergency exit in the rare case the device remains stuck waiting for some network response. The RESET is internally controlled at start-up to achieve always a proper power-on reset sequence, so there is no need to control this pin on start-up. It may only be used to reset a device already on that is not responding to any command.

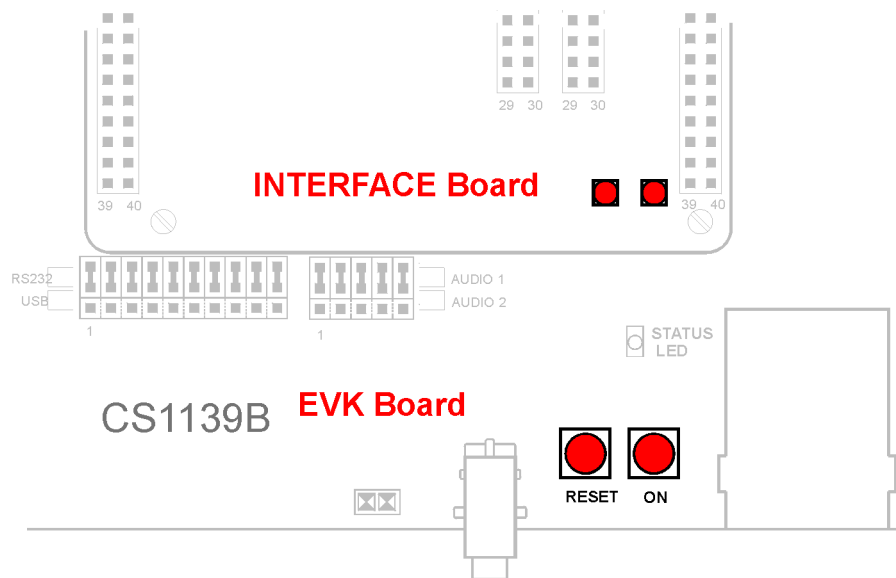

SWITCHES position



12. Connectors pinout

12.1. Motherboard to Module

The connections between CS1139B and every Telit module Interface Board are made through two *40 pin male* connectors. Theirs pin functions are listed in the following tables.

PL201-CS1139B			
Pin	Signal	Type	Function
1	NC ¹		
2	TX_Trace	Digital Output	to RS232 or USB level translators
3	RX_Trace	Digital Input	from RS232 or USB level translators
4	IIC_SDA_HW	Digital In/Out	from/to USB level translators
5	GND	DC voltage	Power
6	IIC_SCL_HW	Digital Input	from USB level translators
7	SSC0_CLK	Digital Output	to USB level translators
8	SSC0_MTSR	Digital In/Out	from/to USB level translators
9	SSC0_MRST	Digital In/Out	from/to USB level translators
10	NC		
11	GND	DC voltage	Power
12	GND	DC voltage	Power
13	GND	DC voltage	Power
14	GND	DC voltage	Power
15	C109/DCD	Digital Output	to RS232 or USB level translator
16	C104/RXD	Digital Output	to RS232 or USB level translator
17	C103/TXD	Digital Input	from RS232 or USB level translator
18	C108/DTR	Digital Input	from RS232 or USB level translator
19	GND	DC voltage	Power
20	C107/DSR	Digital Output	to RS232 or USB level translator
21	C105/RTS	Digital Input	from RS232 or USB level translator
22	C106/CTS	Digital Output	to RS232 or USB level translator
23	C125/RING	Digital Output	to RS232 or USB level translator
24	NC		
25	GND	DC voltage	Power
26	GND	DC voltage	Power
27	GND	DC voltage	Power
28	GND	DC voltage	Power
29	EAR_HF+	AC Out Voltage	Audio
30	EAR_MT-	AC Out Voltage	Audio

¹ DO NOT CONNECT



31	EAR_HF-	AC Out Voltage	Audio
32	EAR_MT+	AC Out Voltage	Audio
33	AXE	DC voltage	INT/EXT Switching
34	MIC_HF-	AC In Voltage	Audio
35	MIC_MT+	AC In Voltage	Audio
36	MIC_HF+	AC In Voltage	Audio
37	MIC_MT-	AC In Voltage	Audio
38	GND	DC voltage	Power
39	GND	DC voltage	Power
40	GND	DC voltage	Power

PL202-CS1139B			
Pin	Function	Type	NOTES
1	VBATT	DC voltage	Power
2	VBATT	DC voltage	Power
3	VBATT	DC voltage	Power
4	VBATT	DC voltage	Power
5	GND	DC voltage	Power
6	GND	DC voltage	Power
7	GND	DC voltage	Power
8	GND	DC voltage	Power
9	CHARGE	DC voltage	Power
10	CHARGE	DC voltage	Power
11	GND	DC voltage	Power
12	GND	DC voltage	Power
13	GND	DC voltage	Power
14	GND	DC voltage	Power
15	ON_OFF*	DC voltage	Pull up to VBATT
16	NC		
17	RESET*	DC voltage	Module Reset
18	NC		
19	NC		
20	NC		
21	STAT_LED	Open Collector	Status Indicator LED
22	NC		
23	NC		
24	NC		
25	GND	DC voltage	Power
26	GND	DC voltage	Power
27	GND	DC voltage	Power
28	GND	DC voltage	Power
29	NC		
30	NC		
31	SIMIO	3V Only	SIM Data I/O
32	SIMCLK	Digital Signal	SIM Clock



33	SIMRST	DC voltage	SIM Reset
34	SIMVCC	DC voltage	SIM Power
35	SIMIN	DC voltage	SIM inside detector
36	NC		
37	NC		
38	GND	DC voltage	Power
39	GND	DC voltage	Power
40	GND	DC voltage	Power



13. Module Interface Boards

13.1. Generality

You can use your **EVK2** with see **APPLICABILITY LIST** Telit modules fitted on its own *Interface Board*; all connections are made through *2x40 contacts* connectors.

It's possible to use these *Interface Boards* also in stand-alone mode, inserting the “*not mounted*” components (*related to RESET BUTTON, ON BUTTON, SIM HOLDER and STATUS LED functions*) plus the use of an external *level translator* circuit.

For more information refer to Telit Product Description.

13.2. Short Description

The interface boards convert the module connection technology (*board-to-board or BGA soldering*) into a PTH pin connector. The part of the basic interfaces is served by the motherboard, whereas specific interfaces according to the type of the module (*antenna, general purpose inputs/outputs GPIO, ADC/DAC, UART*) are available on the adapter board to connect it to the user applications, extension boards, measurements equipment or other tools.

13.3. Further Accessories for GPS version

When test the GPS products, besides the content of the single kits you need the accessories listed in below table.

SMA/MMCX cable adapter	Module under test	Interface Board	GPS Antenna
1ff1400073tlb		P/N	1rr0100071tlb
1	GM862-GPS	3990250670	1
-	GE863-GPS	3990250671	1
-	GE864-GPS	TBD	1
-	SE867-AGPS	TBD	1
-	HE910	3990250845	1



15.2. Content of the kits

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

15.2.1. GE863-PY/QUAD version

Description	Quantity
GE863 INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

15.2.2. GE863-GPS version

Description	Quantity
GE863-GPS INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

15.2.3. GE863-SIM version

Description	Quantity
GE863-SIM INTERFACE BOARD	1
2 PIN JUMPER FEMALE CONN	2

15.3. Interface connectors

The following connectors are available in any version:

GSM RF connector (*SMA Female*)

2 male connectors (4 pins each one: PL101, PL102) to select the Serial port configuration
 2 female connectors (40 pins each one: SO101, SO106) to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines)
 2 male connectors (30 pins each one: PL103, PL104), on which it is possible to connect external devices like user's application, Telit extension boards, measurements equipment or other tools


15.4. Additional components for GPS version

The following components are available only in GPS version (P/N 3990250671):

GPS RF connector (*SMA Female*)

USB B-type connector and its circuitry (*see schematic 30276SE11151A*)



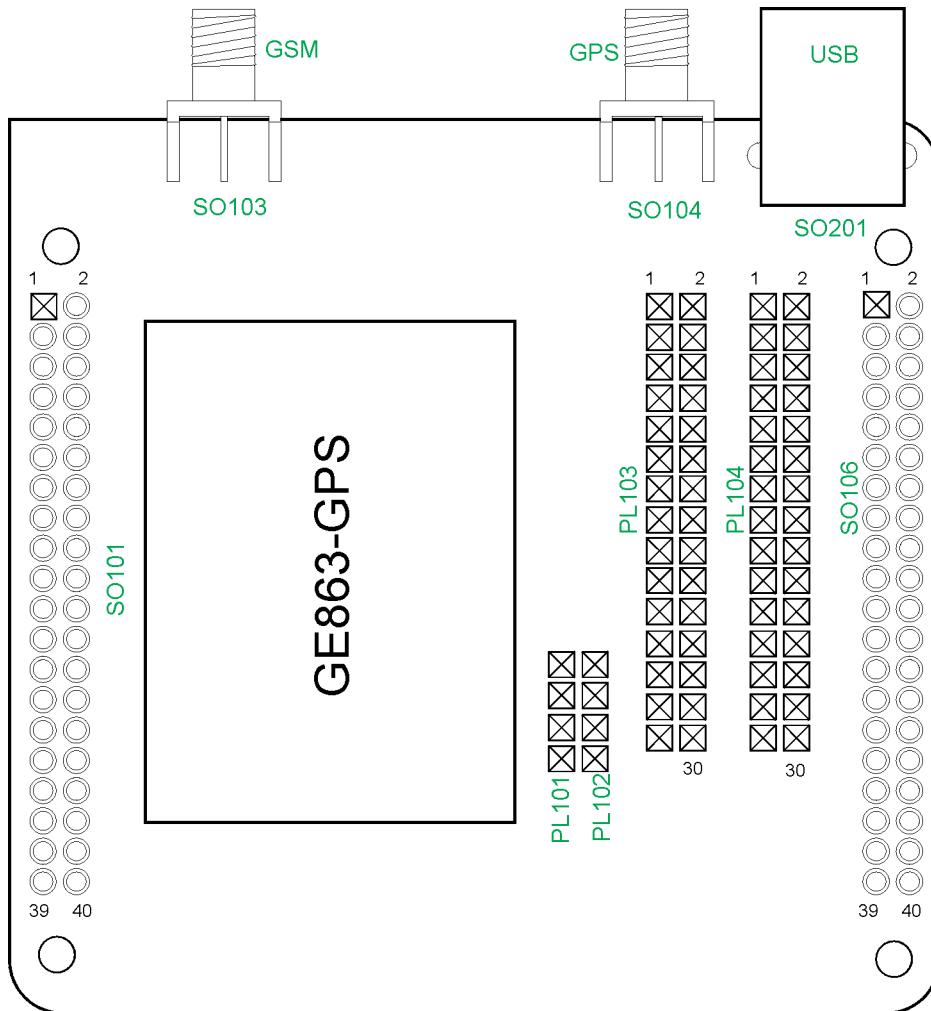

Connectors displacement on GE863-GPS


15.5. USB connector

The USB interface provides 2 serial ports that are related to the *NMEA* serial port and *SIRF-Binary* serial port of GE863-GPS module.

It is possible to select if the *SIRF Binary* serial port will be available on the USB connector or directly connected to the second serial port of the modem (**CONTROLLED MODE**).

For setting refer to paragraphs 16.7.1, 16.7.2.1, 16.7.2.2.



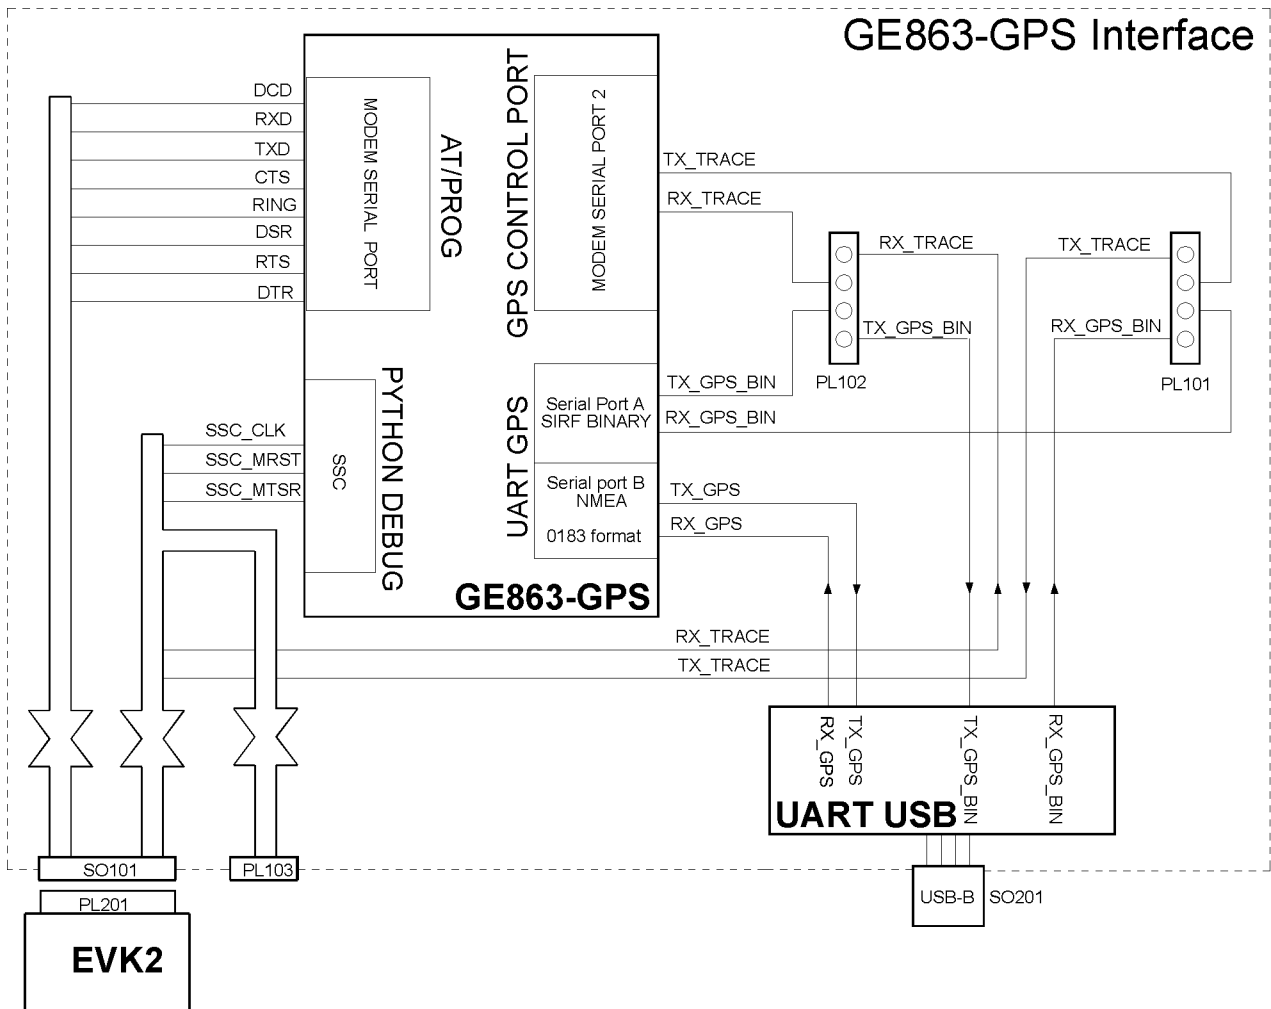

GE863-GPS Serial ports block diagram


15.6. Serial port configuration

To switch the serial lines you must short-circuit the PL101-PL102 connectors by 2 contacts jumpers.



15.6.1. GE863-PY/QUAD

The 2 contacts jumpers have to be fitted between **pin1&pin2** of PL101-PL102 connectors. This carries out the *Python Debug Port* on Trace Port of EVK2.

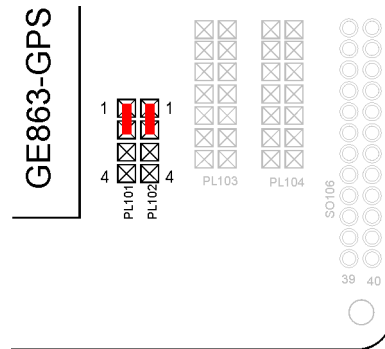


Jumpers setting for GE863-PY/QUAD

15.6.2. GE863 – GPS

The 2 contacts jumpers have to be fitted between **pin2&pin3** or **pin3&pin4** of PL101-PL102 connectors.

“CONTROLLED MODE”

This set the *SIRF Binary* to serial port of the modem. (*Typical application Design*)

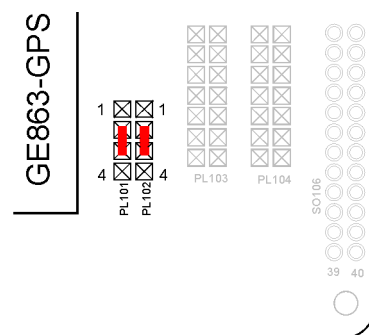

Jumpers setting for SIRF BINARY port connected to MODEM port 2




NOTE: All AT GPS commands are available in this configuration



“SEPARATED SERIAL PORT”

This set the *SIRF Binary* available on the USB connector.

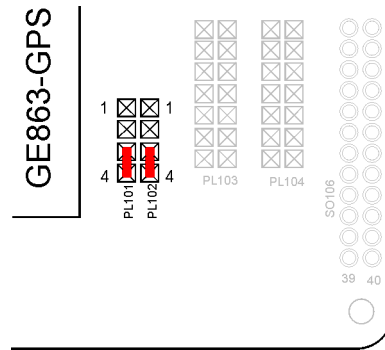

Jumpers setting for SIRF BINARY port available on USB connector



NOTE:

In this configuration some AT GPS commands are not available. Refer to AT Commands Reference User Guide.



15.7. ANTENNA connectors

15.7.1. GPS ANTENNA connector

An active GPS antenna should be connected to SO104; the GPS section provides the DC feeding.



WARNING:

Don't connect a *GSM* antenna on this connector

15.7.2. GSM ANTENNA connector

A GSM antenna should be connected to SO103.

15.7.3. RFU ANTENNA connector

On PCB there is the mounting possibility of a further RF connector (*SO105*): it is related to future implementation.



16. GE864 Interface

This board allows easily interfacing the GE864 modules with the EVK2 and testing their functionalities.

No settings are needed.



GE864 Interface Board

16.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the SIMCARD Holder;
- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.



16.2. Interface connectors

The following connectors are available:

2 male connectors (30 PTH pins each one: PL102, PL103), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;

2 female connectors (40 PTH pins each one: SO101, SO102), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

16.3. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE864 INTERFACE	1



17.2. Stand-alone setup

The interface can be used without the EVK2, in this case the following components have to be soldered on the board:
 the GSM-RESET button
 the GSM-ON button
 the STATUS led and its load resistor.

17.3. Interface connectors

The following connectors are available:

- 2 male connectors (30 PTH pins each: *PL101* and *PL102*), to connect external devices, user's applications, Telit extension boards, measurement equipment or other tools; *PL102* can also be used to select particular configurations between the GSM module's GPIOs and the GPS module
- 2 female connectors (40 PTH pins each one: *SO101* and *SO104*), to connect the interface to the EVK2 mother board (power supply lines, serial in/out lines, audio in/out lines)
- 1 male connector (3 PTH pins: *PL104*), to select an enable signal for the external GPS LNA
- 1 male connector (2 PTH pins: *PL105*), in order to allow inserting an ammeter in series with the supply, in order to monitor the module's current consumption
- 1 GSM RF connector (*SMA Female: SO105*)
- 1 GPS RF connector (*SMA Female: SO103*)
- 1 JTAG connector (*PL103, not mounted*)
- 1 male connector (12 PTH pins: *PL201*), to select one of the available configurations for the Serial and USB ports.

17.4. Contents of the kit


Please check out the contents of your interface kit. If any of the following items is missing, contact your Telit supplier.

Description	Quantity
GE864-GPS INTERFACE	1
JUMPERS	13



17.5. Power supply

The module (but not the whole interface) receives its power supply from PL105: this jumper must always be plugged in, except when a series measurement instrument is needed.

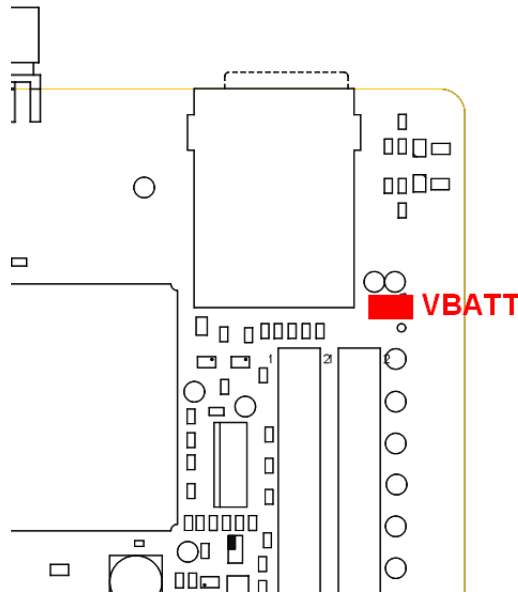

Jumper for VBATT.


17.6. GPS external LNA enable signal

The module contains an internal LNA for the GPS antenna that is enabled by default. The user can though decide to use an external LNA: this option is selected by means of a software command, which puts the internal LNA in a low gain mode and provides an additional signal to enable the external LNA. The interface can provide a bias for the external LNA, and the user can choose whether to enable it by this signal or to leave it always enabled, by means of a jumper on PL104, as shown in the picture below.



17.7.1. ASC1 to RS-232


This configuration connects the ASC1 UART to the Trace serial connector of the EVK2.

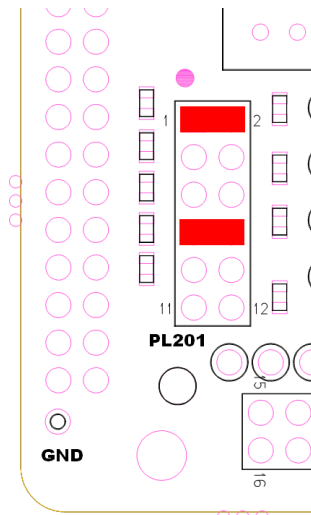

ASC1 to RS-232 (Trace) configuration

17.7.2. GPS to ASC1 (internal host controlling configuration)

This configuration directly connects the host GSM module to the GPS receiver, thus setting the GPS receiver in Controlled Mode.

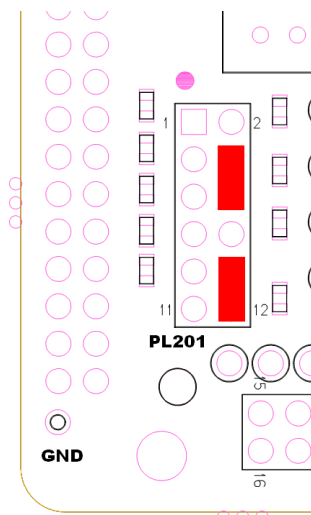

GPS to ASC1 configuration






WARNING:

Other than the ASCII UART, the user must also connect the host module's GPIOs to the corresponding signals of the GPS receiver (as explained in the next paragraphs).

17.7.3. GPS to RS-232 (external host controlling configuration)

This configuration allows sending the GPS output to the Trace serial connector of the EVK2.

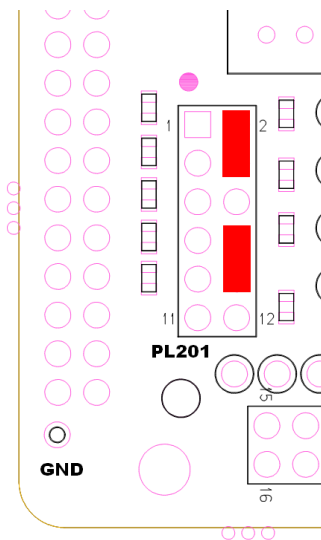

GPS to RS-232 (Trace) configuration

17.7.4. GPS to USB

The NMEA sentences can be redirected to EVK2's USB port by setting PL201 as explained in the Figure 37, i.e. connecting the NMEA line with the RS-232, and at the same time setting the EVK2 serial line on USB Mode, as shown in Paragraph 7.1 of this document.



17.8. GPIO settings

The interface allows choosing among different options for driving the GPS control signals:
Using the GPIOs of the GSM module

Using an external host

Manually controlling the signals by plugging a jumper.

The last option is not available for every signal and every configuration; please refer to the schematics of the interface for more details.

The choice among the options can be made by PL102, as detailed below.


17.8.1. Internal host controlling configuration

The following settings on PL101 and PL102 allow selecting the internal host configuration.
Two different cases have to be considered:

cs1439b-A


cs1439b and cs1439b-B

Refer to the beginning of this chapter for the correspondence between board part number and mounting options.

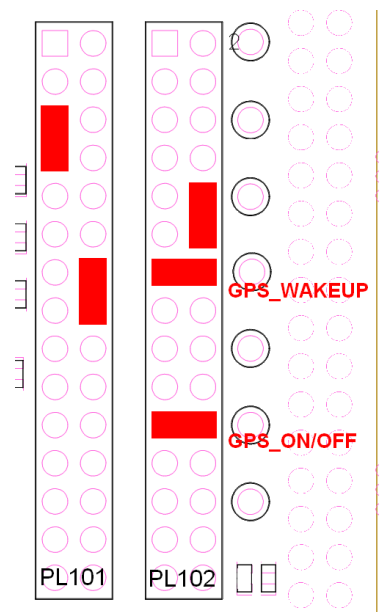

Settings for PL101 and PL102: internal host,cs1439b-A



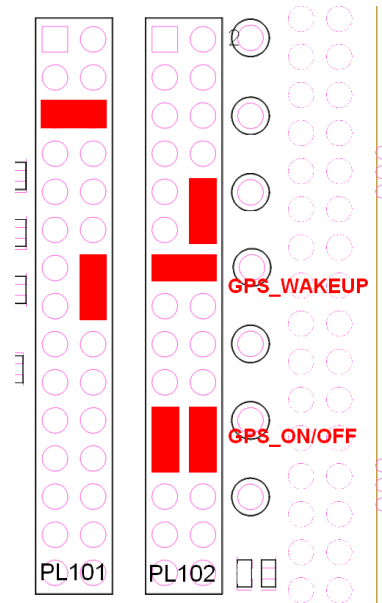

Settings for PL101 and PL102: internal host, **cs1439b** and **cs1439b-B**

Note that jumper settings are detailed in the pictures above.
The signal connected to **pin10** of PL102 is no longer available, and it is recommended to tie it to ground by plugging a jumper between **pin10 & pin12** of PL102.

17.8.2. External host controlling configuration

When an external host is used to drive the GPS module, two different cases have to be considered:

cs1439b-A


cs1439b and **cs1439b-B**

Refer to the beginning of this chapter for the correspondence between board part number and mounting options.


Two jumpers must be plugged, between **pin14 & pin16** of PL101 and **pin10 & pin12** of PL102. Additionally, the host GPIOs must be connected to PL102 as shown in the pictures below.

Note that in this configuration the signal on **pin10** of PL102 is no longer available and it must be connected to ground by plugging a jumper on **pin10 & pin12** of PL102.



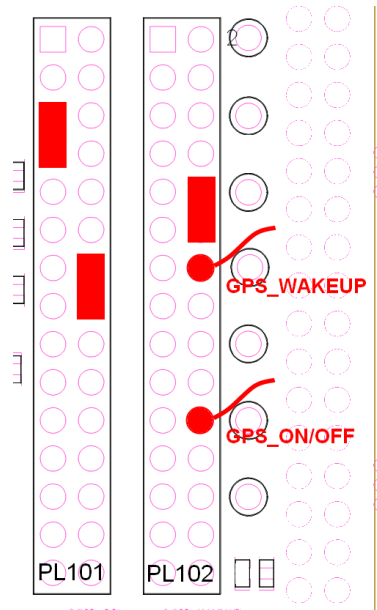

Settings for PL101 and PL102: external host, **cs1439b-A**.

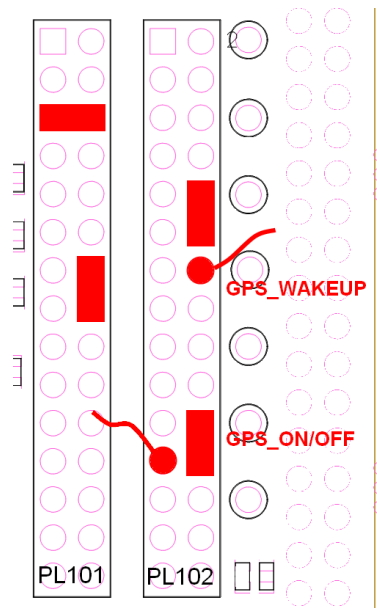

Settings for PL101 and PL102: external host, **cs1439b and cs1439b-B**.



17.9. Antenna connectors

17.9.1. GSM antenna connector

A GSM antenna must be connected to SO105.

17.9.2. GPS antenna connector

A GPS antenna must be connected to SO103.




WARNING:

Don't connect a *GSM* antenna on this connector



18. GE865 – SE867 AGPS Interface

This board allows testing the functionalities and performance of the GE865 and SE867 modules interconnected according to Telit guidelines.

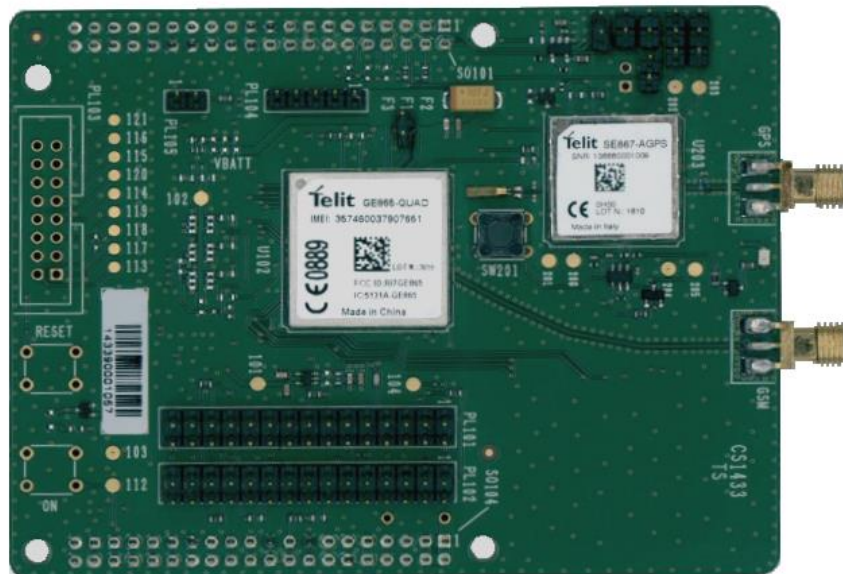

GE865/SE867-AGPS Interface Board

18.1. Stand-alone setup

The interface can be used without the EVK2, in this case the following components have to be soldered on the board:

- the RESET button
- the ON button
- the STATUS led and its load resistor.




18.4. Serial connections

By means of proper jumper connections on PL201, PL202, PL206, and PL207, three different configurations for serial outputs can be selected.

18.4.1. GSM to GPS (GSM controlling configuration)

This configuration is achieved by plugging a female jumper connector on **pin1 & pin2** of both PL201 and PL206. It allows to connect the GE865 UART with SE867-AGPS UART, thereby putting the board in the so-called controlled mode. No connection with the EVK2 RS-232 Trace is present.

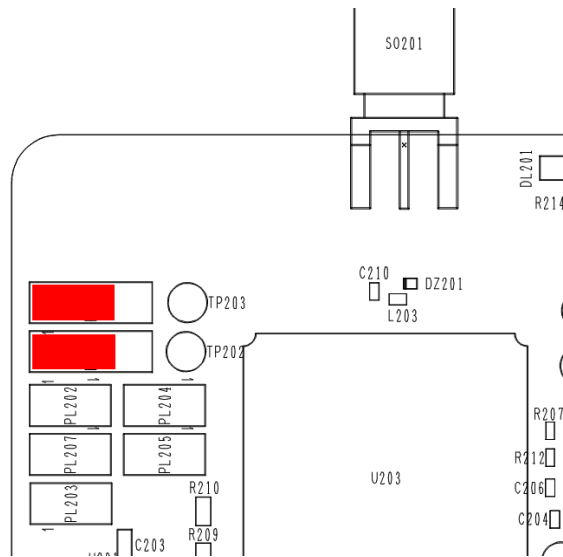


Jumpers in controlled mode configuration.



18.4.3. GPS to Trace(external host controlling configuration)

This configuration is achieved by plugging two female jumper connectors on PL202 and PL207. It allows redirecting the SE867 UART to the EVK2 RS-232 Trace. No connection with the GE865 UART is present.

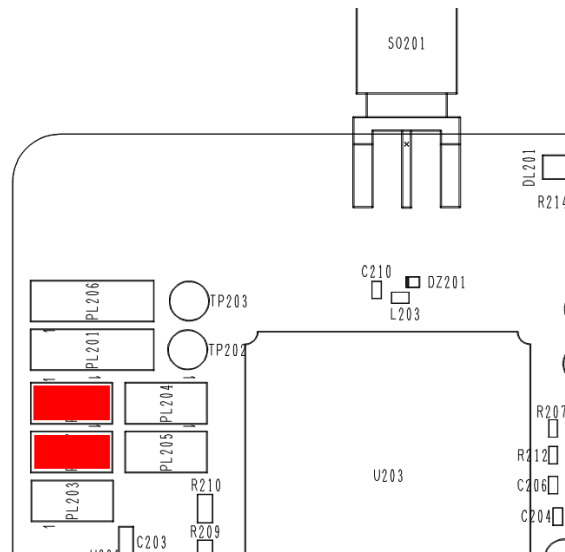

Jumpers in GPS to Trace configuration.

18.5. Antenna connectors

18.5.1. GSM antenna connector

A GSM antenna must be connected to SO103.

18.5.2. GPS antenna connector

A GPS antenna must be connected to SO201.




WARNING:

Don't connect a *GSM* antenna on this connector



19. GE865 – JF2 Interface

This board allows testing the functionalities and performance of the GE865 and JF2 modules interconnected according to Telit guidelines.

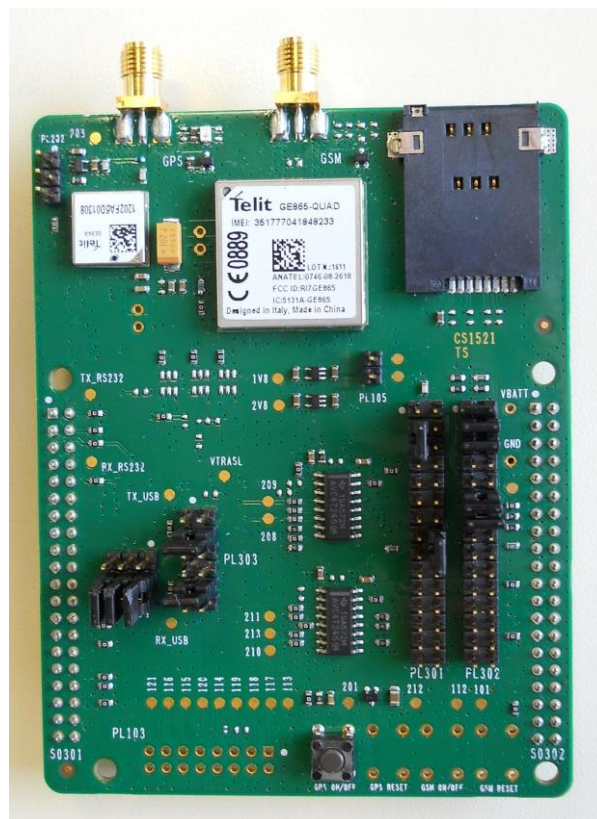

GE865/JF2 Interface Board.

19.1. Stand-alone setup

The interface can be used without EVK2 and in this case the following components have to be soldered to the board:

- RESET button
- GSM ON/OFF button
- GSM STATUS led and its load resistor



19.2. Interface connectors

The following connectors are available:

- 2 male connectors (30 PTH pins each: PL301 and PL302), to connect external devices, user's applications, Telit extension boards, measurement equipment or other tools; PL301 can also be used to select particular configurations between the GSM module's GPIOs and the GPS module
- 2 female connectors (40 PTH pins each one: SO301 and SO302), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines)
- 1 GSM RF connector (SMA Female: SO105)
- 1 GPS RF connector (SMA Female: SO201)
- 1 JTAG connector (PL103, not mounted)
- 1 male connector (3 PTH pins: PL202), to select an enable signal for the external GPS LNA,
- 1 male connector (12 PTH pins: PL303), to select one of the available configurations for the Serial and USB ports.
- 1 male connector (2 PTH pins: PL105), that can be used to insert an ammeter in series with the supply, in order to monitor the module's current consumption,
- 1 male connector (9 PTH pins: PL304), in order to set the data format between USB or SSC0 lines to send to EVK2.

19.3. Contents of the kit


Please check out the contents of your interface kit. If any of the following items is missing, contact your Telit supplier.

Description	Quantity
GE865/JF2 INTERFACE	1
JUMPERS	15

19.4. Power supply

The GE865 module (but not the whole interface) receives its power supply from PL105: this jumper must always be plugged on except when a series measurement instrument is needed.



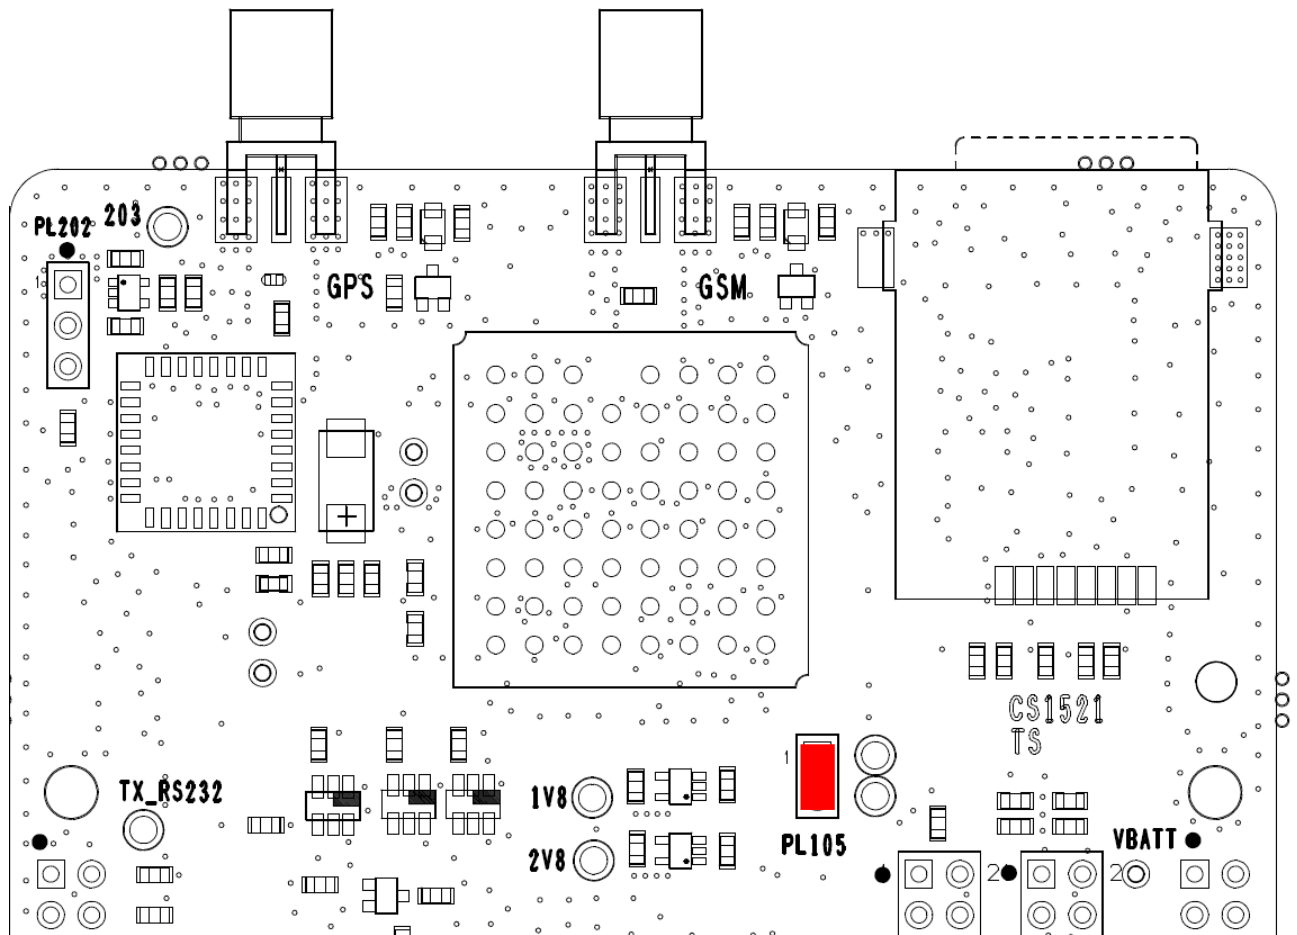

Jumper for VBATT.

19.5. GPS external LNA enable signal


The module contains an internal LNA for the GPS antenna.

The user can though decide to use an external LNA: this option is selected by means of a software command, which puts the internal LNA in a low gain mode and provides an additional signal to enable the external LNA. The interface can provide a bias for the external LNA, and the user can choose whether to enable it by this signal or to leave it always enabled, by means of a jumper on PL202, as shown in the picture below.



19.6. Serial port configuration

By means of proper jumper connections on PL303, it is possible to choose different configurations for serial or USB outputs. These configurations are mutually exclusive.

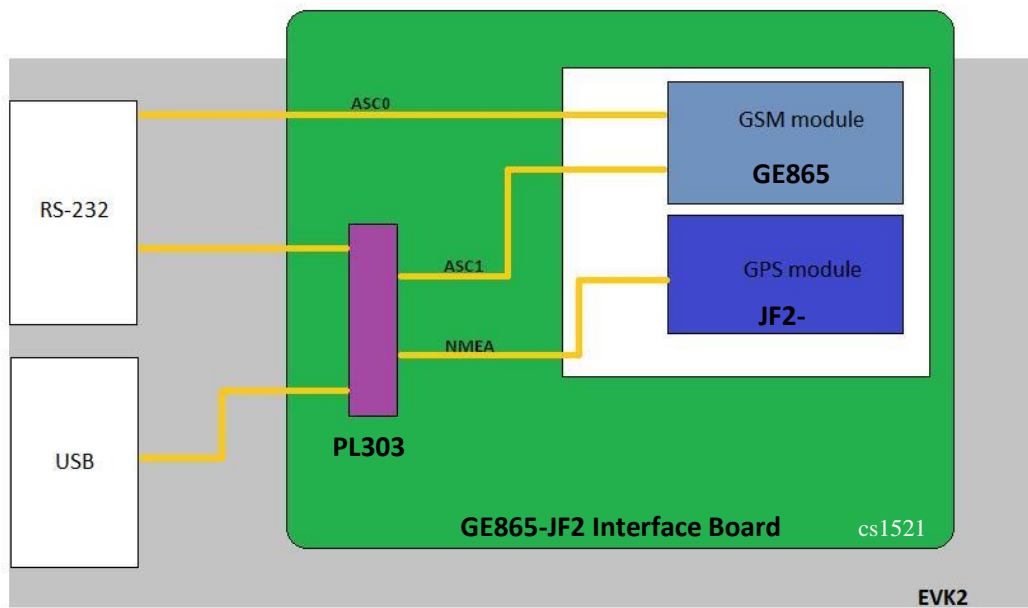


GE865-JF2 Interface Board serial connections



19.7. GSM to Trace


This configuration connects the GSM to the RS232 serial connector of the EVK2.

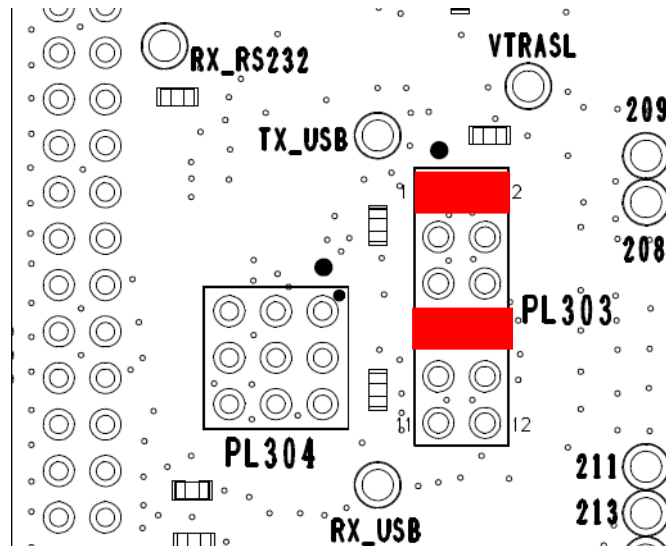

GSM to RS-232 (Trace) configuration

19.8. GPS to Trace

This configuration allows sending the GPS output to the Trace serial connector of EVK2 by means of transceivers.

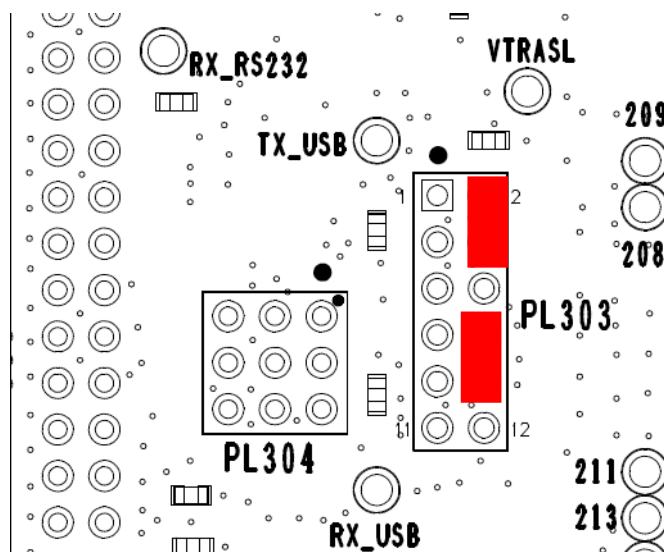


GPS to RS232 (Trace)



19.9. GSM to USB


This configuration connects the GSM to the USB connector of the EVK2.

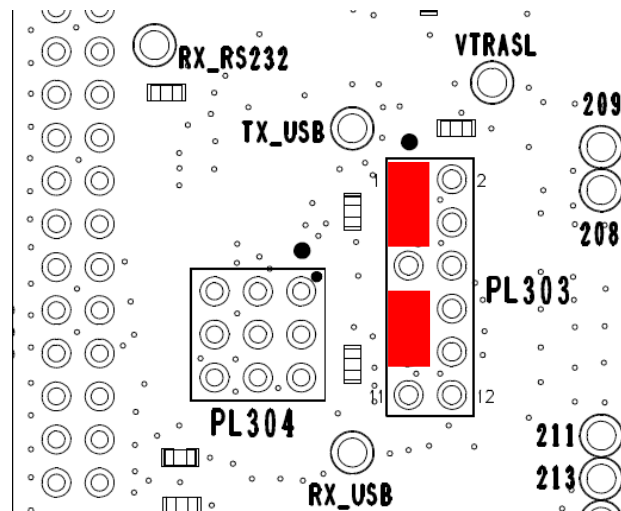

GSM to USB

19.10. GPS to USB

The NMEA sentences can be redirected to the EVK2's USB port by setting the PL303 as explained in the Figure 53, i.e. connecting the NMEA line with the RS-232, and at the same time setting the EVK2 serial line on USB mode, as showed in Paragraph 7.1 of this document.

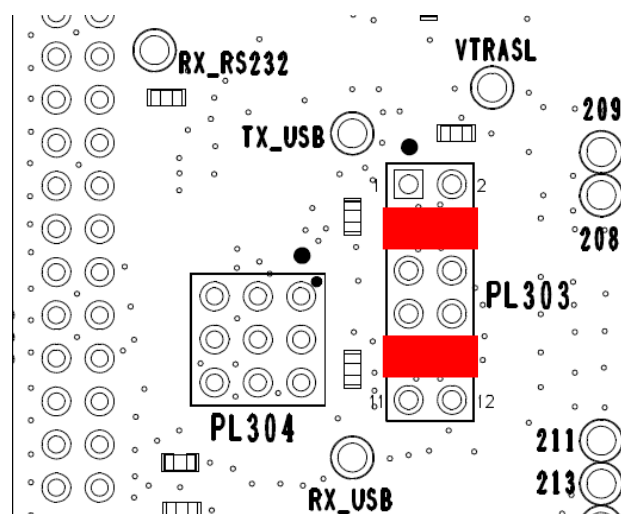


GPS to USB



19.11. GPS to GSM (internal host controlling configuration)

This configuration directly connects the host GSM module to the GPS receiver, thus setting the GPS receiver in Controlled Mode.

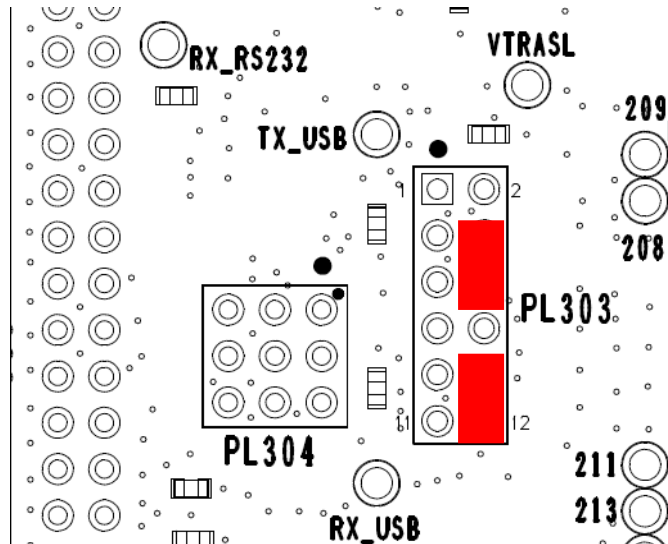

GPS to GSM configuration

19.12. GPIO settings

The interface allows choosing among different options for driving the GPS control signals:

- Using the GPIOs of the GSM module
- Using an external host
- Manually controlling the signals by plugging jumpers.


The last option is not available for every signal and every configuration; please refer to the schematics of the interface for more details.

The choice among the options can be made by PL301 and PL302, as detailed below.



19.12.1. Internal host controlling configuration

The following settings on PL301 and PL302 allow selecting the internal host configuration.

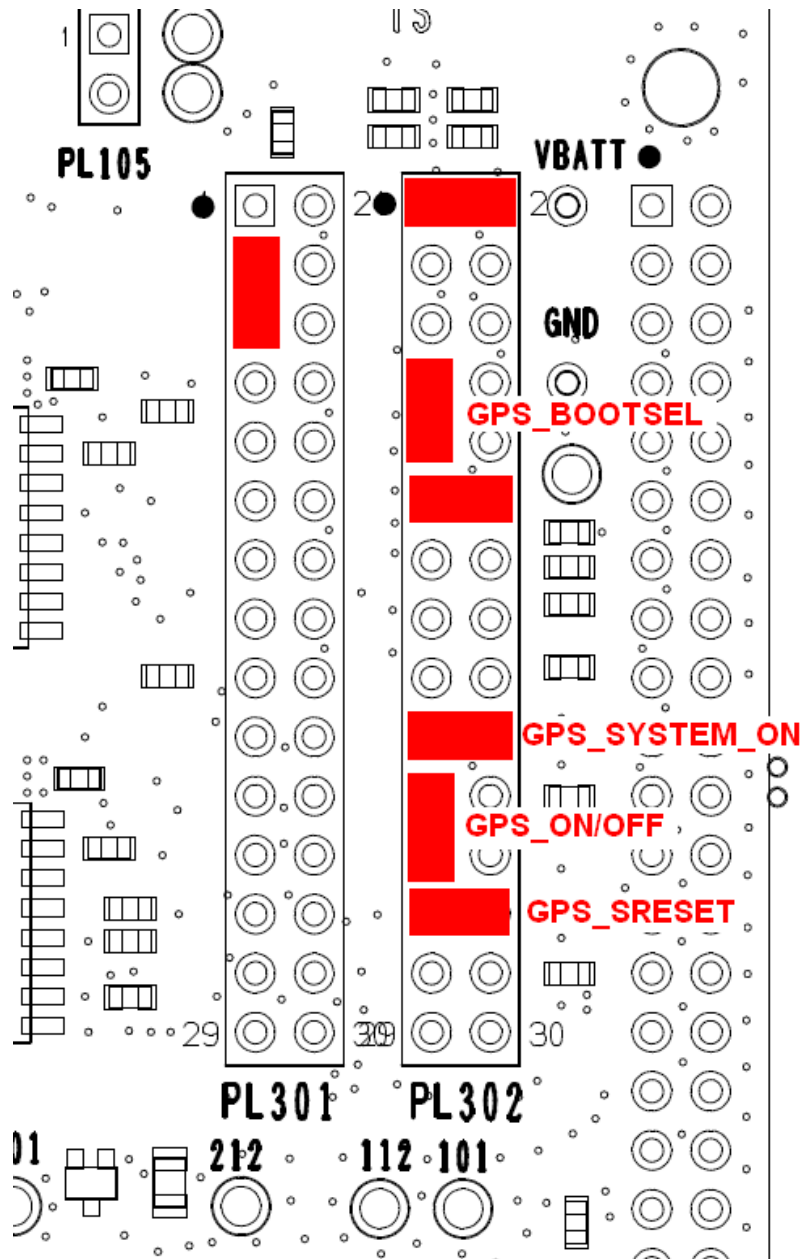


Settings for PL301 and PL302: internal host controlling



19.12.2. External host controlling configuration

The following settings on PL301 and PL302 allow selecting the external host configuration.

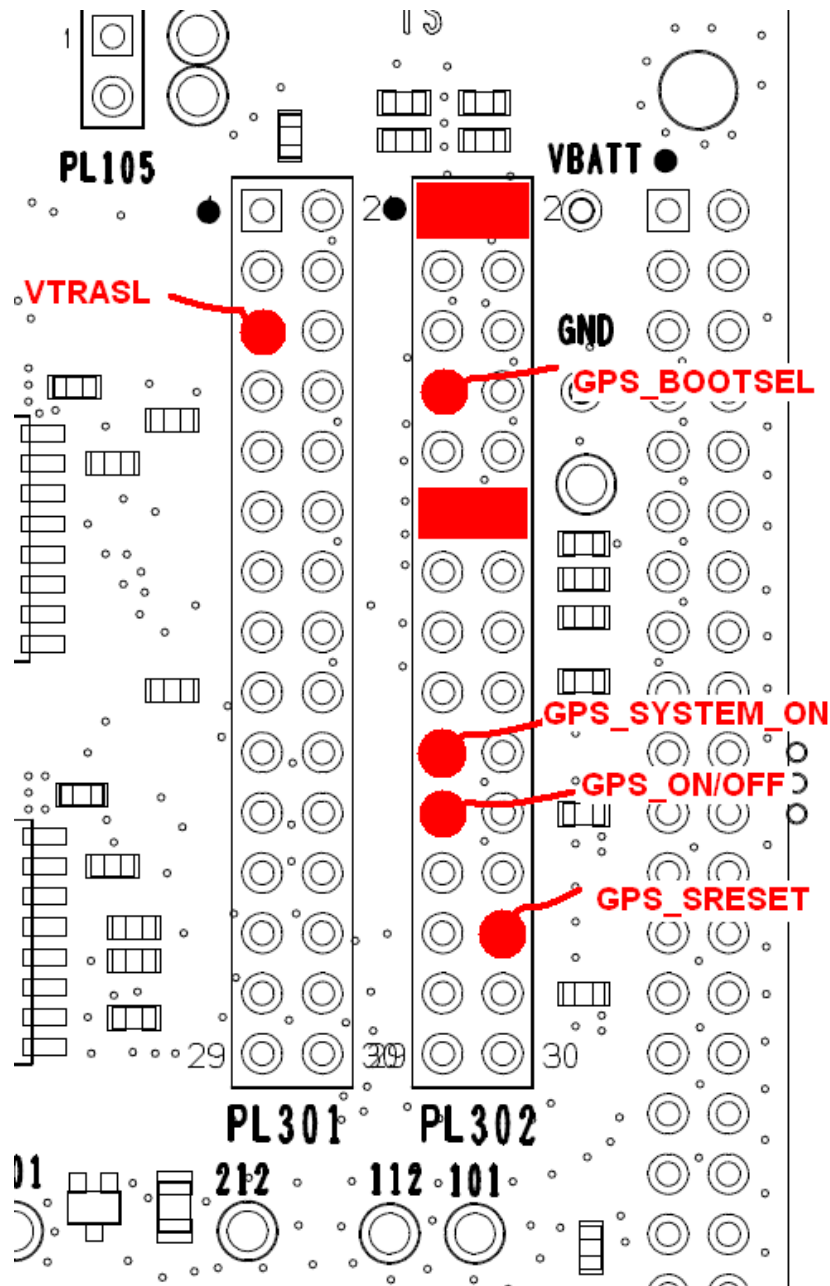

Settings for PL301 and PL302: external host.



19.13. GPS serial interface setting

GPS module has the capability to operate in serial UART mode, SPI mode or I2C mode depending upon how the JF2 GPIO6 and GPIO7 pins are strapped at power up. In the table below is shown the configuration set in PL302 to select the type of serial interface:

MODE	GPS GPIO n.6	GPS GPIO n.7
UART	1-2 pins shorted in PL302	Float
I2C	Float	15-16 pins shorted in PL302
SPI	Float	Float

If you connect JF2 module with GE865 module you must use UART configuration. Using an external host, if you want use I2C configuration, you need to plugging on PL302 two jumpers in positions 3-4 and 5-6 in order to connect pull-ups in SDA and SCL lines.

19.14. MEMS Sensor/EEPROM Interface

The DR I2C port of JF2 is used for connecting to MEMS sensors, such as accelerometer or magnetometer.

	GPS GPIO n.4	GPS GPIO n.0	GPS GPIO n.1
With sensor	Float	3-4 pins shorted in PL302	5-6 pins shorted in PL302
Without sensor	13-14 pins shorted in PL302	Float	Float

19.15. GPS power-on management

JF2 module power on/off can be controlled by an external host signal or it is possible to have the automatic module transition to the full power state by tying the SYSTEM-ON output to the ON-OFF input. The table below shows how to set these two options:

	Power Mode
10-12 and 19-21 pins shorted in PL302	Full power mode
11-12 pins shorted in PL302	ON/OFF controlled by an external host signal



20. GL865 – SL869/JN3 Interface

This board allows testing the functionalities and performance of the GL865-V3 and SL869/JN3 modules interconnected according to Telit guidelines.



GL865 – SL869/JN3 Interface Board.



20.1. Stand-alone setup

The interface can be used without EVK2 and in this case the following components have to be soldered to the board:

- GSM RESET button
- GSM ON/OFF button
- GPS STATUS led and its load resistor
- GSM STATUS led and its load resistor (both NO MOUNT)

20.2. Interface connectors

The following connectors are available:

- 2 male connectors (30 PTH pins each: PL300 and PL301), to connect external devices, user's applications, Telit extension boards, measurement equipment or other tools
- 2 female connectors (40 PTH pins each one: SO300 and SO301), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines)
- 1 GSM RF connector (SMA Female: SO101)
- 1 GPS RF connector (SMA Female: SO201)
- 1 JTAG connector (PL100, not mounted)
- 1 male connector (3 PTH pins: PL200), to select an enable signal for the external GPS LNA,
- 1 male connector (12 PTH pins: PL302), to select one of the available configurations for the Serial and USB ports.
- 2 male connector (2 PTH pins: PL101, PL201), that can be used to insert an ammeter in series with the supply, in order to monitor respectively the current consumption of GL865 and SL869/JN3 modules.

20.3. Contents of the kit


Please check out the contents of your interface kit. If any of the following items is missing, contact your Telit supplier.

Description	Quantity
GL865 - SL869/JN3 INTERFACE	1
JUMPERS	10



20.1. Power supply

The GL865 module (but not the whole interface) receives its power supply from PL101: this jumper must always be plugged on except when a series measurement instrument is needed. The SL869/JN3 module receives its power supply from PL201: this jumper must always be plugged on except when a series measurement instrument is needed.

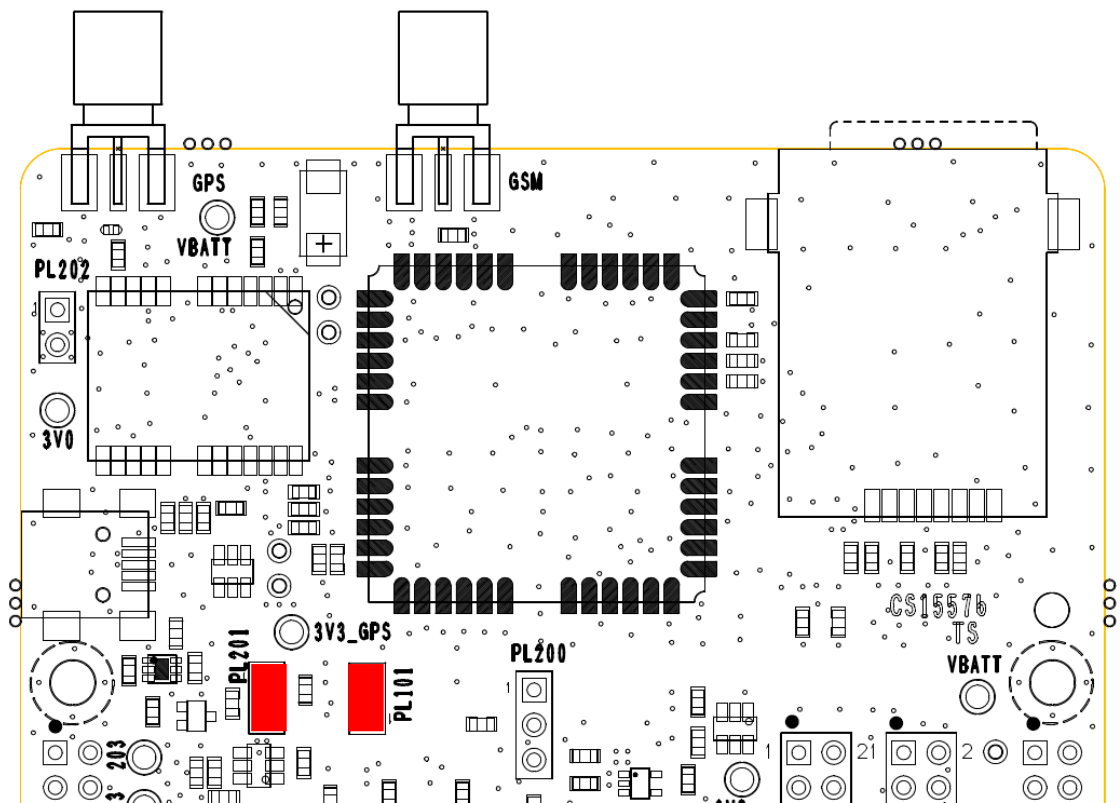


Jumper for VBATT.



20.2. GPS external LNA enable signal

The module contains an internal LNA for the GPS antenna.

The user can though decide to use an external LNA: this option is selected by means of a software command, which puts the internal LNA in a low gain mode and provides an additional signal to enable the external LNA. The interface can provide a bias for the external LNA by means of a jumper on PL202, and the user can choose whether to enable it by this signal or to leave it always enabled, by means of a jumper on PL200, as shown in the picture below.

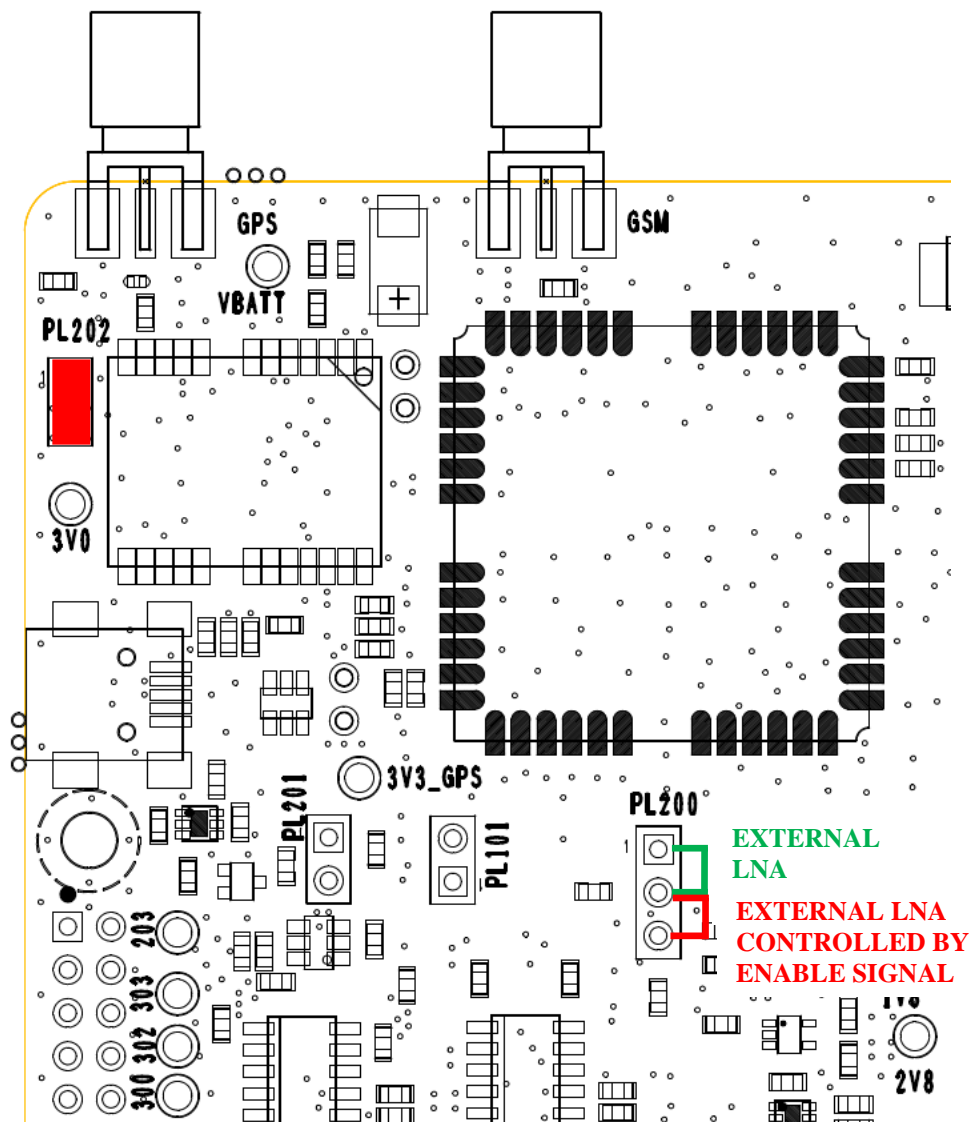


Jumper selection on PL200, PL202 for antenna bias.



20.3. Serial port configuration

By means of proper jumper connections on PL302, it is possible to choose different configurations for serial or USB outputs. These configurations are mutually exclusive.

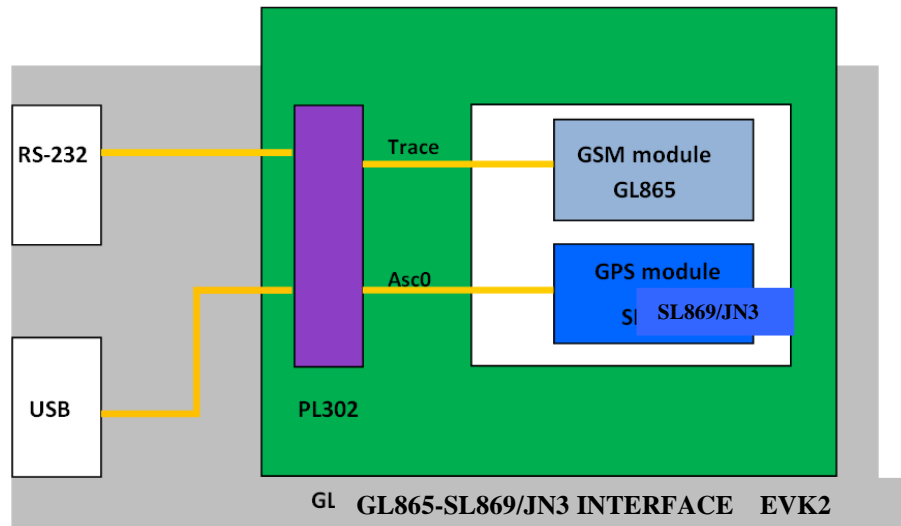


GL865 - SL869/JN3 Interface Board serial connections



20.4. GSM to Trace


This configuration connects the GSM to the RS232 serial connector of the EVK2.

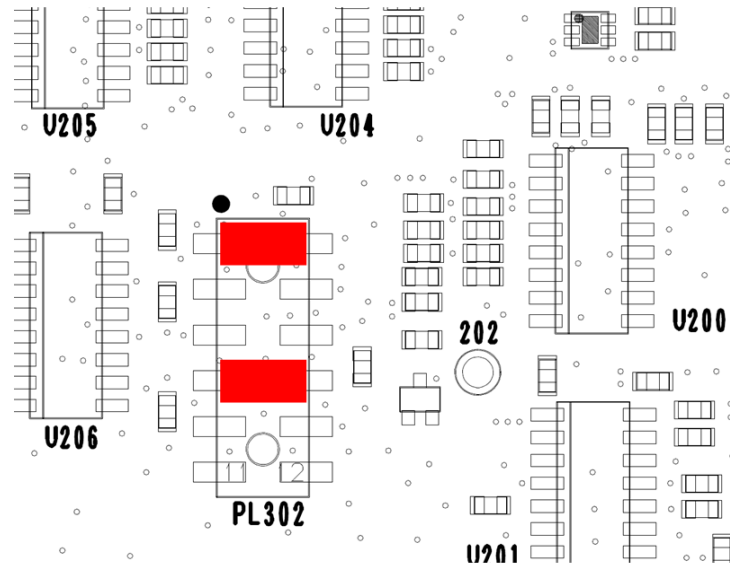

GSM to RS-232 (Trace) configuration

20.5. GPS to Trace

This configuration allows sending the GPS output to the Trace serial connector of EVK2 by means of transceivers

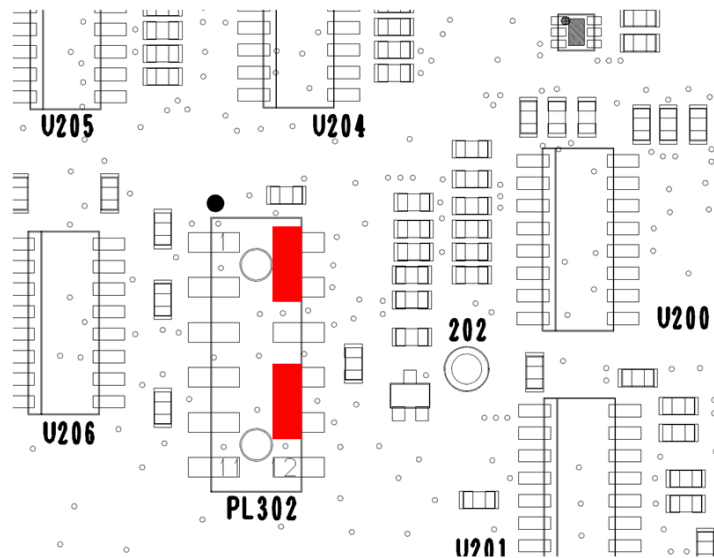


GPS to RS-232 (Trace) configuration



20.6. GSM to USB


This configuration connects the GSM to the USB connector of the EVK2.

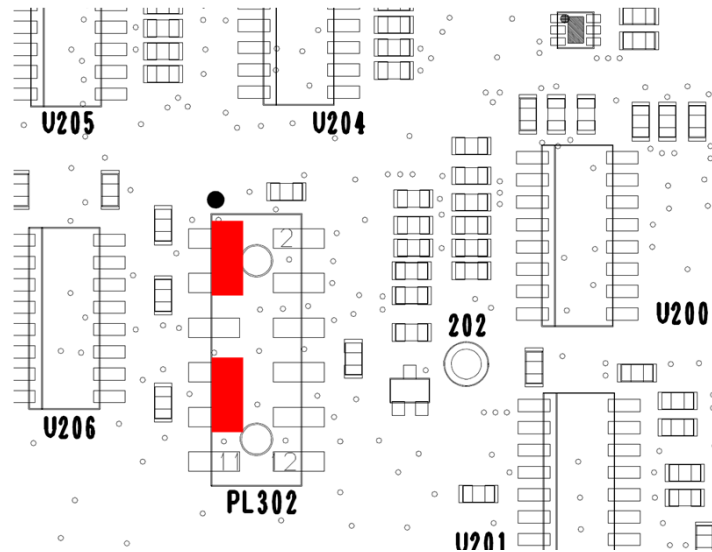

GSM to USB configuration

20.7. GPS to USB

This configuration connects the GPS to the USB connector of the EVK2.

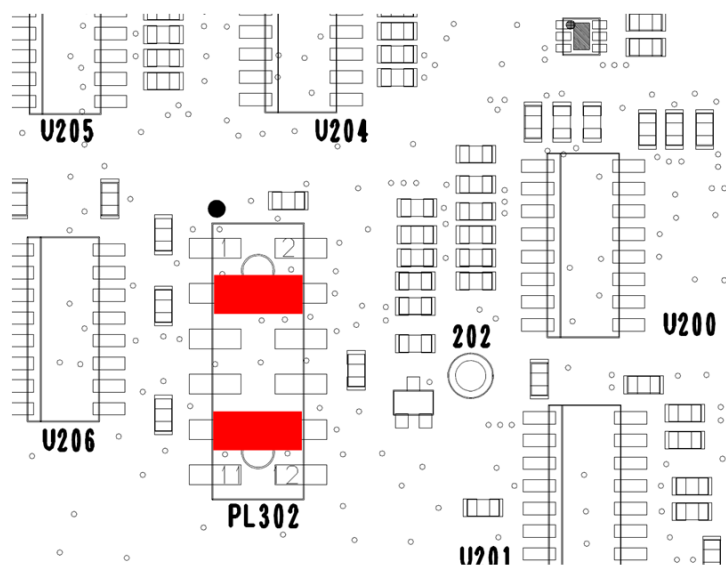


GPS to USB configuration



20.8. GPS to GSM (internal host controlling configuration)

This configuration directly connects the host GSM module to the GPS receiver, thus setting the GPS receiver in Controlled Mode.

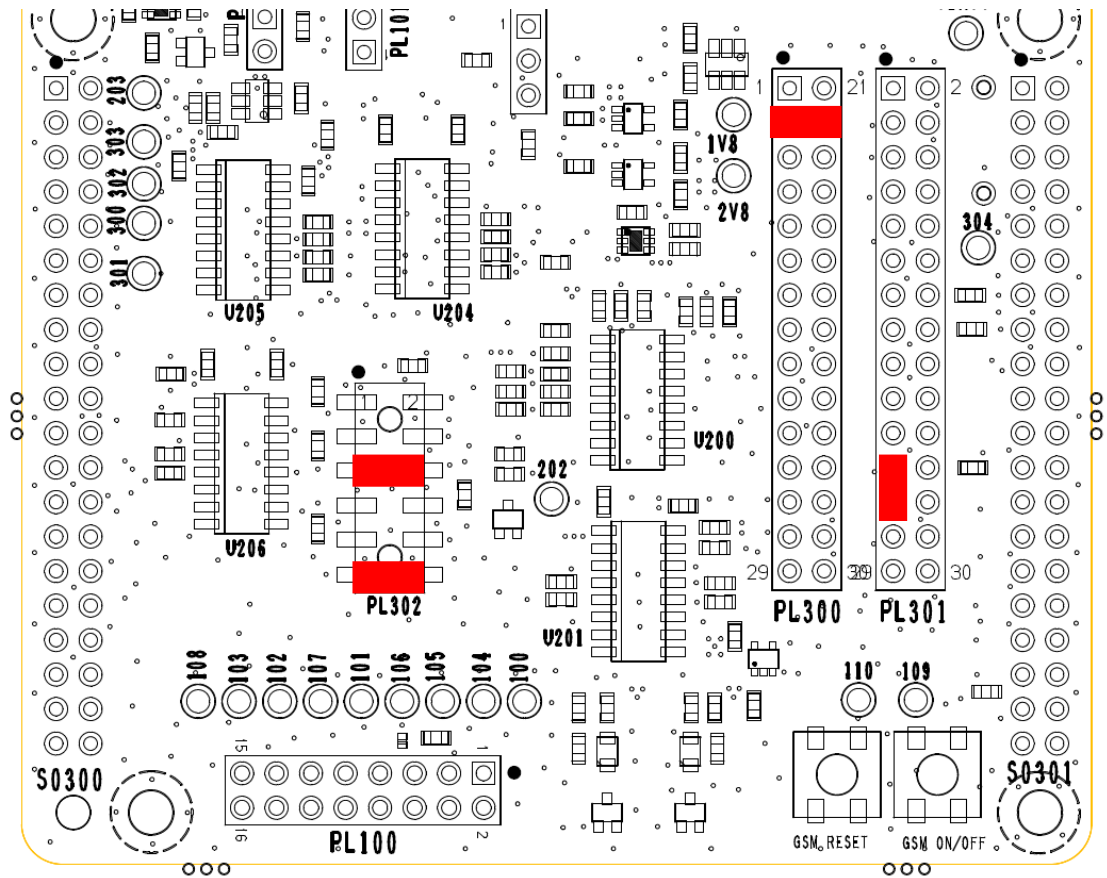

GPS to GSM configuration



20.9. GPIO settings

The interface allows choosing among different options for driving the GPS control signals:


- Using the GPIOs of the GSM module
- Using an external host
- Manually controlling the signals by plugging jumpers.

The last option is not available for every signal and every configuration; please refer to the schematics of the interface for more details.

The choice among the options can be made by PL300, PL301 and as detailed below.

20.9.1. Internal host controlling configuration

The following settings on PL300 and PL301 allow selecting the internal host configuration.

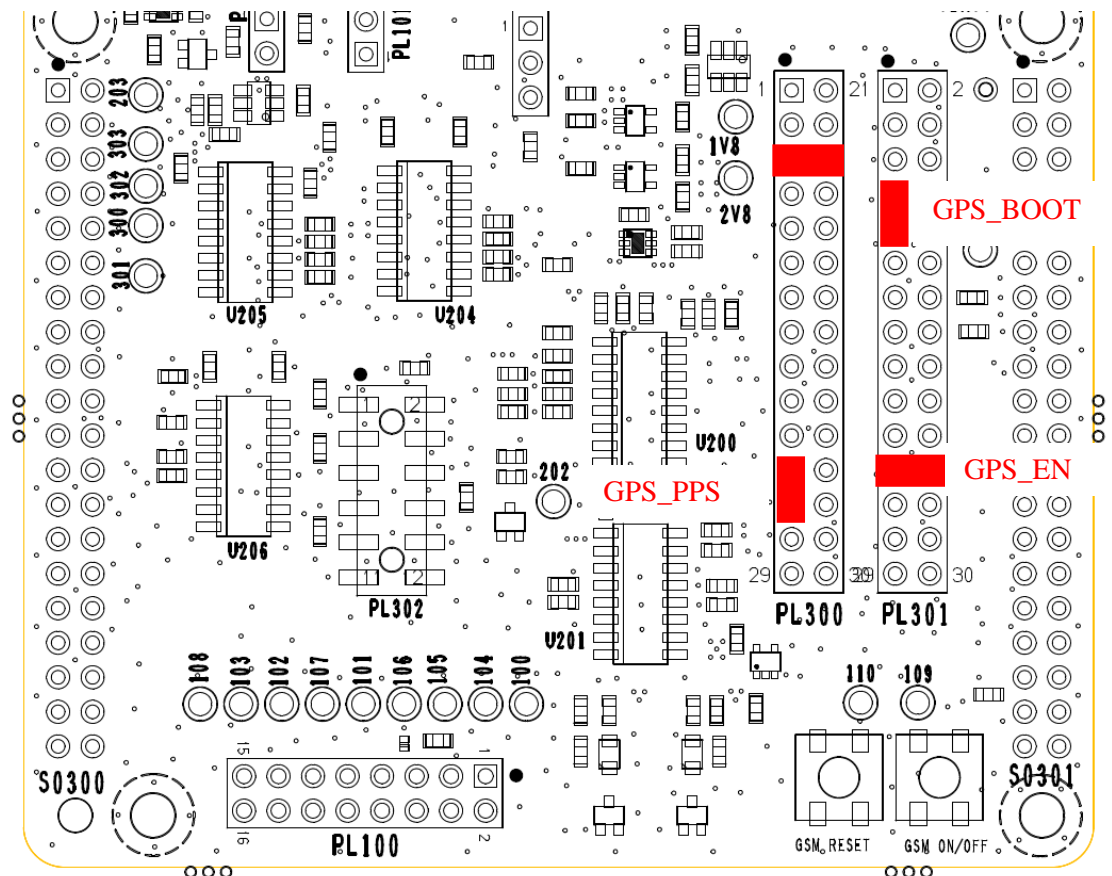


Settings for PL300 and PL301: internal host controlling



20.9.2. External host controlling configuration

The following settings on PL300 and PL301 allow selecting the external host configuration.

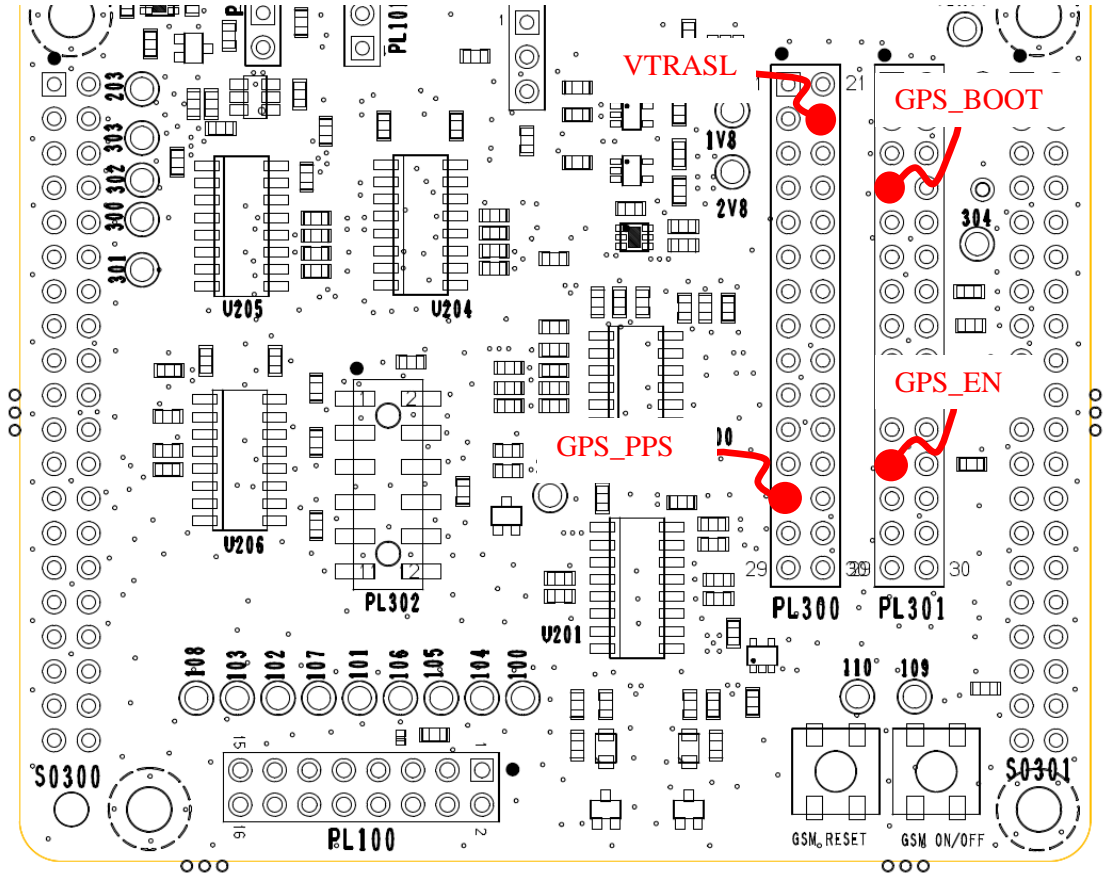

Settings for PL300 and PL301: external host.



20.10. Antenna connectors

20.10.1. GSM antenna connector

A GSM antenna must be connected to SO101.

20.10.2. GPS antenna connector

A GPS antenna must be connected to SO201



22.2. Interface connectors

The following connectors are available:

2 male connectors (30 PTH pins each one: PL101, PL102), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

22.3. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GC864-C2 INTERFACE	1
ASSEMBLED CABLE L-250 RG174 TERMINALS SMA F & MMCX 90 M	1



23. GE865 Interface

This board allows easily interfacing the GE865 modules with the EVK2 and testing their functionalities;
No settings are needed.



GE864 Interface Board

23.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.



23.2. Interface connectors

The following connectors are available:

2 male connectors (30 PTH pins each one: PL102, PL103), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;

2 female connectors (40 PTH pins each one: SO101, SO102), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

23.3. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE865 INTERFACE	1



24. GL865 Interface

This board allows easily interfacing the GL865 modules with the EVK2 and testing their functionalities;
No settings are needed.



GL865 Interface Board

24.1. Stand-alone setup

If you need to use the interface out of EVK2 (*Stand-alone* setup) you have to mount the following missing components:

- the RESET Button
- the ON Button;
- the STATUS LED and its load resistance.



26. HE910 family Interface

This board allows easily interfacing the HE910 modules with the EVK2 and testing their functionalities;
No settings are needed.



HE910 Interface Board



26.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

26.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the HE910 USB 2.0 port.

3 RF connectors for GSM/UMTS Antenna (SO103), Receiver Diversity Antenna (SO105) and GPS Antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

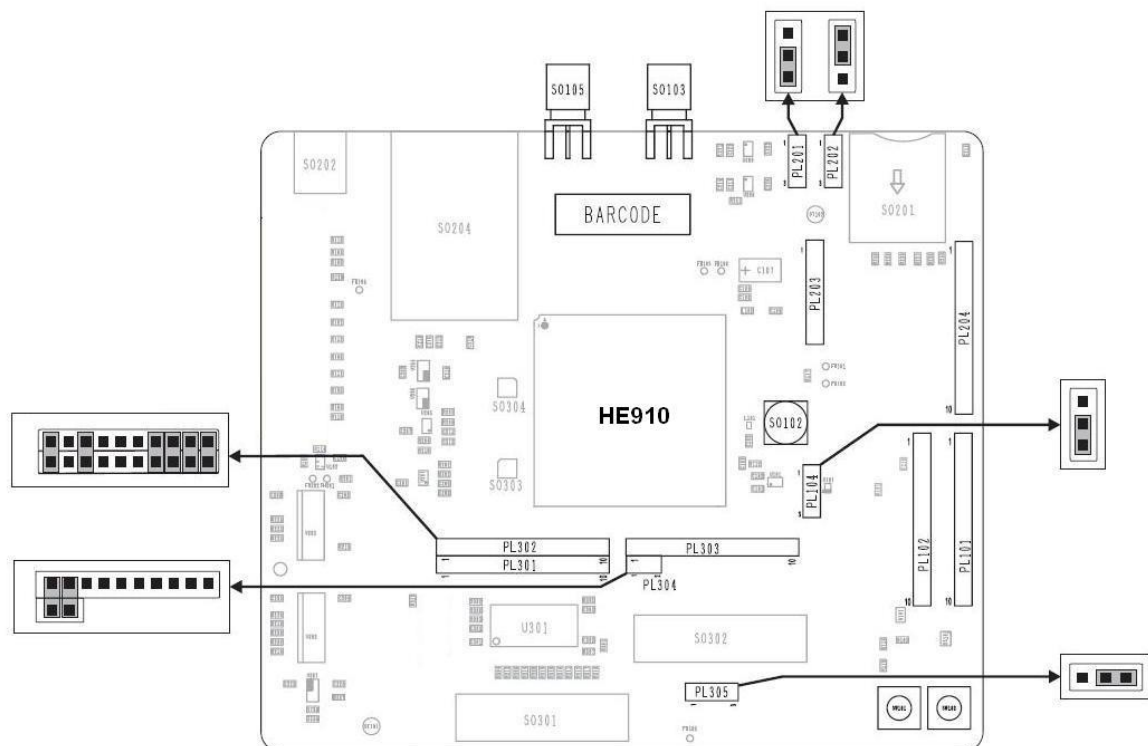

26.3. Antenna connectors

26.3.1. GSM/UMTS Antenna connector

A GSM/UMTS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

26.3.2. Receiver Diversity Antenna connector


A GSM/UMTS compatible antenna (Refer to the product's HW user guide) antenna could be connected to SO105.

26.3.3. GPS antenna connector


A GPS antenna could be connected to SO102. Please refer to the product's HW user guide for the proper type.

The GPS Antenna (if an active type) could be supplied with a dedicated LDO (3V DC) that could be set in the following way using the Jumpers on PL104.

LDO Enabled by the HE910 Module.

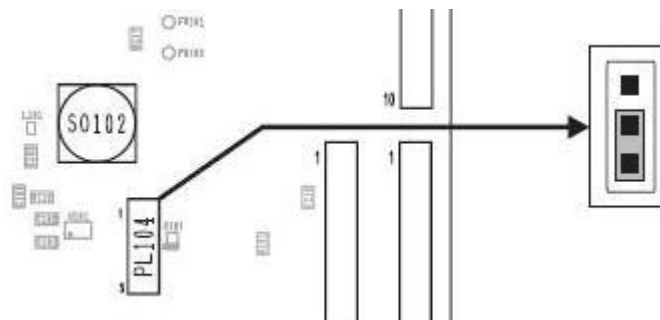

LDO Always Enabled

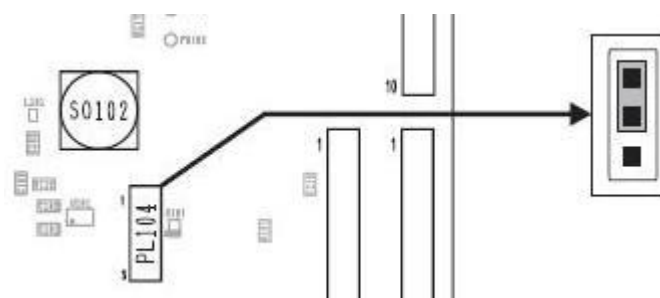

WARNING:

Don't connect a *GSM/UMTS* antenna on this connector



26.4. Expansion Connectors

26.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



26.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



26.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

26.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the HE910 Interface.

26.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
HE910 INTERFACE	1
MINI USB CABLE	1



27. UE910 family Interface

This board allows easily interfacing the UE910 modules with the EVK2 and testing their functionalities;
No settings are needed.



UE910 Interface Board



27.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

27.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the UE910 USB 2.0 port.

1 RF connectors for GSM/UMTS Antenna (SO103)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers. Antenna connectors

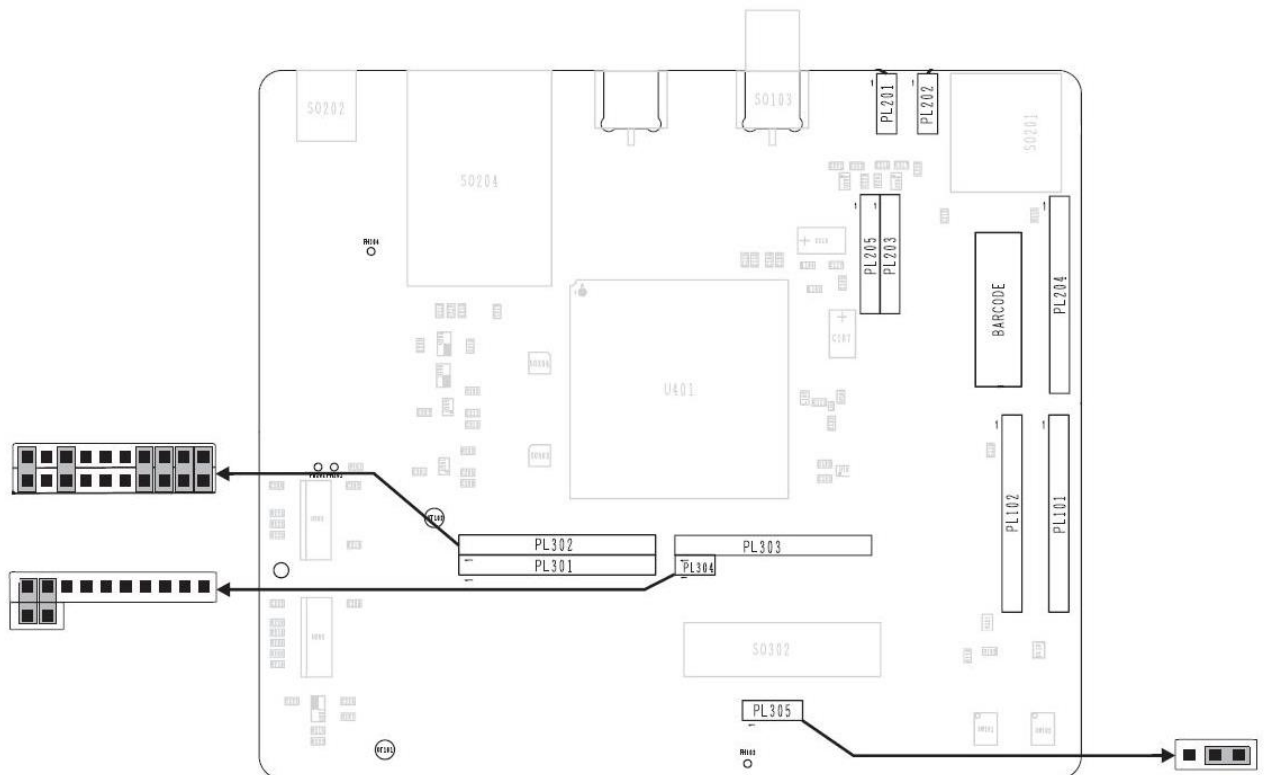

27.2.1. GSM/UMTS Antenna connector

A GSM/UMTS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

27.3. Expansion Connectors

27.3.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



27.3.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



27.3.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

27.3.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the UE910 Interface.

27.4. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
UE910 INTERFACE	1
MINI USB CABLE	1



28. GE910 Interface

This board allows easily interfacing the GE910 module with the EVK2 and testing their functionalities;
No settings are needed.

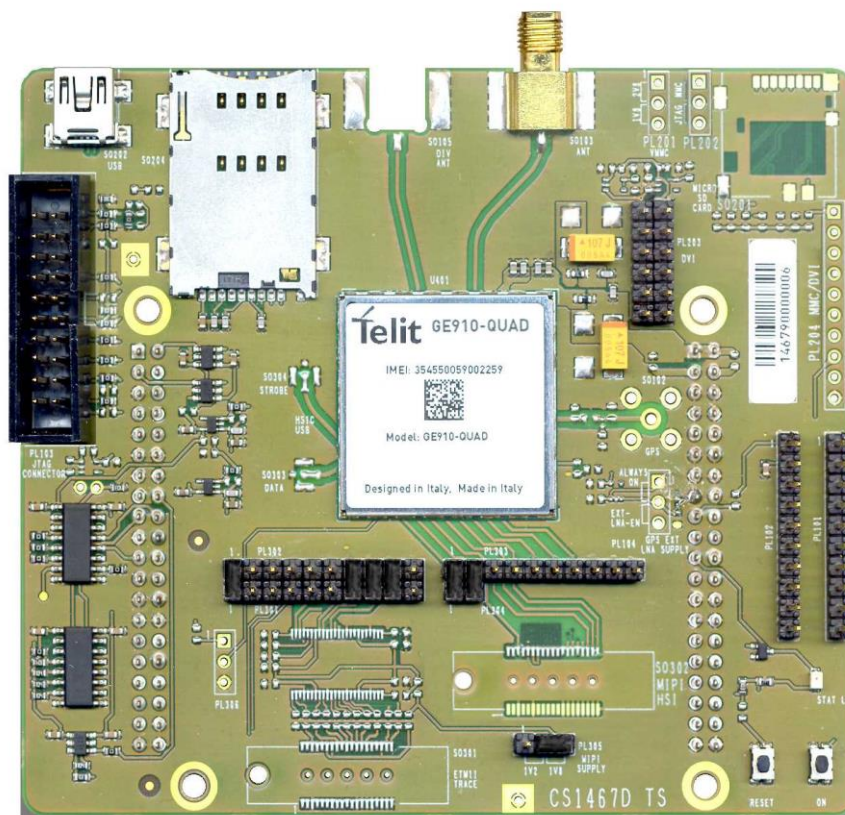

GE910 Interface Board



28.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.


28.2. Interface connectors

The following connectors are available:

- 2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);
- 1 USB connector (SO202) related to the GE910 USB 2.0 port.
- 1 RF connectors for GSM/GPRS Antenna (SO103),
- 1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

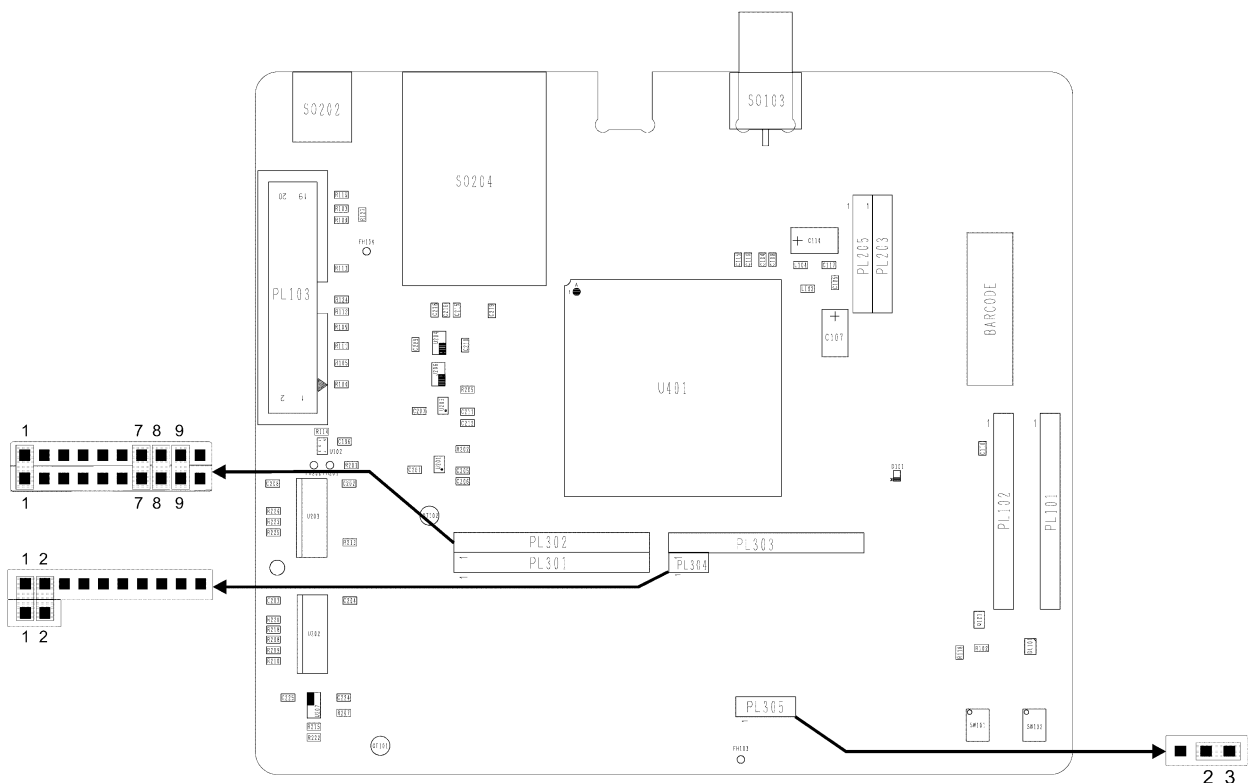

28.3. Antenna connectors

28.3.1. GSM/GPRS Antenna connector

A GSM/GPRS compatible antenna (Refer to the product’s HW user guide) antenna must be connected to SO103.

28.4. Expansion Connectors

28.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	



28.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

28.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



28.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the GE910 Interface.

28.5. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE910 INTERFACE	1
MINI USB CABLE	1



29. GE910-GNSS Interface

This board allows easily interfacing the GE910-GNSS module with the EVK2 and testing their functionalities;
No settings are needed.

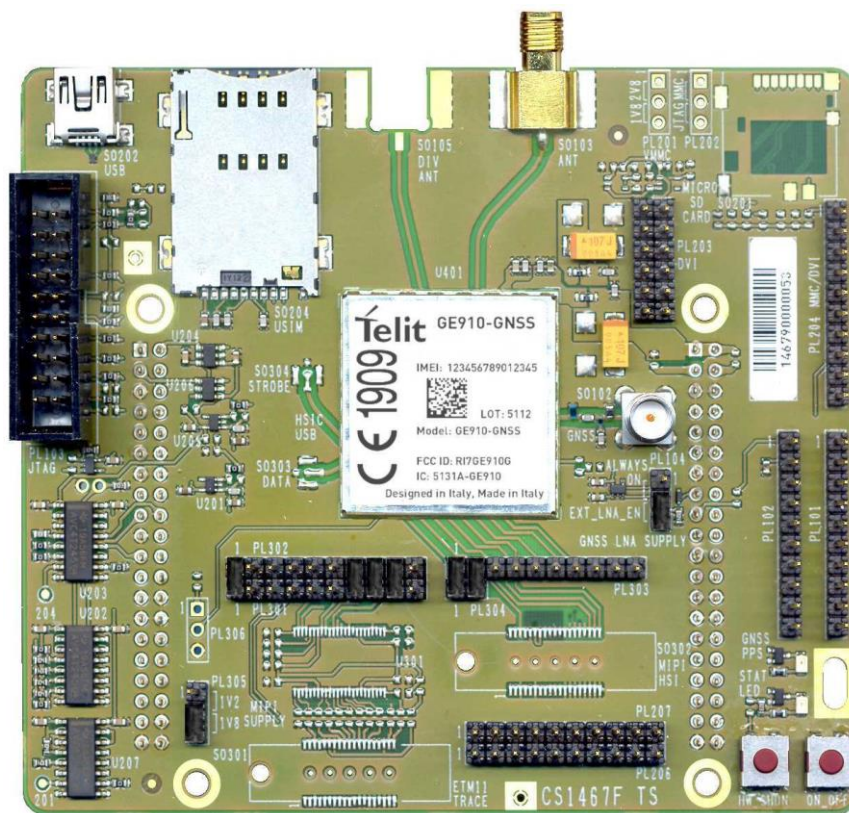

GE910-GNSS Interface Board



29.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

29.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the GE910-GNSS USB 2.0 port.

2 RF connectors for GSM/GPRS Antenna (SO103) and GNSS antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL104, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

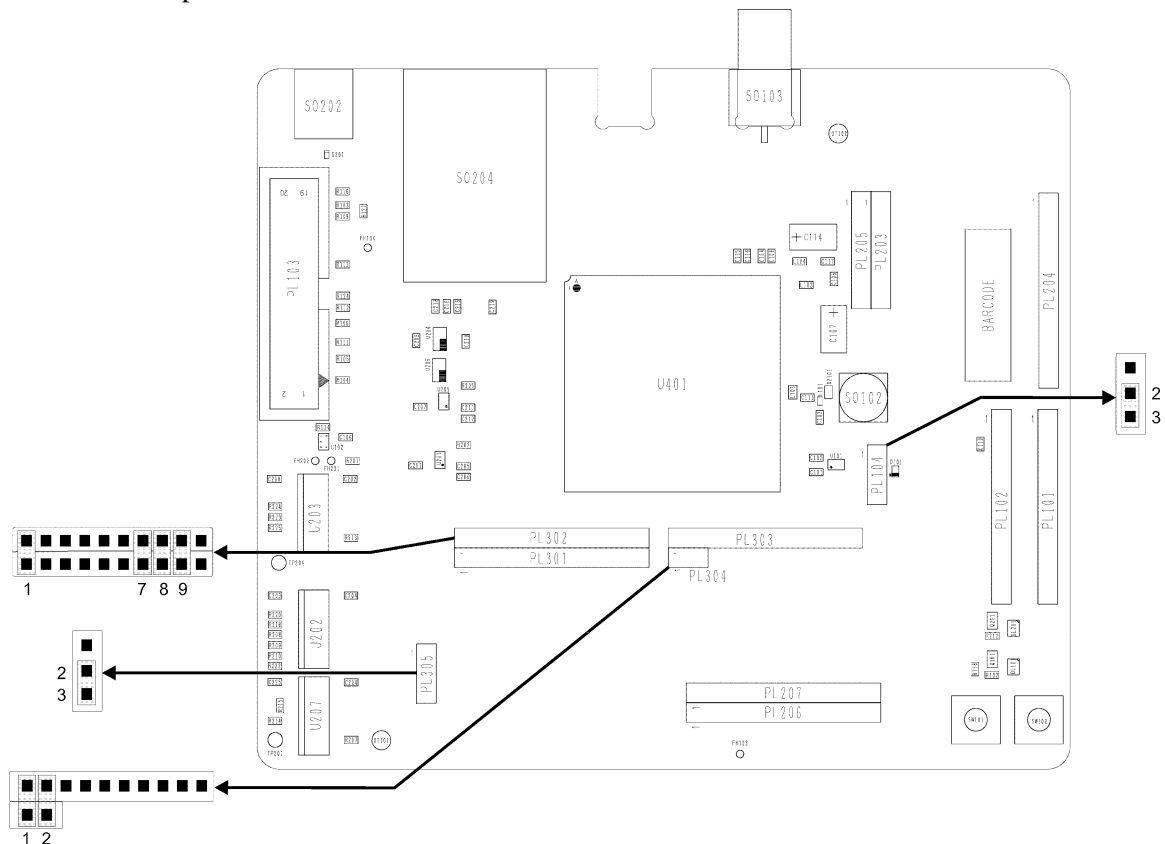

29.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

29.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



29.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the GE910-GNSS Interface.
For the GNSS capabilities refer to GE910-GNSS Hardware User Guide.

29.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.


Description	Quantity
GE910-GNSS INTERFACE	1
MINI USB CABLE	1



30. GE910-QUAD V3 Interface

This board allows easily interfacing the GE910-QUAD V3 module with the EVK2 and testing their functionalities.

No settings are needed.

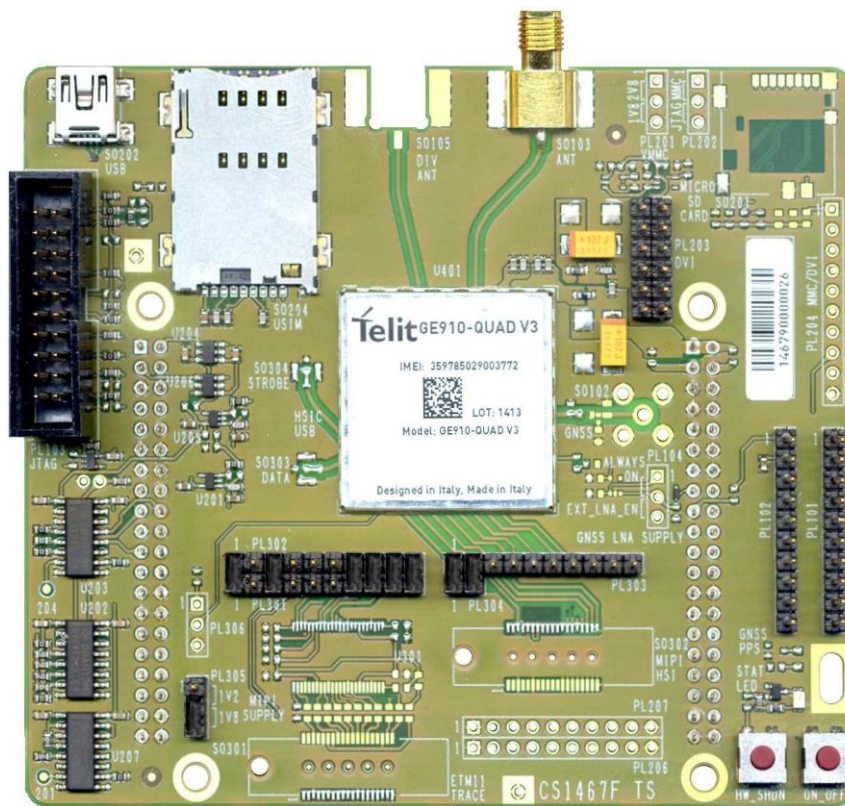

GE910 Interface Board



30.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

30.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the GE910 USB 2.0 port.

1 RF connectors for GSM/GPRS Antenna (SO103),

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

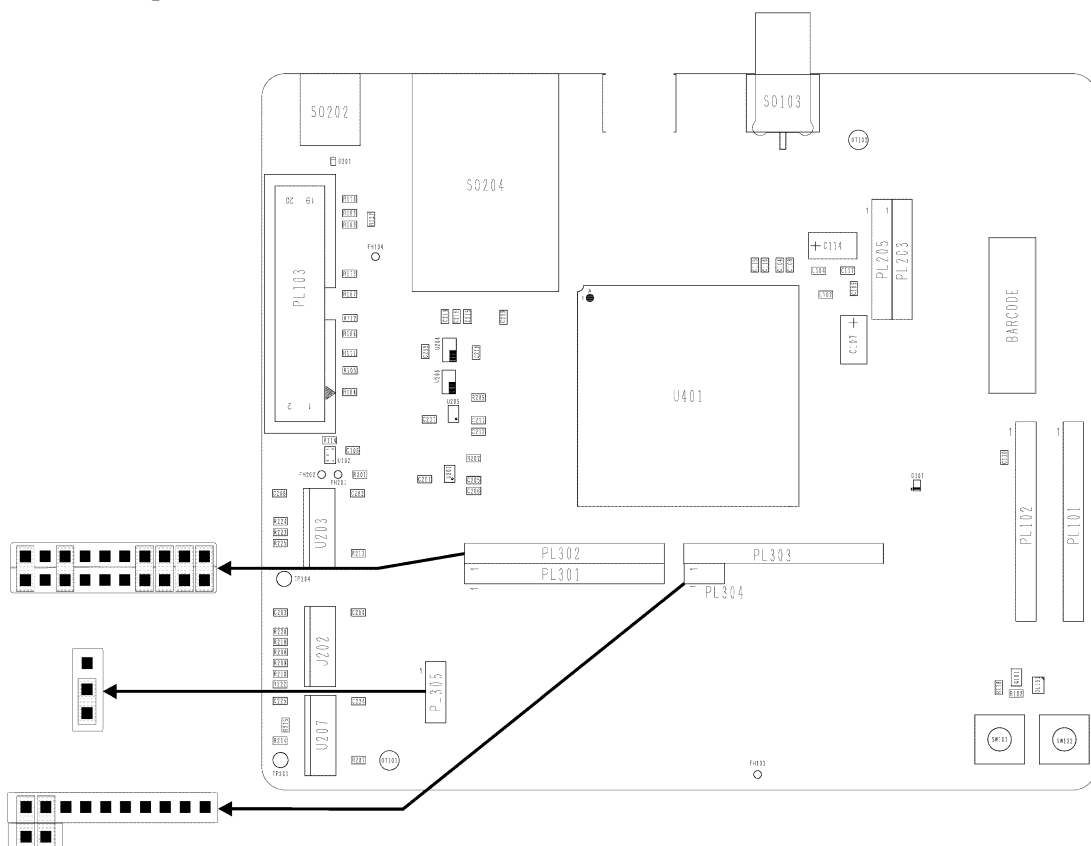

30.3. Antenna connectors

30.3.1. GSM/GPRS Antenna connector

A GSM/GPRS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

30.4. Expansion Connectors

30.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	



30.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

30.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



31. DE910 family Interface

This board allows easily interfacing the DE910 modules with the EVK2 and testing their functionalities;
No settings are needed.



DE910 Interface Board



31.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.


31.2. Interface connectors

The following connectors are available:

- 2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);
- 1 USB connector (SO202) related to the DE910 USB 2.0 port.
- 3 RF connectors for CDMA Antenna (SO103), Receiver Diversity Antenna (SO105) and GPS Antenna (SO102)
- 1 RUIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

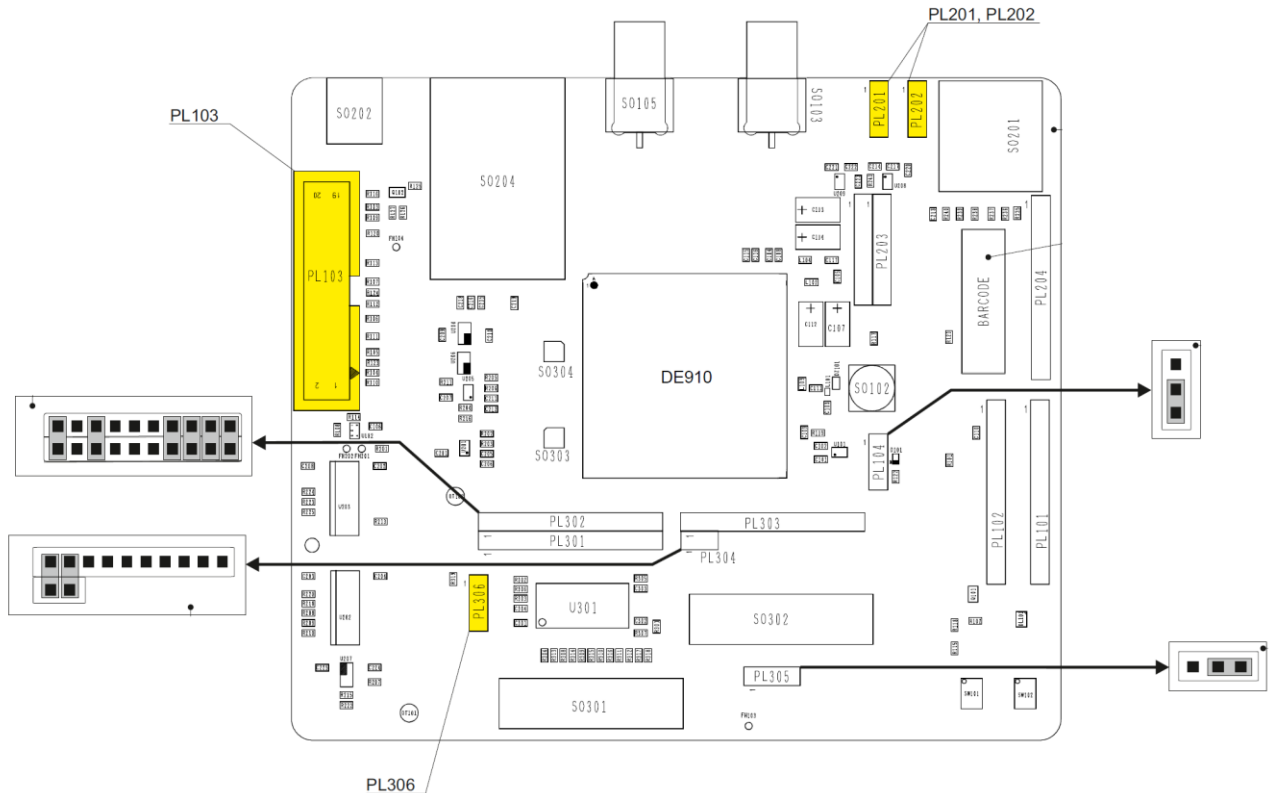

31.4. Expansion Connectors

31.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



31.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



32. CE910 family Interface

This board allows easily interfacing the CE910 modules with the EVK2 and testing their functionalities.

No settings are needed.



CE910 Interface Board



32.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.


32.2. Interface connectors

The following connectors are available:

- 2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);
- 1 USB connector (SO202) related to the CE910 USB 2.0 port.
- 1 RF connectors for CDMA Antenna (SO103)
- 1 RUIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL102, PL203, PL204) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

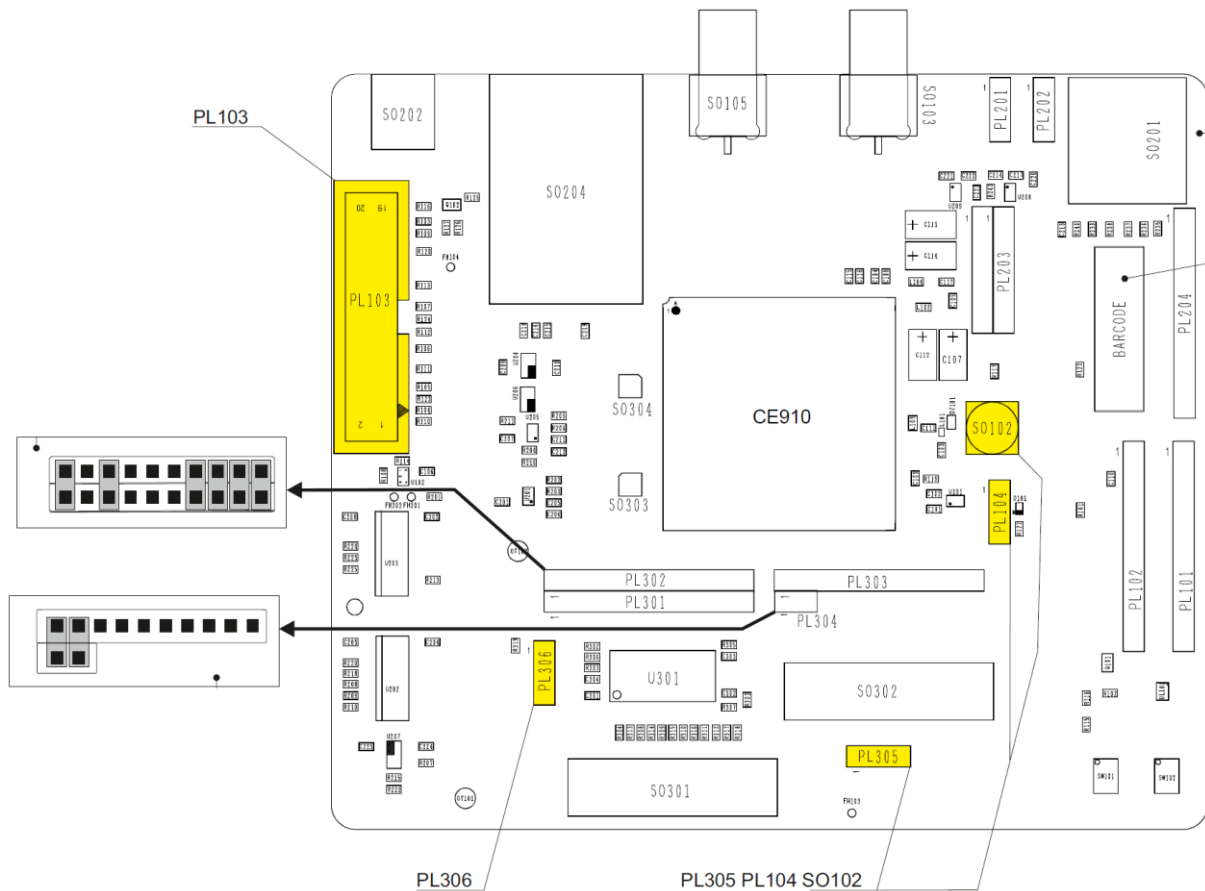

32.4.2. PL303/PL304

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

32.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	



32.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.
The 2 Buttons on the EVK2 could not be used with the CE910 Interface.

32.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
CE910 INTERFACE	1
MINI USB CABLE	1



33.2. Interface connectors

The following connectors are available:


1 male connector (30 SMT pins each one: PL102), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;
2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 RF connectors for GSM Antenna (SO103)

1 SIM Holder (SO102)

A group of Male connectors (PL101, PL105, PL106, PL107) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

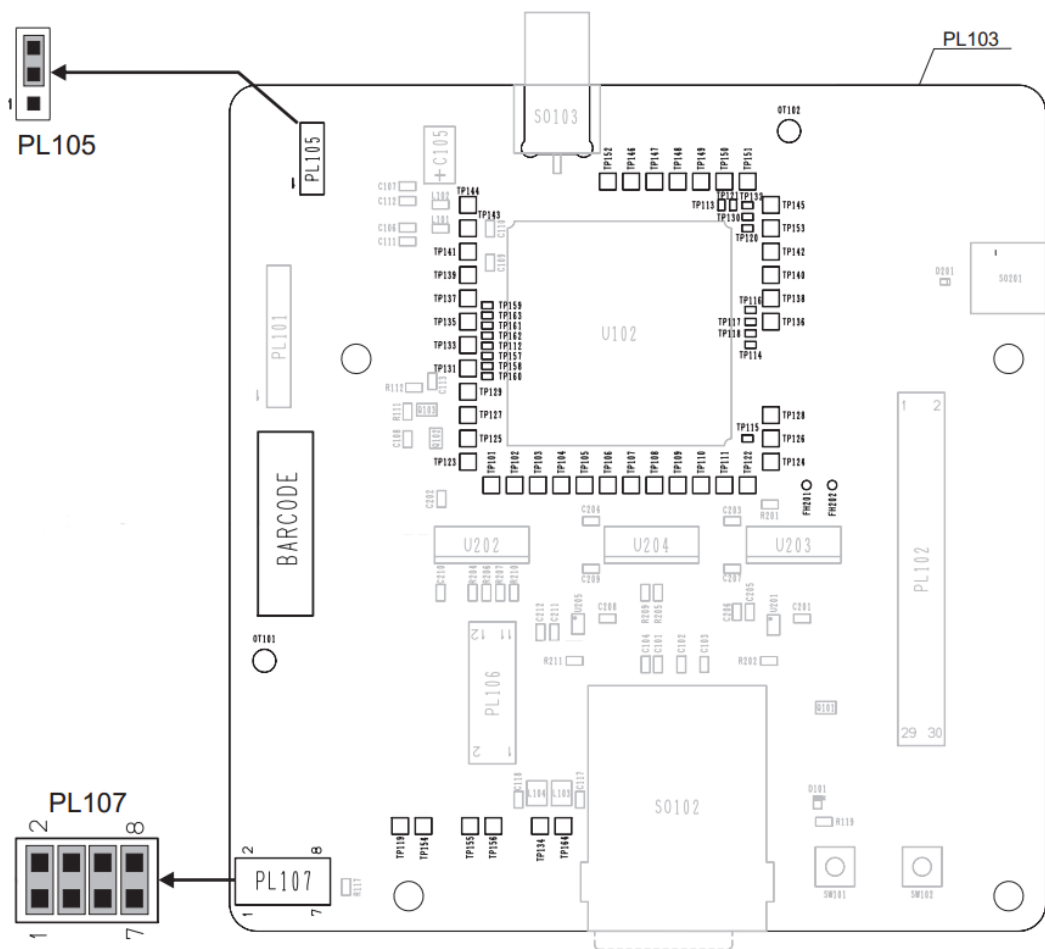

34. LE920 Interface

This board allows easily interfacing the LE920 module with the EVK2 and testing their functionalities.

No settings are needed.



LE920 Interface Board



34.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

34.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the LE920 USB 2.0 port.

3 RF connectors for Main, Diversity, and GPS Antenna (SO105, SO107, SO108),

1 SIM Holder (SO204)

A group of Male connectors (PL102, PL104), that provide the additional signals

The following picture is showing the connector's positions and the default settings for the Jumpers.

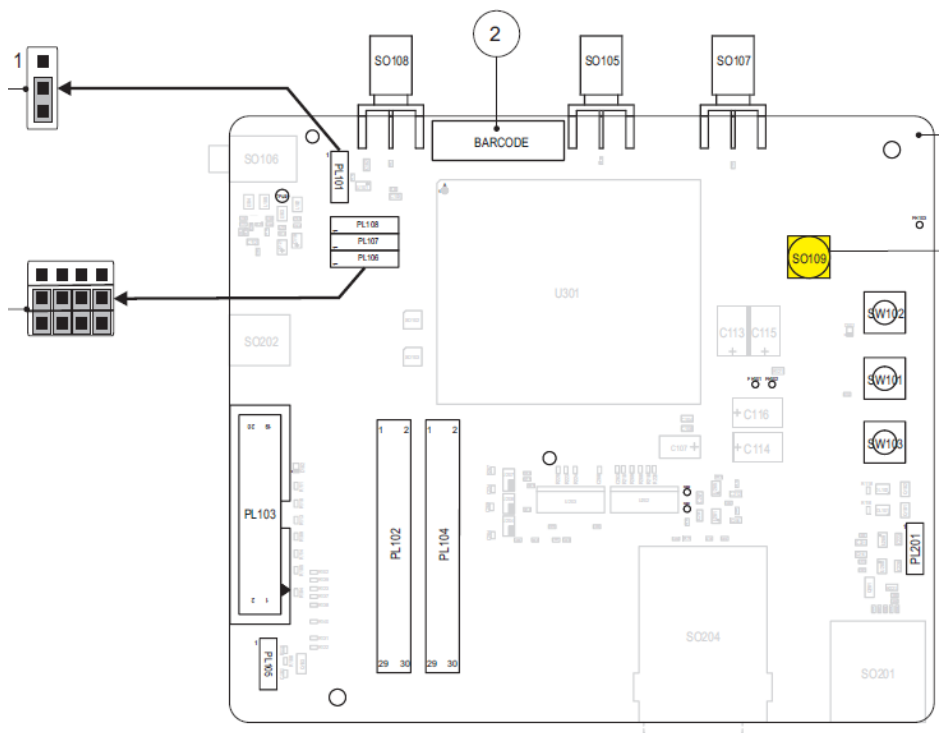

20	TGPIO_04	
21	RESERVED	
22	RESERVED	
23	RESERVED	
24	RESERVED	
25	TGPIO_01	
26	RESERVED	
27	RESERVED	
28	NC	
29	GND	
30	RESERVED	

PL104		
Pin#	Pin Name	Description
1	TGPIO_05	
2	TGPIO_07	
3	NC	
4	NC	
5	TGPIO_08	
6	TGPIO_09	
7	TGPIO_10	
8	TGPIO_03	
9	RESERVED	
10	RESERVED	
11	RESERVED	
12	TGPIO_06	
13	RESERVED	
14	RESERVED	
15	NC	
16	VAUX	1.8V
17	NC	
18	VRTC	
19	ADC1	
20	ADC2	
21	ADC3	
22	RESERVED	
23	TGPIO_02	
24	VBAT	
25	VBAT	
26	GND	
27	RESERVED	
28	RESERVED	
29	VBAT	
30	VBAT	



34.4.2. ON_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS

The 3 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN, and RESET lines of the module.

34.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.


Description	Quantity
LE920 INTERFACE	1
MINI USB CABLE	1



35. HE920 Family Interface

This board allows easily interfacing the HE920 module with the EVK2 and testing their functionalities.

No settings are needed.

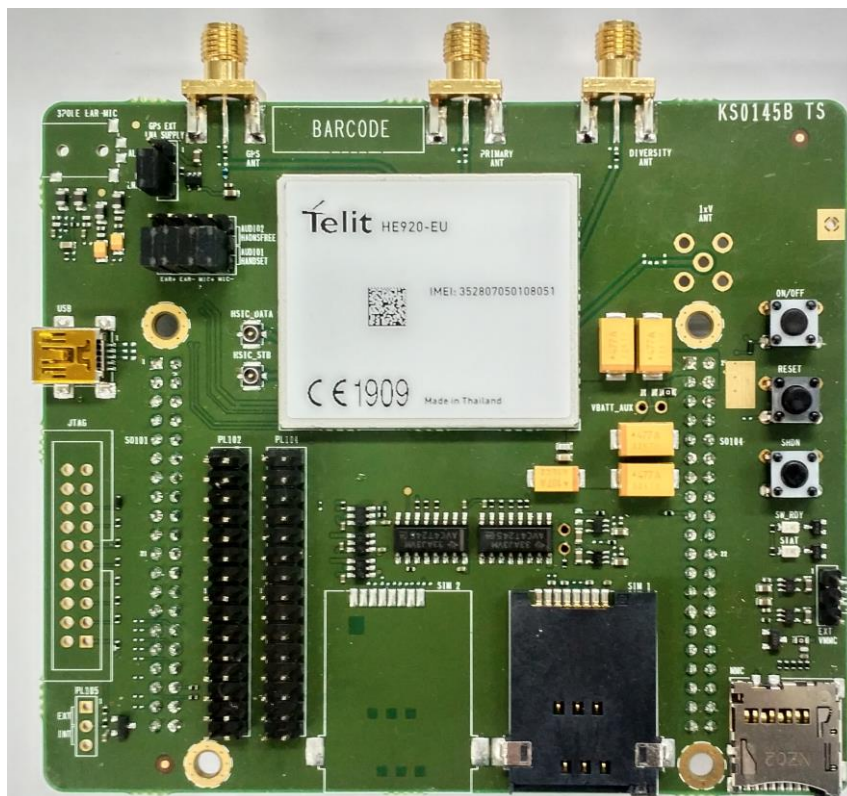

HE920 Interface Board



35.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

35.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the LE920 USB 2.0 port.

3 RF connectors for Main, Diversity, and GPS Antenna (SO105, SO107, SO108),

1 SIM Holder (SO204)

A group of Male connectors (PL102, PL104), that provide the additional signals

The following picture is showing the connector's positions and the default settings for the Jumpers.

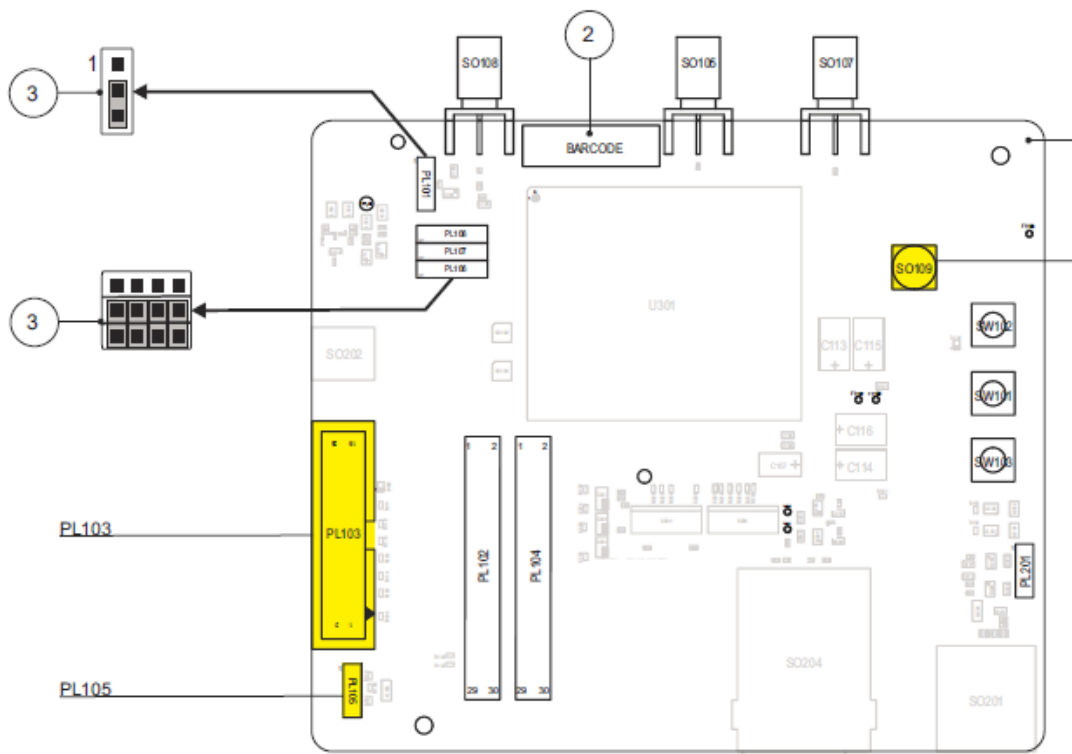

35.3. Antenna connectors

35.3.1. Main Antenna connector

A WCDMA/HsPA/GSM/GPRS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO105.

35.3.2. Diversity Antenna connector

A WCDMA/HsPA diversity (secondary) compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO107.

35.3.3. GPS Antenna connector

A GPS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO108.

35.4. Expansion Connectors

35.4.1. PL102/PL104

The connectors are carrying the following signals:

PL102		
Pin#	Pin Name	Description
1	DVI RX	Digital Audio
2	DVI TX	Digital Audio
3	DVI_WA0	Digital Audio
4	DVI_CLK	Digital Audio
5	GND	
6	REF_CLK	
7	GND	
8	RESERVED	
9	RESERVED	
10	RESERVED	
11	RESERVED	
12	GND	
13	NC	
14	NC	
15	GND	
16	GND	
17	RESERVED	
18	NC	
19	RESERVED	



35.4.2. ON_OFF & UNCONDITIONAL SHUTDOWN, RESET BUTTONS

The 3 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN, and RESET lines of the module.

35.5. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
HE920 INTERFACE	1
MINI USB CABLE	1



36. HE910 V2 family Interface

This board allows easily interfacing the HE910 V2 modules with the EVK2 and testing their functionalities;
No settings are needed.

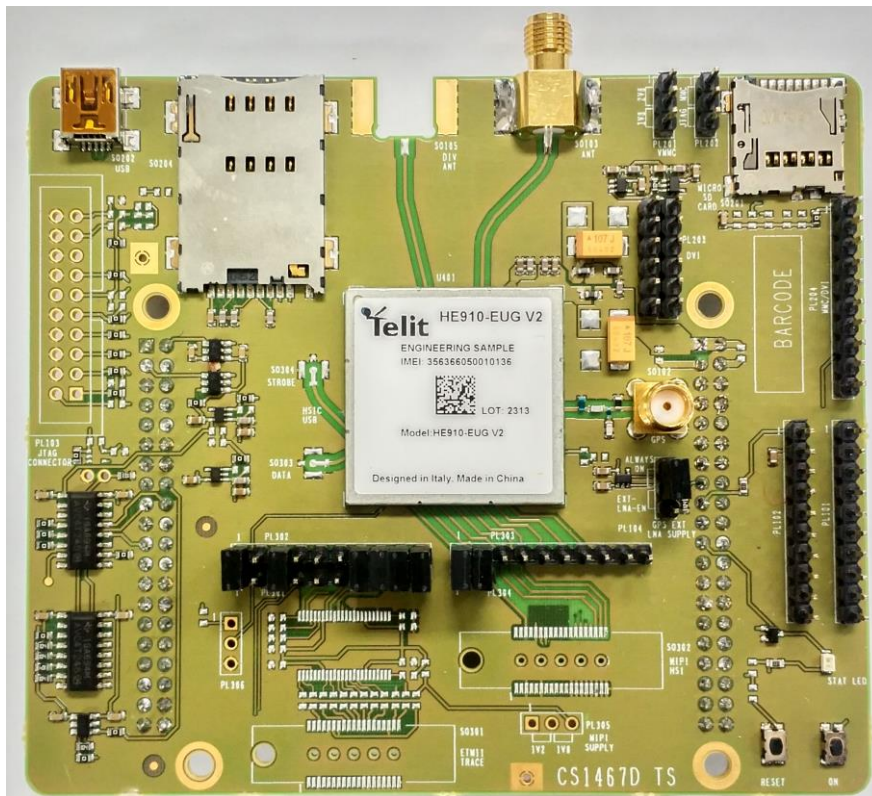

HE910 V2 Interface Board



36.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

36.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the HE910 V2 USB 2.0 port.

2 RF connectors for GSM/UMTS Antenna (SO103) and GPS Antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

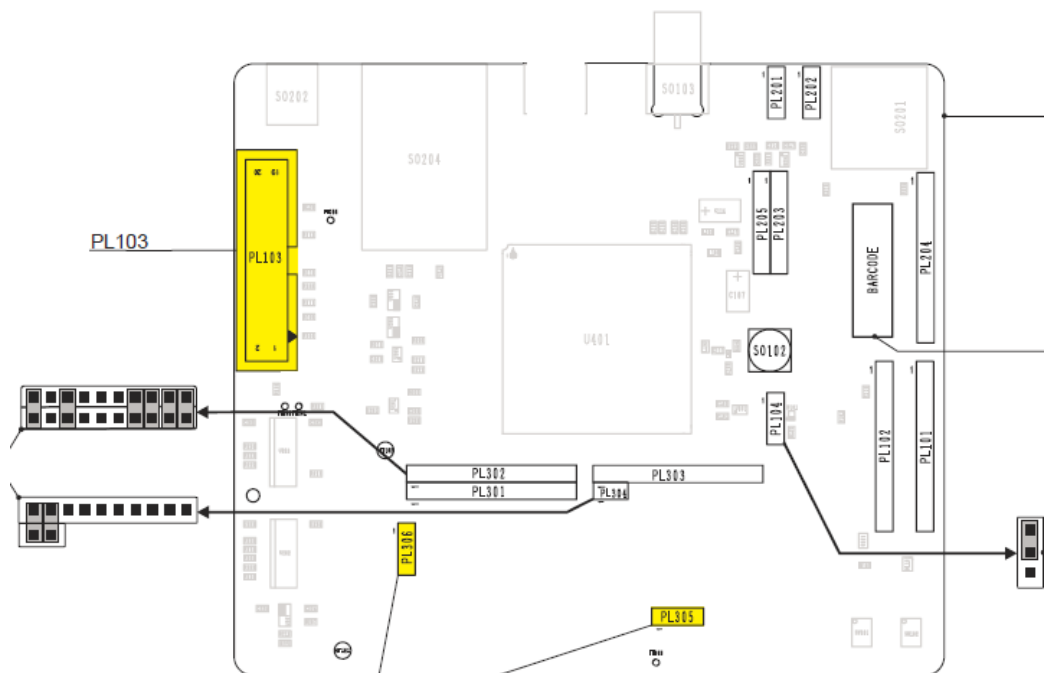

36.3. Antenna connectors

36.3.1. GSM/UMTS Antenna connector


A GSM/UMTS compatible antenna (Refer to the product’s HW user guide) antenna must be connected to SO103.

36.3.2. GPS antenna connector


A GPS antenna could be connected to SO102. Please refer to the product’s HW user guide for the proper type.

The GPS Antenna (if an active type) could be supplied with a dedicated LDO (3V DC) that could be set in the following way using the Jumpers on PL104.

LDO Enabled by the HE910 V2 Module.

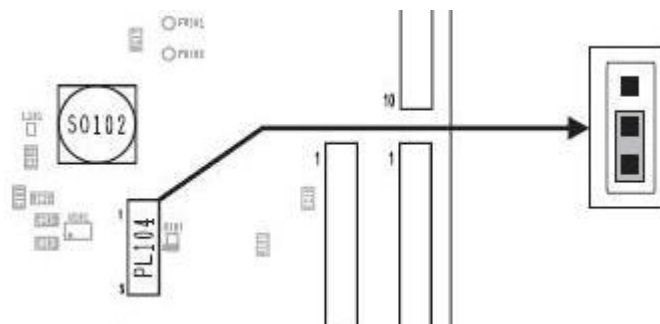

LDO Always Enabled

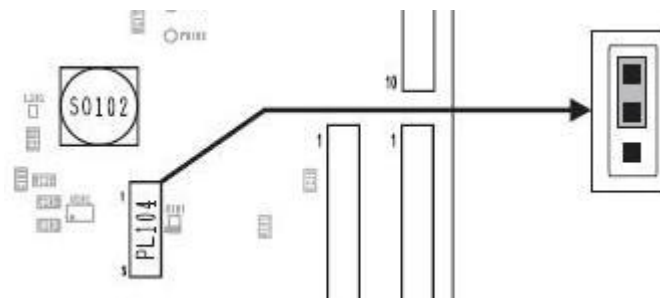

WARNING:

Don't connect a *GSM/UMTS* antenna on this connector



36.4. Expansion Connectors

36.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



36.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2

PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



36.4.3. PL102

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	VAUX/PWRMON	Auxiliary supply / Power On Indicator
2	VRTC	RTC Backup
3	RESERVED	
4	RESERVED	
5	RESERVED	
6	GPIO_05	GPIO
7	RESERVED	
8	RESERVED	
9	RESERVED	
10	GND	

36.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the UE910 Interface.

36.5. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
HE910 INTERFACE	1
MINI USB CABLE	1



37. UE910 V2 family Interface

This board allows easily interfacing the UE910 V2 modules with the EVK2 and testing their functionalities;
No settings are needed.

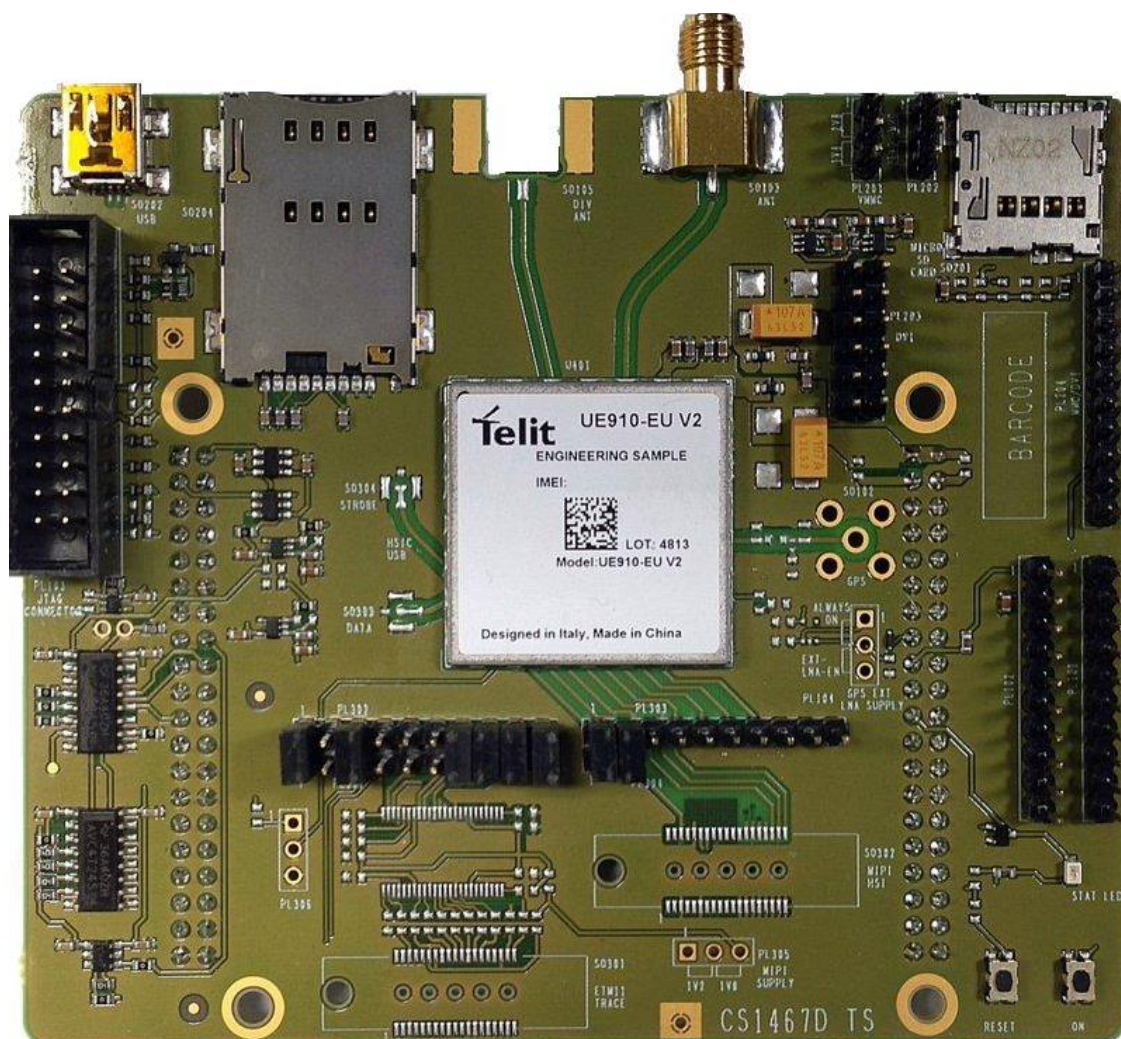

UE910 V2 Interface Board



37.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

37.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the UE910 V2 USB 2.0 port.

2 RF connectors for GSM/UMTS Antenna (SO103) and GPS Antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

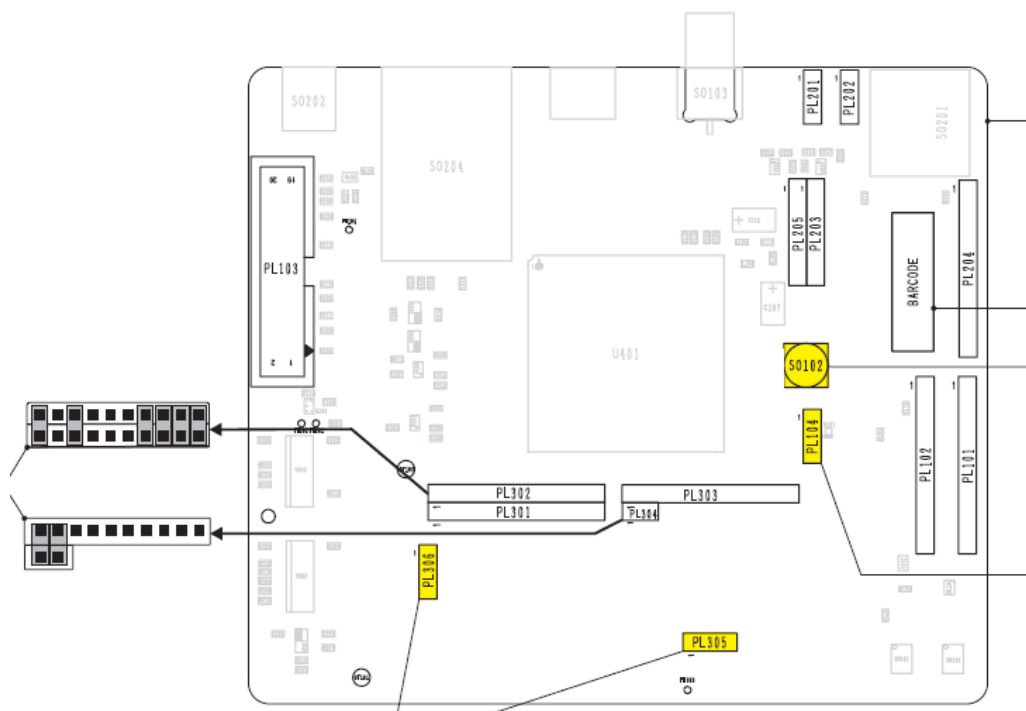

37.3. Antenna connectors

37.3.1. GSM/UMTS Antenna connector

A GSM/UMTS compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

37.4. Expansion Connectors

37.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	Jumper to EVK2



37.4.2. PL303/PL304/PL305

The connectors are carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	TX_AUX	Auxiliary serial port (TX)
2	RX_AUX	Auxiliary serial port (RX)
3	SPI_CLK	SPI
4	SPI_MRDY	SPI
5	SPI_SRDY	SPI
6	GPIO_08	
7	GPIO_09	
8	GPIO_10	
9	RESERVED	
10	NC	

PL304		
Pin#	Pin Name	Description
1	TX_AUX	Jumper to EVK2
2	RX_AUX	Jumper to EVK2


PL305		
Pin#	Pin Name	Description
1	RESERVED	-
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



38. CL865 Interface

This board allows easily interfacing the CL865 modules with the EVK2 and testing their functionalities.

No settings are needed.

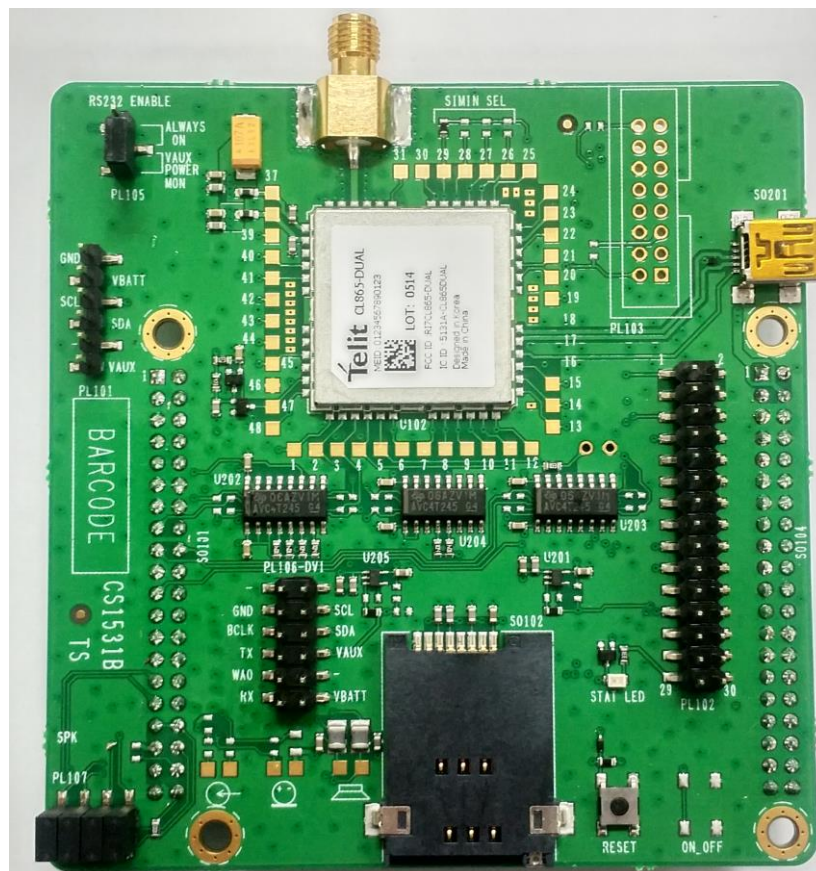

CL865 Interface Board

38.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.



38.2. Interface connectors

The following connectors are available:


1 male connector (30 SMT pins each one: PL102), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;
2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 RF connectors for CDMA Antenna (SO103)

1 SIM Holder (SO102)

A group of Male connectors (PL101, PL105, PL106, PL107) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

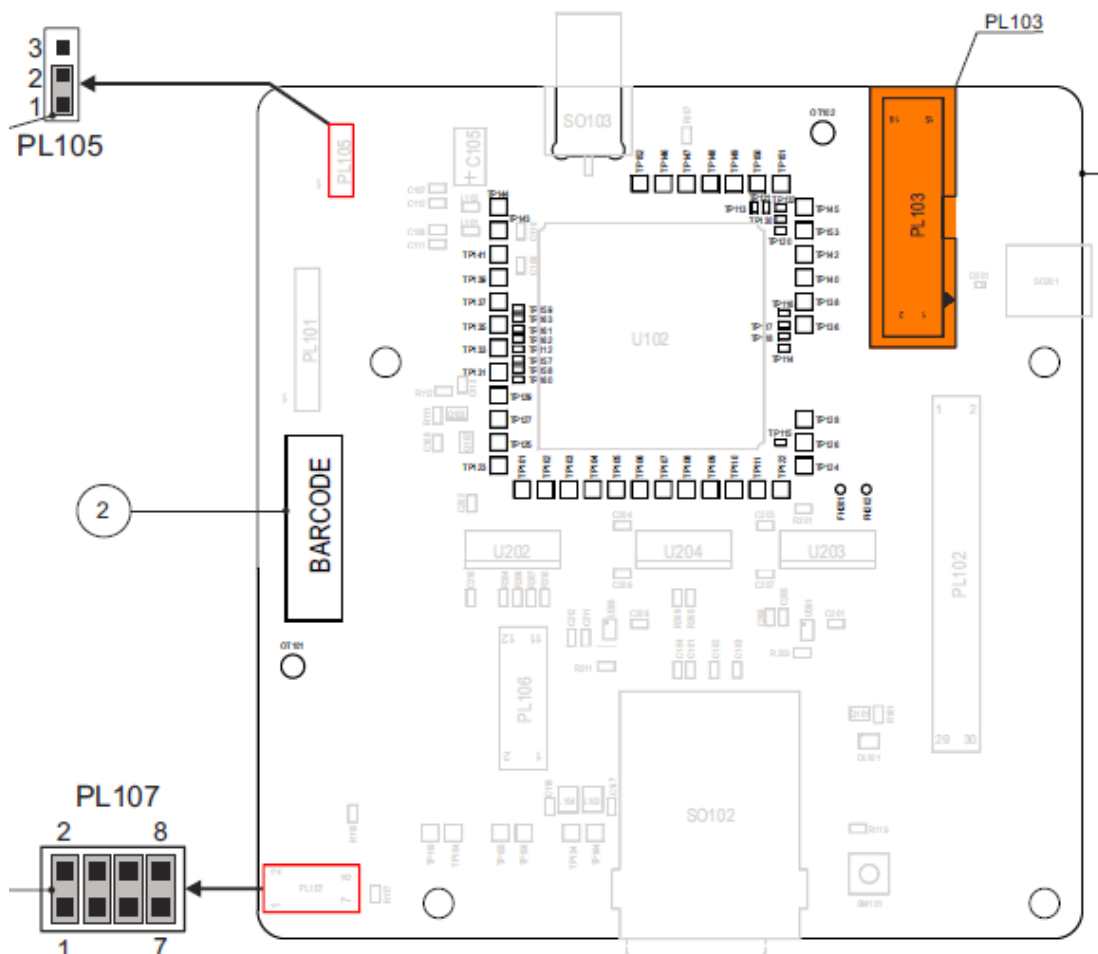

38.3. Antenna connectors

38.3.1. CDMA Antenna connector

A CDMA compatible antenna (Refer to the product’s HW user guide) antenna must be connected to SO103.

38.4. Expansion Connectors

38.4.1. PL101

The connector is carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	VAUX	VAUX/PWRMON
2	NC	
3	SDA	GPIO07 Configurable GPIO (I2C SDA)
4	SCL	GPIO08 Configurable GPIO (I2C SCL)
5	VBATT	
6	GND	

38.4.2. PL106

The connector is carrying the following signals:

PL303		
Pin#	Pin Name	Description
1	VBATT	
2	DVI_RX	Digital Audio Interface (RX)
3	NC	
4	DVI_WA0	Digital Audio Interface (WA0)
5	VAUX	VAUX/PWRMON
6	DVI_TX	Digital Audio Interface (TX)
7	BUZZER	GPIO07 Configurable GPIO
8	DVI_CLK	Digital Audio Interface (CLK)
9	STAT_LED	GPIO08 Configurable GPIO
10	GND	
11	NC	
12	NC	



38.4.3. PL107

The connector is providing the following signals:

PL102		
Pin#	Pin Name	Description
1	EAR_HF+	Audio output path
2	EAR+	Audio output path
3	EAR_HF-	Audio output path
4	EAR-	Audio output path
5	MIC_HF+	Audio input path
6	MIC_HF-	Audio input path
7	MIC-	Audio input path
8	MIC+	Audio input path

The connector allows to isolate audio path going to EVK in order to permit to use the dedicated audio test points on the interface.

38.5. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
CL865 INTERFACE	1



39. GE866-QUAD Interface


This board allows easily interfacing the GE866-QUAD modules with the EVK2 and testing their functionalities.
No settings are needed.

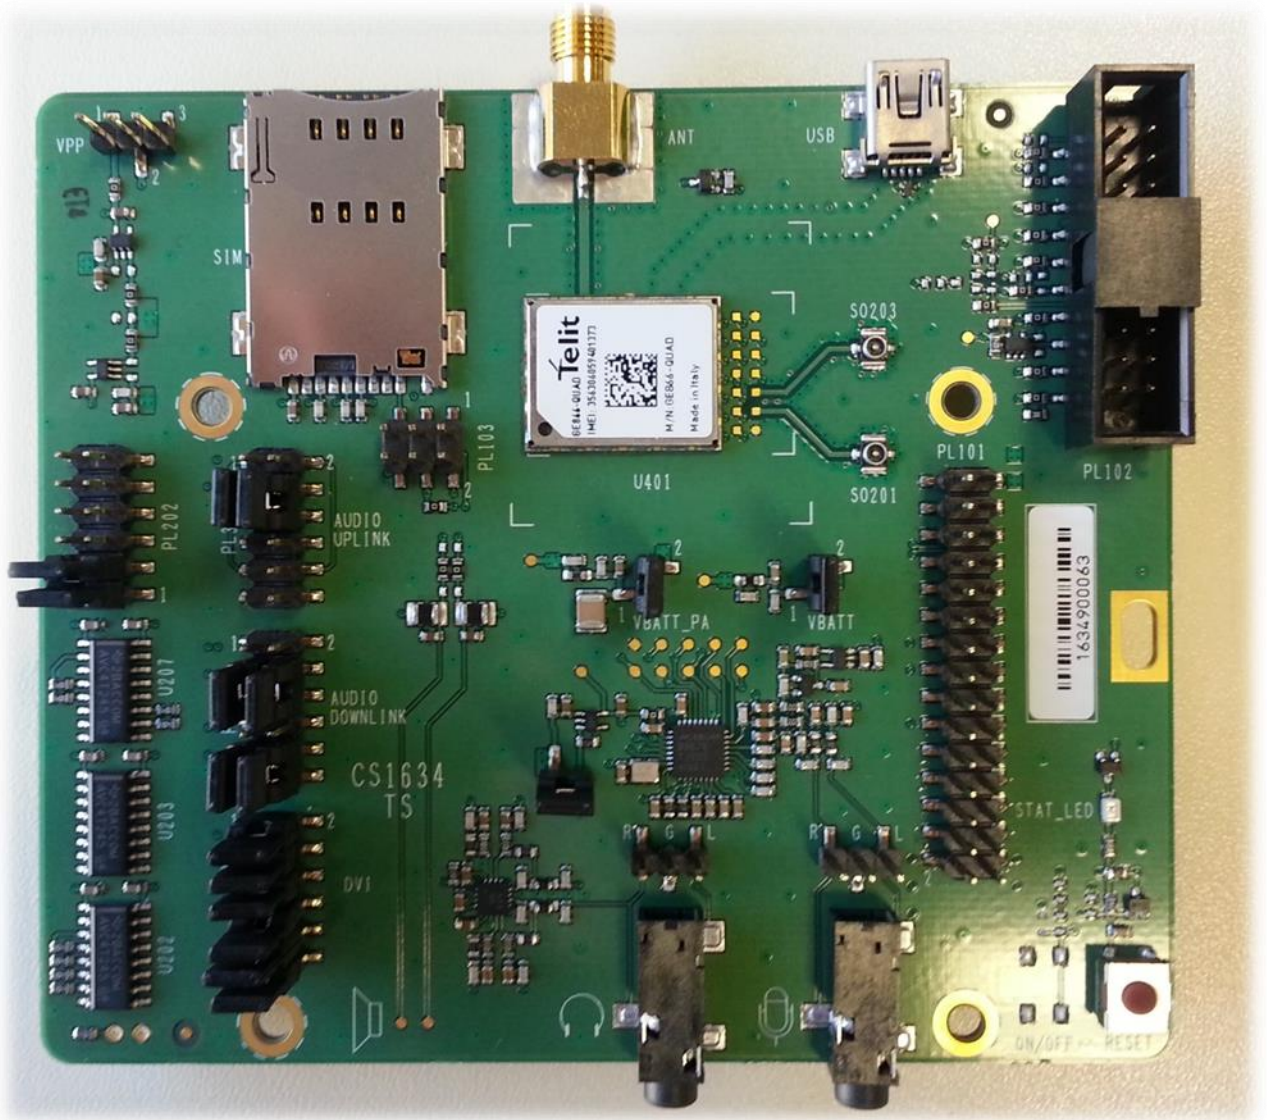

GE866-QUAD Interface Board



The following picture shows connectors placement and default jumper settings. Details in the following paragraphs.

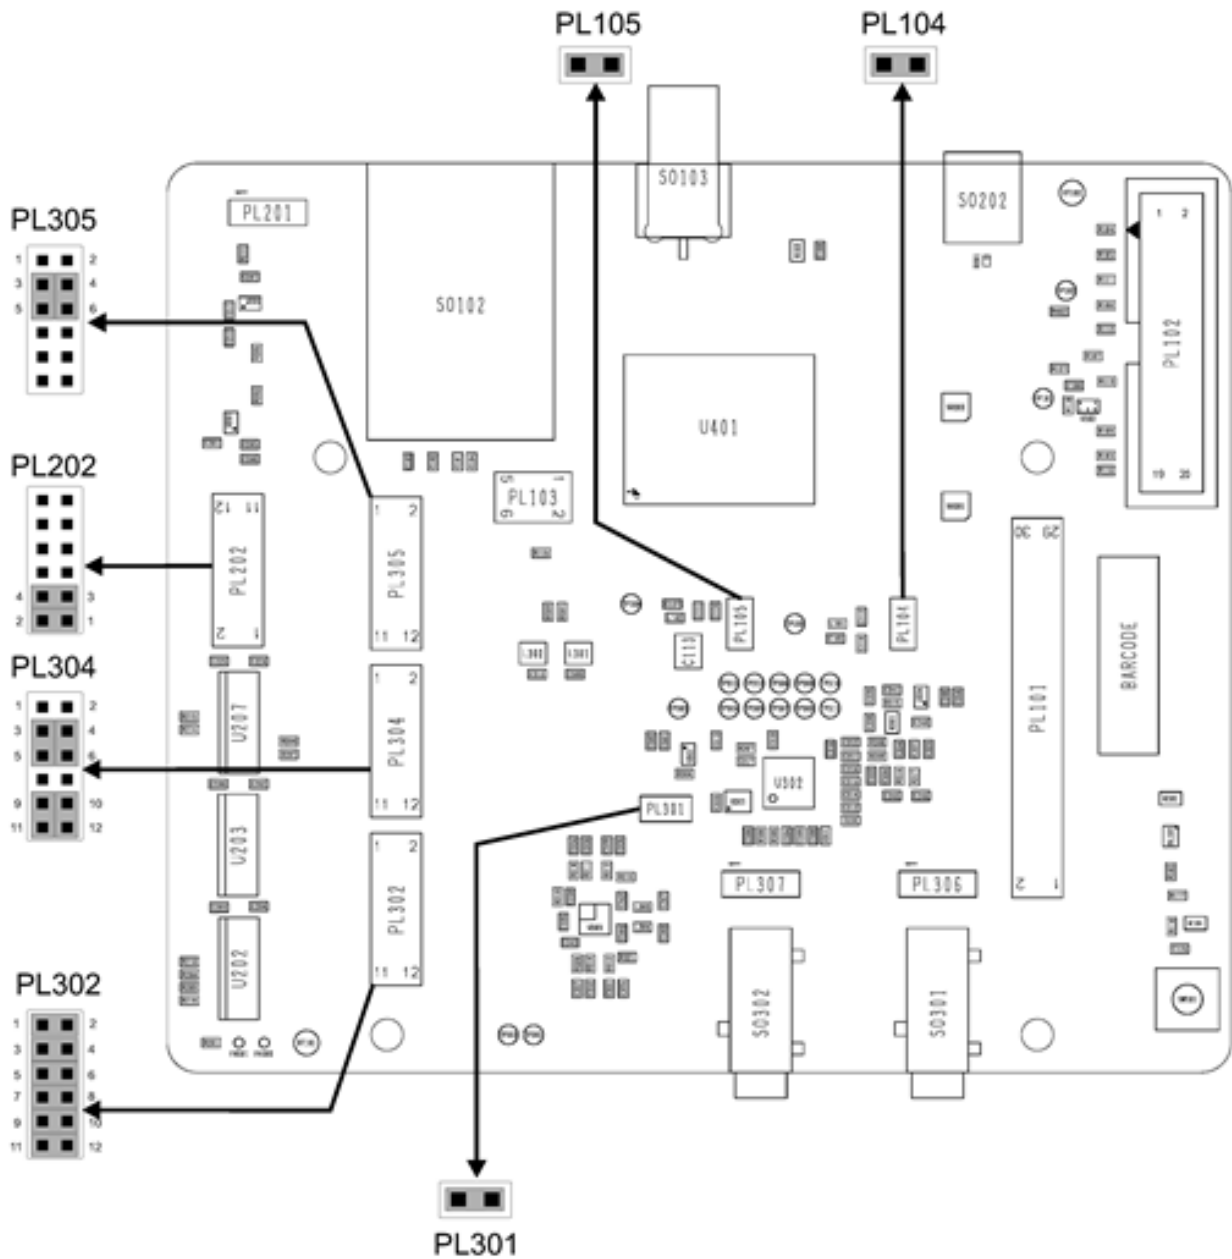

39.3. Antenna connectors

39.3.1. GSM Antenna connector

A GSM compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

39.4. Expansion Connectors

39.4.1. PL101

The connector carries the following signals:


PL101		
Pin#	Pin Name	Description
1	GPIO_05/RFTXMON	RF transmission monitor
2	GPIO_06/ALARM/BUZZER	Alarm or buzzer output
3	NC	
4	NC	
5	GPIO_07/STAT_LED	Status pin
6	GPIO_01/DVI_WA0	Digital audio interface WA0
7	GPIO_04/DVI_CLK	Digital audio interface Clock
8	GPIO_03/DVI_TX	Digital audio interface TX
9	NC	
10	NC	
11	NC	
12	GPIO_06/ALARM/BUZZER	Alarm or buzzer output
13	NC	
14	NC	
15	NC	
16	V_AUX/PWRMON	Pull-up reference or ON monitor
17	DAC_OUT	10 bit DAC output, 1.8V max
18	VRTC	Real Time Clock supply
19	ADC_IN	11 bit ADC converter, 0-1.2
20	NC	
21	NC	
22	NC	
23	GPIO_02/DVI_RX	Digital audio interface RX
24	NC	
25	RESERVED	
26	NC	
27	NC	
28	NC	
29	VBATT_IF	3.8V supply
30	GND	



PL304		
Jumpers on pins#	Signal Name	Description
1-3	Left Out +	Analog audio out
2-4	Right Out +	
7-9	Left Out -	
8-10	Right Out -	
3-5	Left Out +	Digital audio out
4-6	Right Out +	
9-11	Left Out -	
10-12	Right Out -	

PL305		
Jumpers on pins#	Signal Name	Description
1-3	Audio In -	From onboard Jack To Module (analog)
2-4	Audio In +	
3-5	Audio In -	From onboard Jack To Codec (digital)
4-6	Audio In +	
5-7	Audio In -	From EVK2 Jack to Codec (digital)
6-8	Audio In +	
7-9	Audio In -	From EVK2 Jack to Module (analog)
8-10	Audio In +	

You can also connect an external speaker by using the two Test Points, as shown in the figure below:

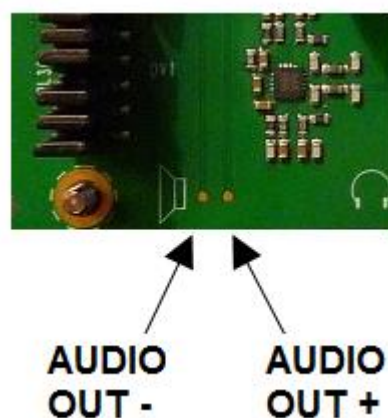


39.5.4. PL306 and PL307

These connectors provide an additional input/output for interfacing an earphone and a microphone to the GE866-QUAD.

Pin 1 is, for both connectors, the one closest to the upper side of the board (i.e. the side where the GSM antenna connector is mounted).

Pin#	PL306	PL307
1(R)	Microphone right	Earphone right
2(G)	GND	GND
3(L)	Microphone left	Earphone left

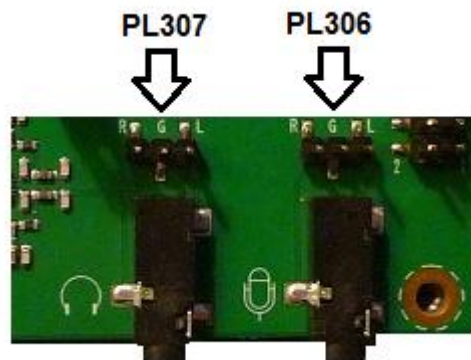

39.6. Other interface connectors

39.6.1. PL104 & PL105 (POWER)

These two jumpers allows connecting and disconnecting VBATT_PA and VBATT to perform current measures.

39.6.2. PL103 (SIMIN)

This 6 pins connector allows you to configure a GPIO as SIMIN signal following the table below:

PL103		
Jumpers on pins#	Signal Name	Description
1-2	SIMIN	GPIO_05/RFTXMON
3-4		GPIO_06/ALARM/BUZZER
5-6		GPIO_07/STAT_LED

The default configuration does not foresee any jumper

39.6.3. PL202 (AUX UART)

This jumper activates the auxiliary serial port. In the default configuration, jumpers are placed on pins 1-2 and 3-4. Other combinations are reserved for future use.


39.7. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
GE866-QUAD Interface	1
Jumpers	17




The following picture shows connectors placement and default jumper settings. Details in the following paragraphs.

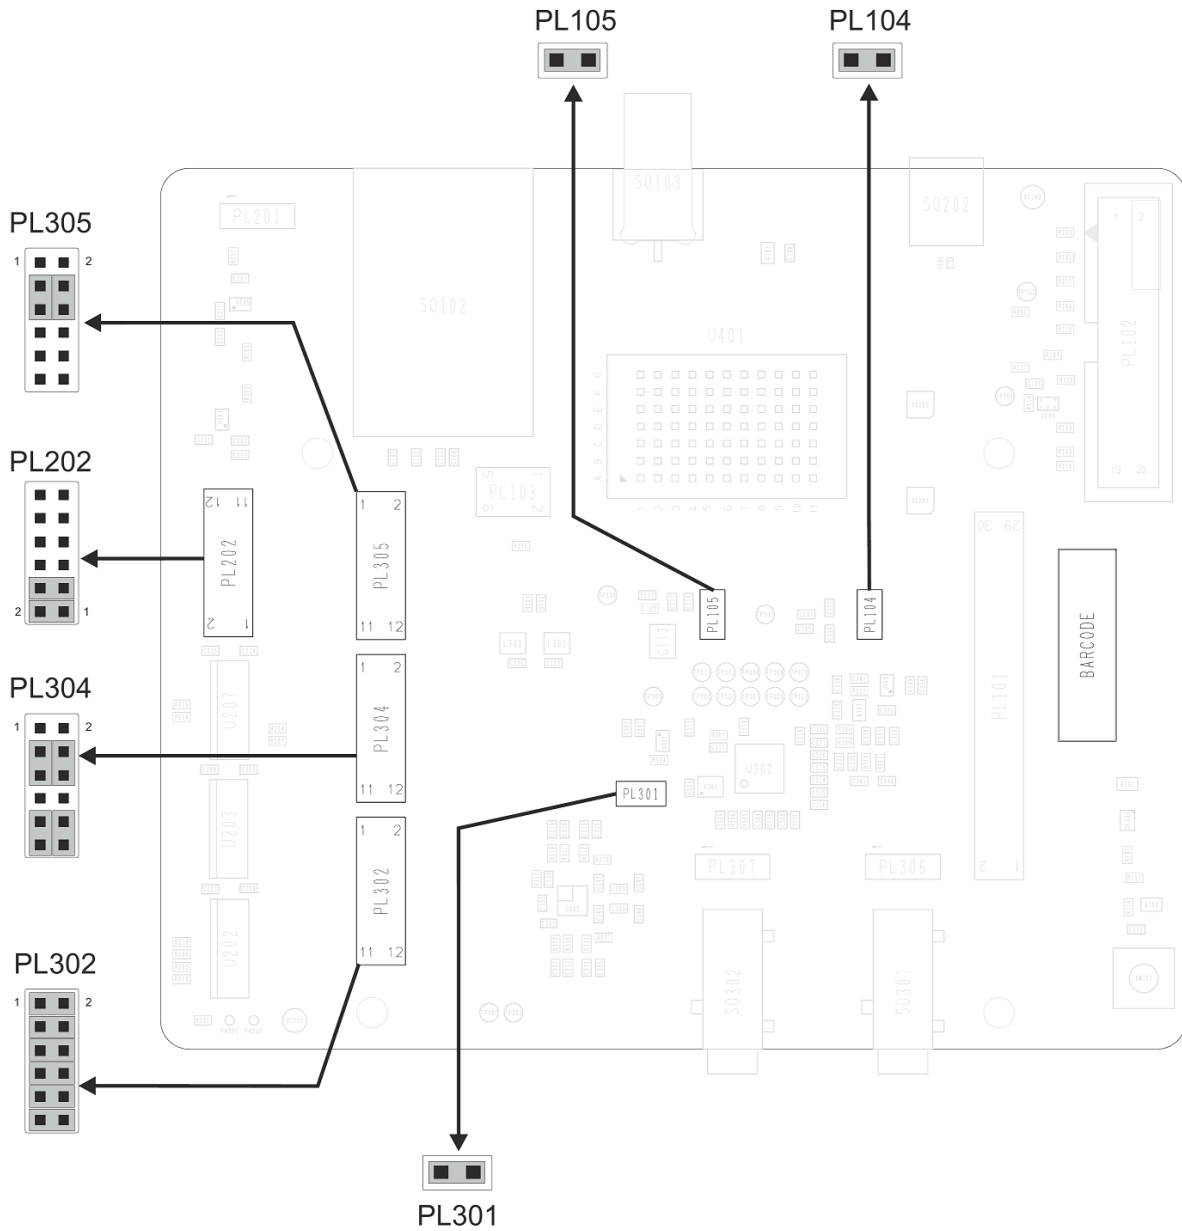

41. UL865 Interface

This board allows easily interfacing the UL865 modules with the EVK2 and testing their functionalities.

No settings are needed.

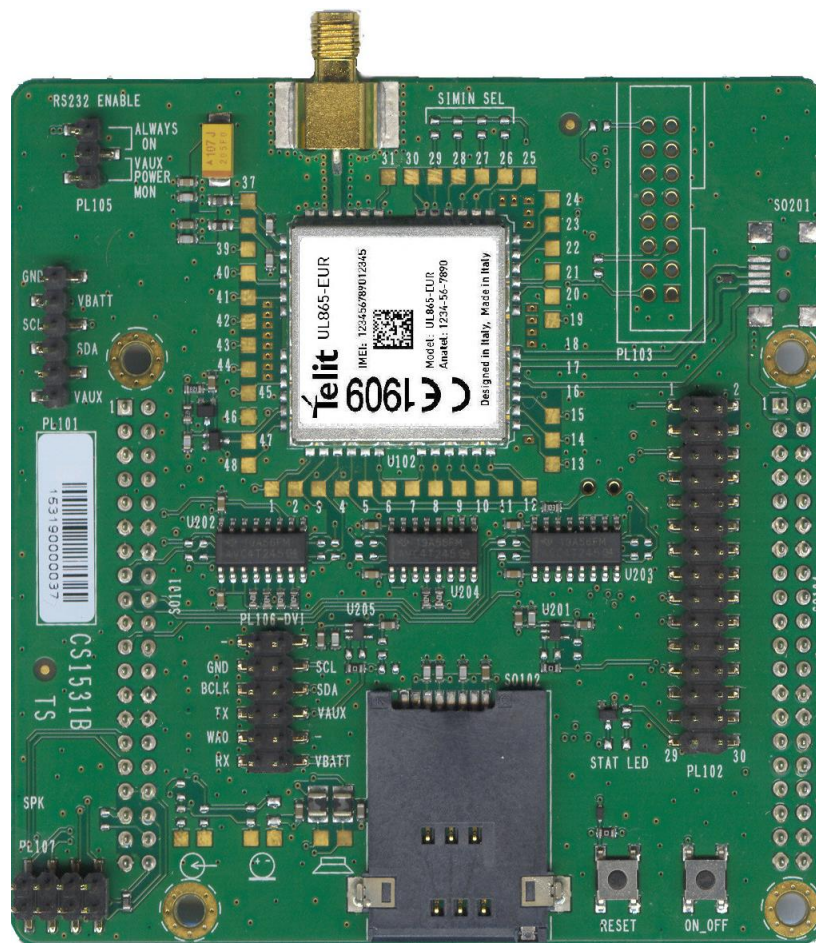

UL865 Interface Board

41.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.



41.2. Interface connectors

The following connectors are available:


1 male connector (30 SMT pins each one: PL102), by which it is possible to connect external devices, user's application, Telit extension boards, measurements equipment or other tools;
2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);

1 RF connectors for GSM Antenna (SO103)

1 SIM Holder (SO102)

A group of Male connectors (PL101, PL105, PL106) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

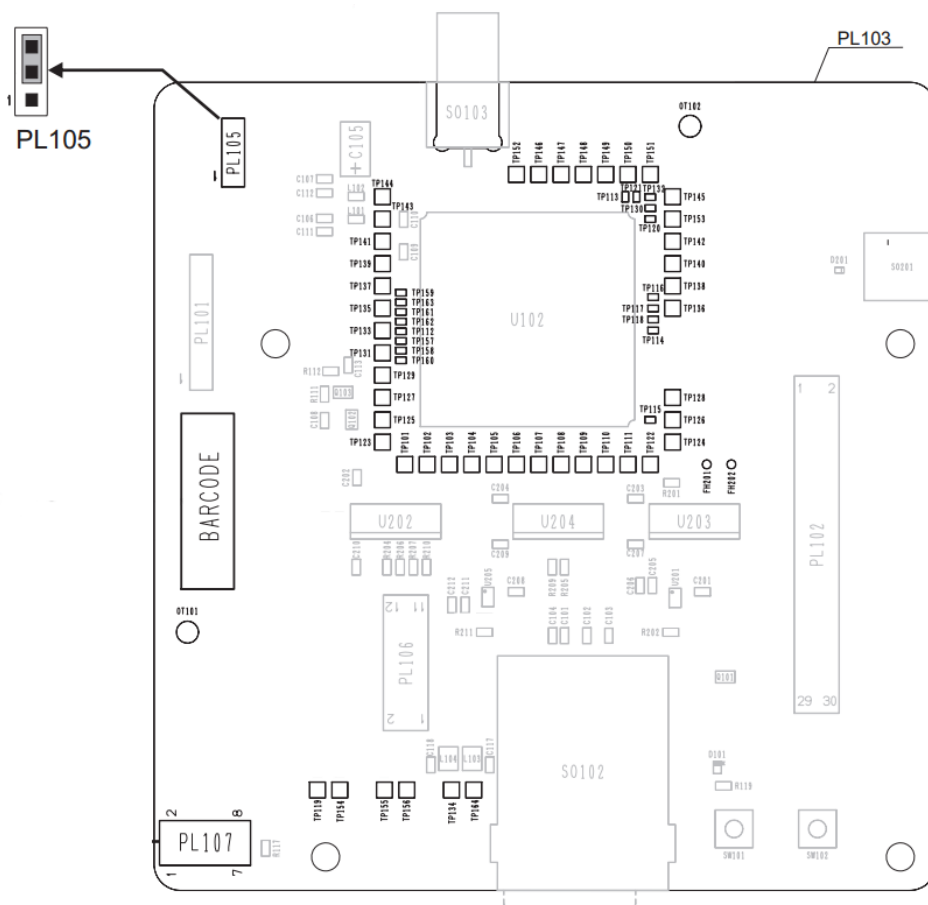

41.5. Content of the kit


Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
UL865 INTERFACE	1



42. LE910 Interface

This board allows easily interfacing the LE910 modules with the EVK2 and testing their functionalities;
No settings are needed.

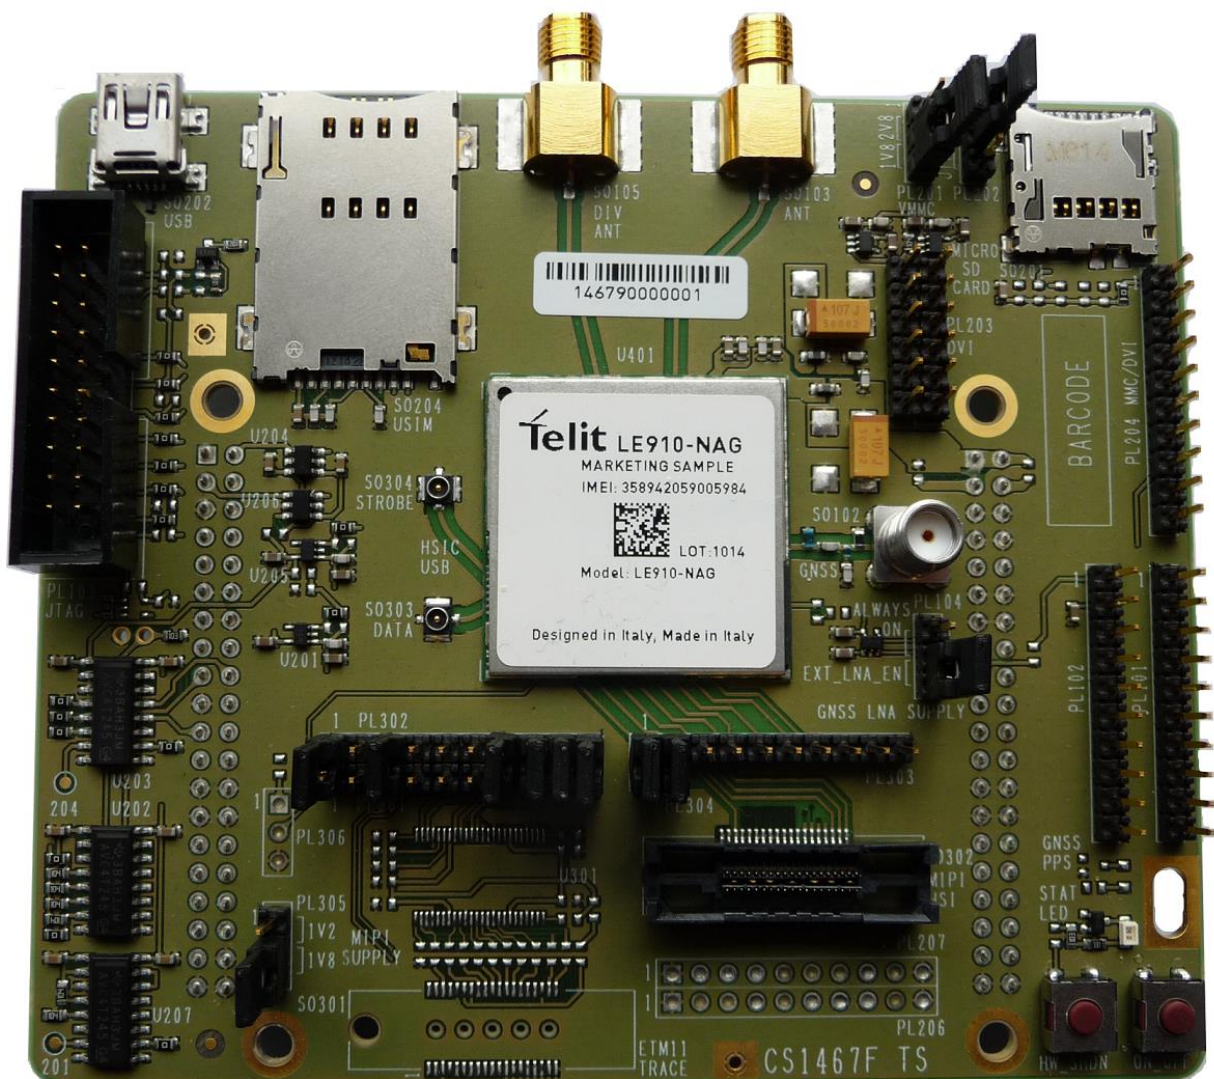

LE910 Interface Board



42.1. Stand-alone setup

The Jumper setting and the assembled components are ready permitting the standalone use.

42.2. Interface connectors

The following connectors are available:

2 female connectors (40 PTH pins each one: SO101, SO104), to connect the interface to the EVK2 mother board circuits (power supply lines, serial in/out lines, audio in/out lines);


1 USB connector (SO202) related to the LE910 USB 2.0 port.

3 RF connectors for Main Antenna (SO103) , Diversity Antenna (SO105) and GNSS antenna (SO102)

1 SIM Holder (SO204)

A group of Male connectors (PL301, PL302, PL303, PL304, PL305, PL102, PL104, PL203) that provide the additional signals (i.e. GPIOs) and could select the functions by Jumper setting (see the related document section/schematic for this).

The following picture is showing the connector's positions and the default settings for the Jumpers.

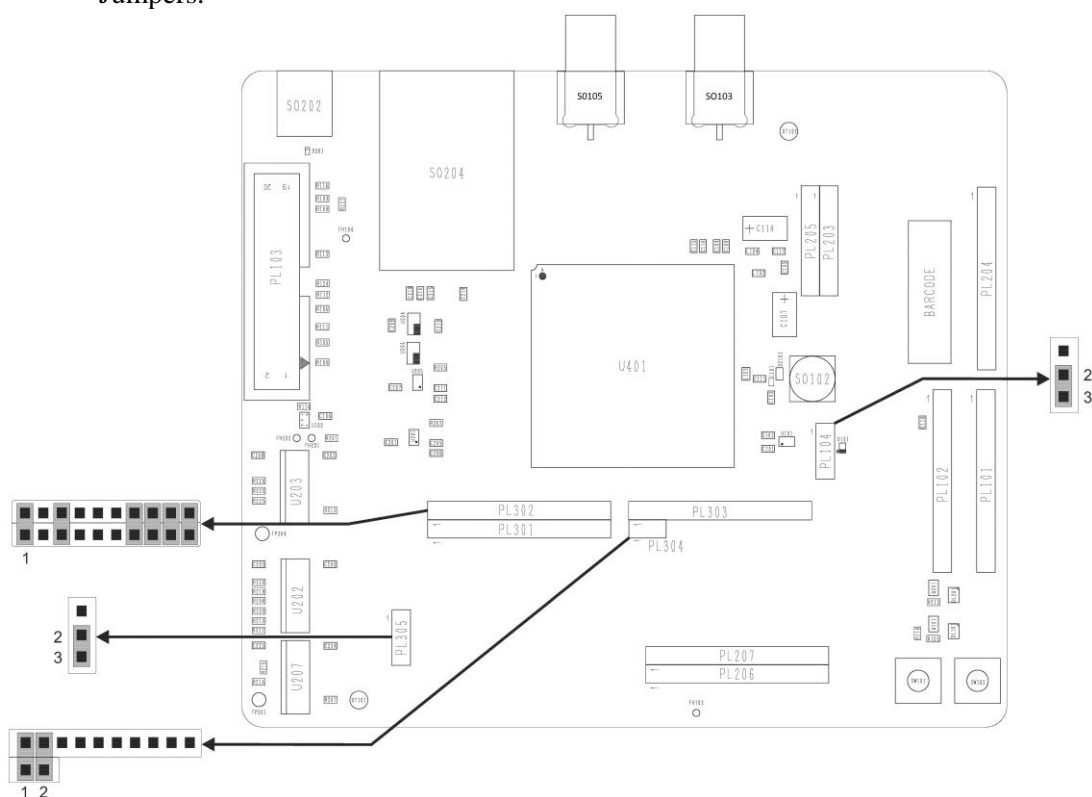

42.3. Antenna connectors

42.3.1. GSM/GPRS Antenna connector


An LTE/WCDMA/GSM compatible antenna (Refer to the product's HW user guide) antenna must be connected to SO103.

42.3.2. GNSS antenna connector


A GNSS antenna could be connected to SO102. Please refer to the product's HW user guide for the proper type.

The GNSS Antenna (if an active type) could be supplied with a dedicated LDO (3V DC) that could be set in the following way using the Jumpers on PL104.

LDO Enabled by the LE910 Module.

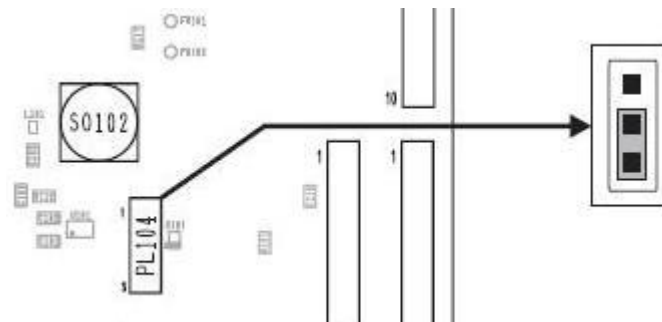

LDO Always Enabled

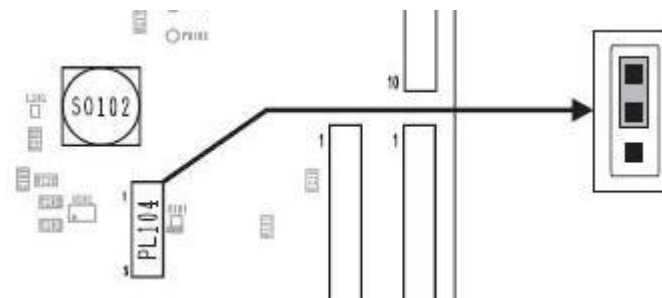

42.4. Expansion Connectors

42.4.1. PL301/PL302

The connectors are carrying the following signals:

PL301		
Pin#	Pin Name	Description
1	STAT_LED	Status Led
2	NC	
3	RESERVED	
4	NC	
5	NC	
6	NC	
7	C125/RING	
8	C107/DSR	
9	C109/DCD	
10	RESERVED	

PL302		
Pin#	Pin Name	Description
1	GPIO_01	Jumper to EVK2 Default function is Status Led
2	GPIO_02	
3	GPIO_03	
4	GPIO_04	
5	GPIO_06	
6	GPIO_07	
7	C125/RING	Jumper to EVK2
8	C107/DSR	Jumper to EVK2
9	C109/DCD	Jumper to EVK2
10	RESERVED	



42.4.4. ON_OFF & UNCONDITIONAL SHUTDOWN BUTTONS

The 2 Buttons present on the Interface should be used to control the Power ON and UNCONDITIONAL SHUTDOWN lines of the module.

The 2 Buttons on the EVK2 could not be used with the LE910 Interface.
For the GNSS capabilities refer to LE910 Hardware User Guide.

42.5. Content of the kit

Please check out the contents of your interface kit; if any of the items is missing, please contact your supplier.

Description	Quantity
LE910 INTERFACE	1
MINI USB CABLE	1



43. GPIO ports

A certain number of GPIO ports (General Purpose Input/Output) are available on every Telit Module Interface Board, giving you the possibility to drive digital devices and report their own status.

Some of these ports are dedicated. Refer to *Telit Product Description* and *Telit Hardware User Guide* to have all information about characteristics of every GPIO port.


You can consult the following paragraphs to see the displacement of GPIO on every Interface Board.



43.1. GPIO location

43.1.1. GM862 Interface

(Refer to schematic diagram 30276SE11150B)

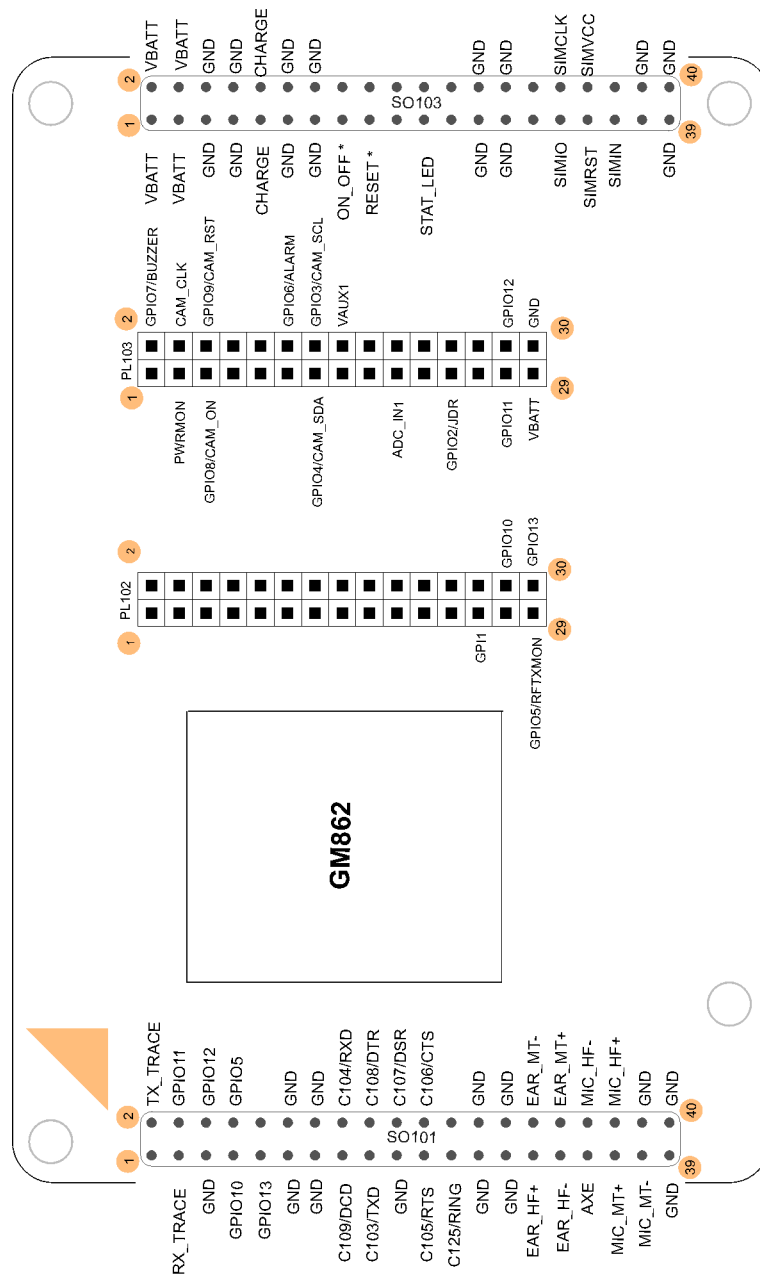


Position of GPIO ports on GM862 interface



43.1.3. GE863 Interfaces (p/n 3990250684 -3990250685-3990250703)

Refer to schematic diagrams 3\0276SE11151A-C; 30276SE11151A-D; 30276SE11151A-G

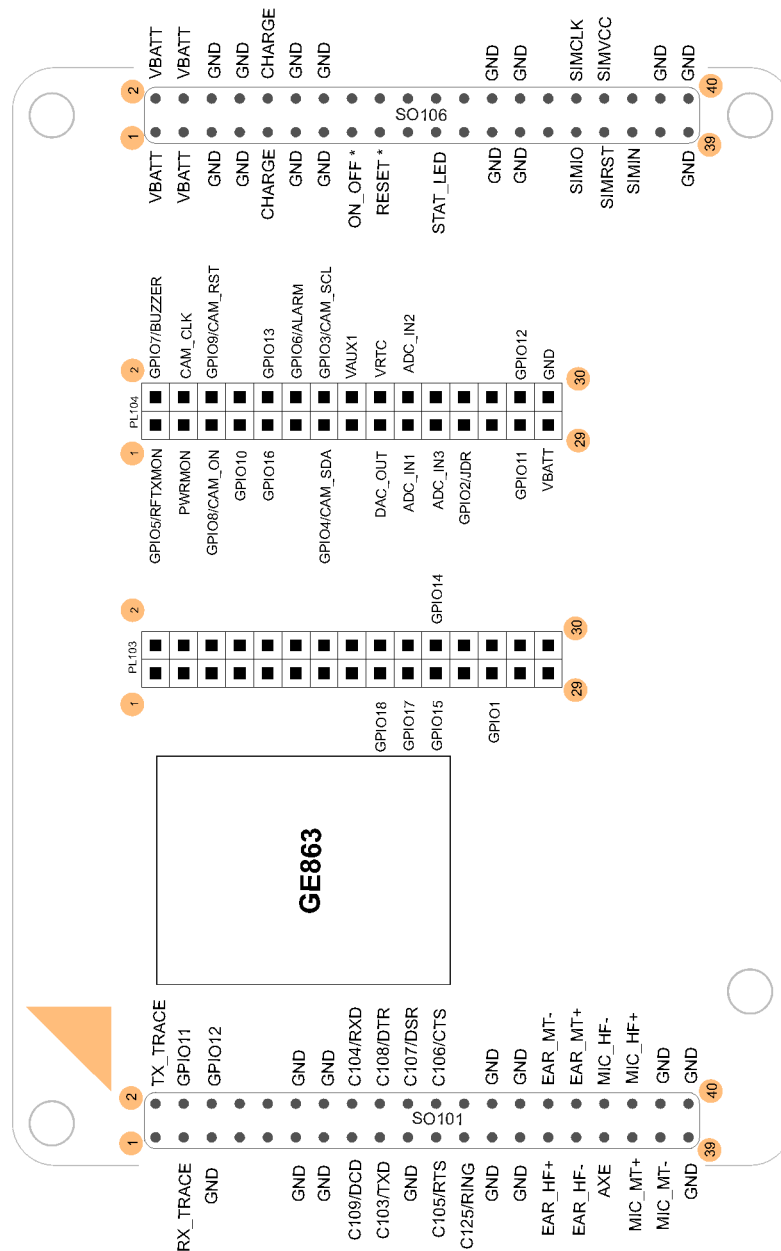


Position of GPIO ports on GE863 interfaces



43.1.4. GE864 Interface (p/n 3990250672)

(Refer to schematic diagram 30276SE1152B)

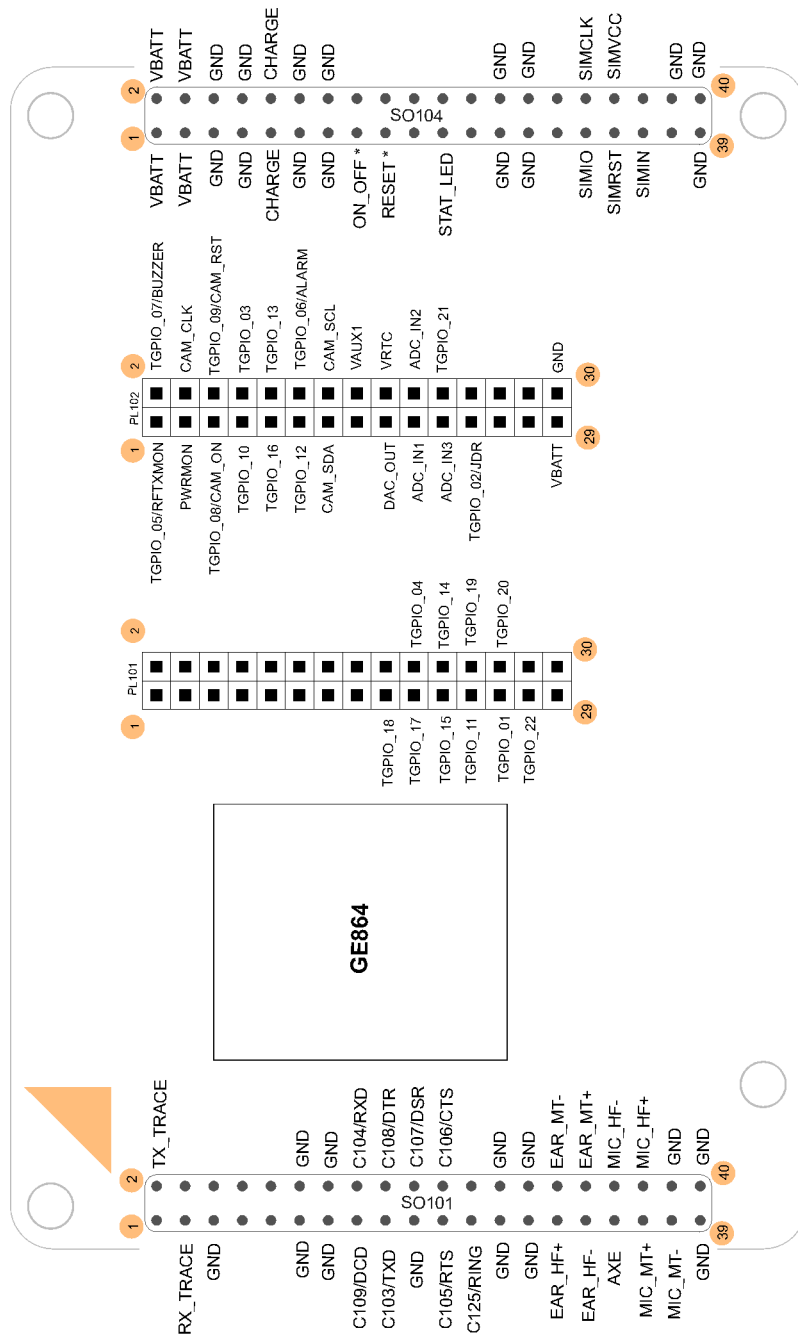


Position of GPIO ports on GE864 interface



43.1.5. GE864-GPS Interface (p/n 3990250822)

(Refer to schematic diagram 30373SE11439b)

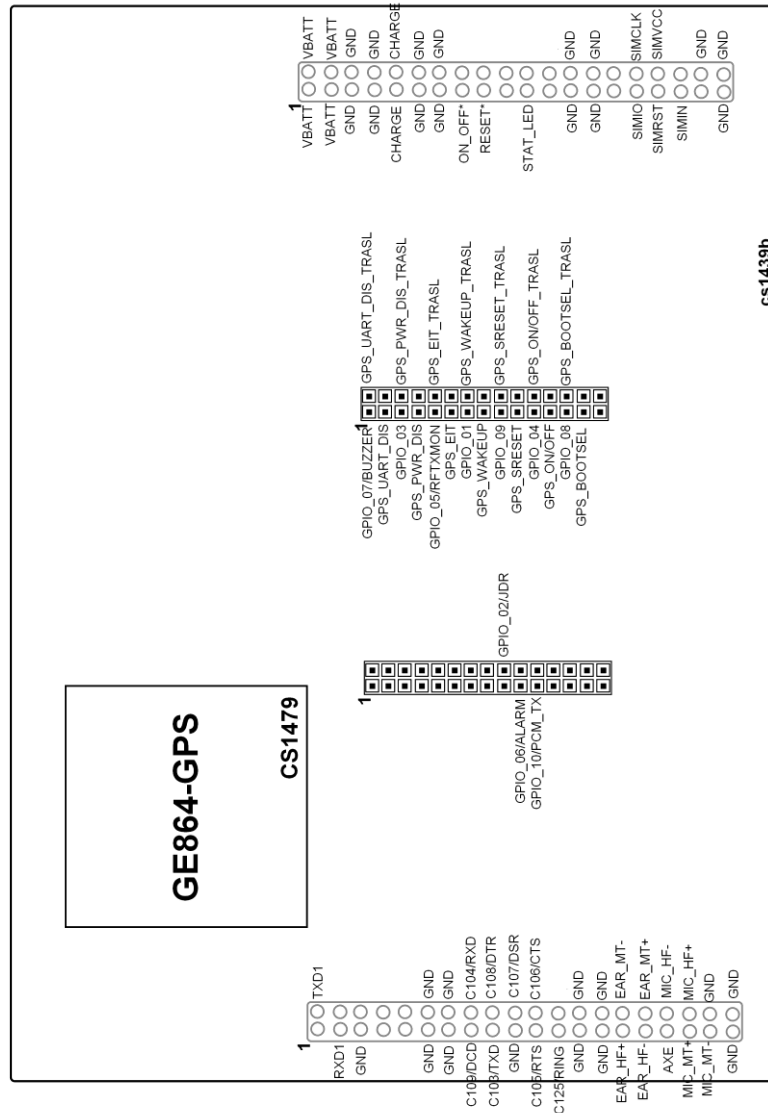


Position of GPIO ports on GE864-GPS interface



43.1.6. GE865/SE867-AGPS Interface (p/n 3990250814)

(Refer to schematic diagram 30311SE11433)

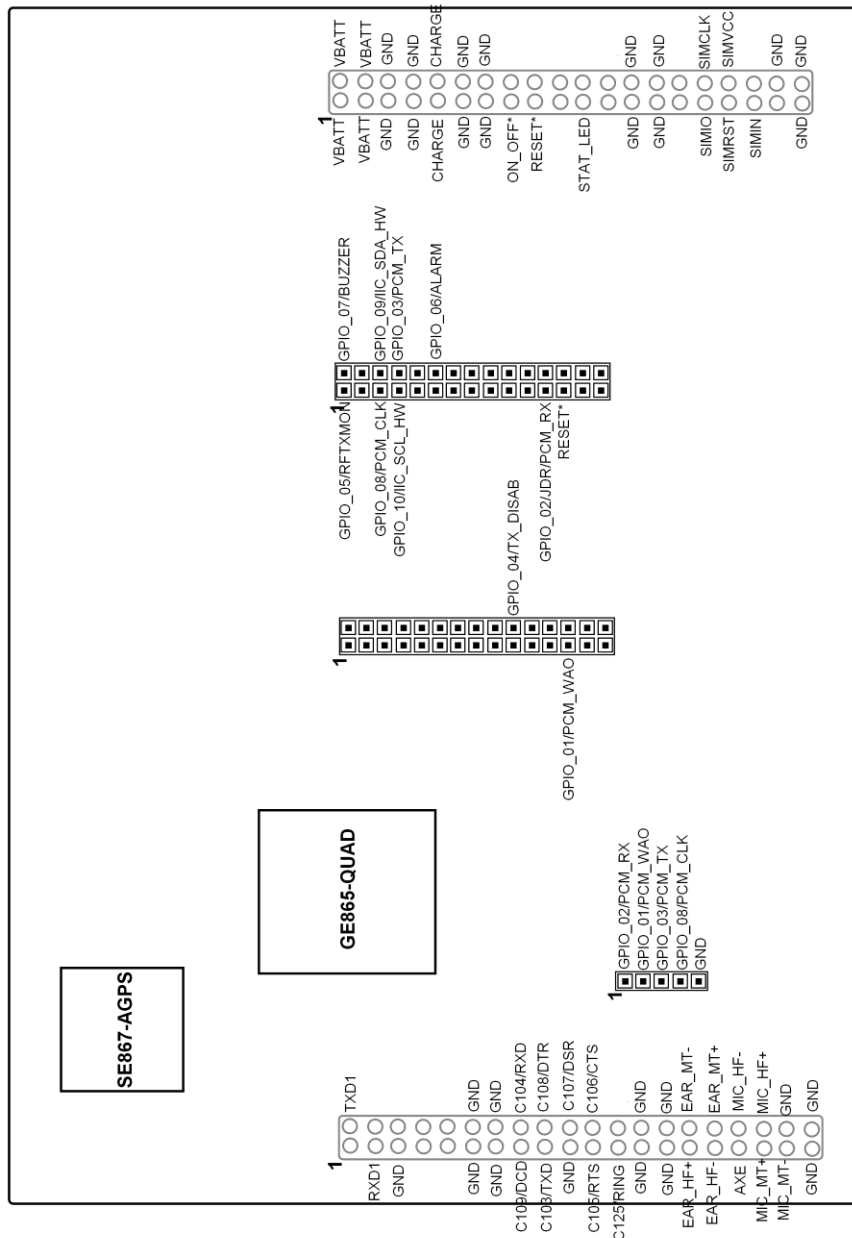


Position of GPIO ports on GE865/SE867-AGPS interface



43.1.7. GC864 Interface

(Refer to schematic diagram 30276SE111203B)

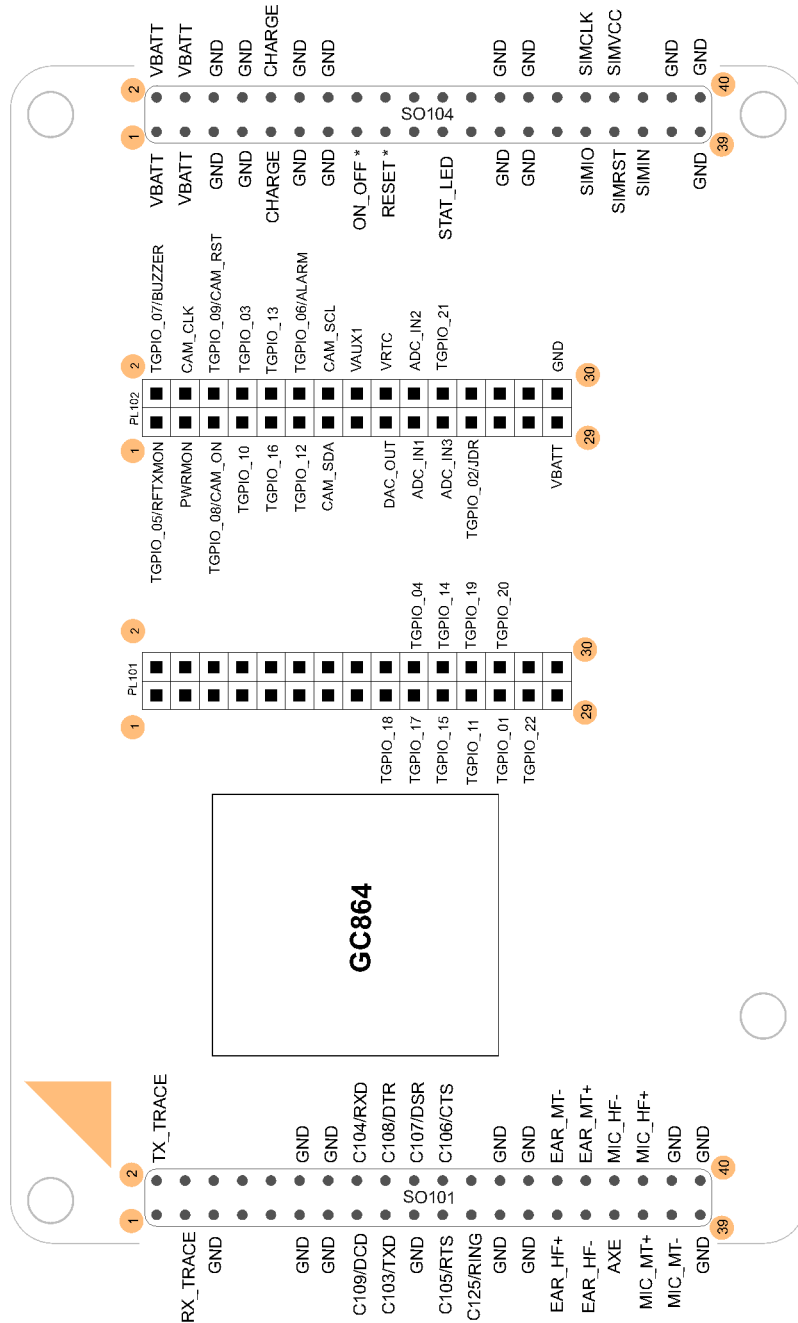


Position of GPIO ports on GC864 interface



43.1.8. GC864-C2 Interface (p/n 3990250683)


(Refer to schematic diagram 30276SE11231X)

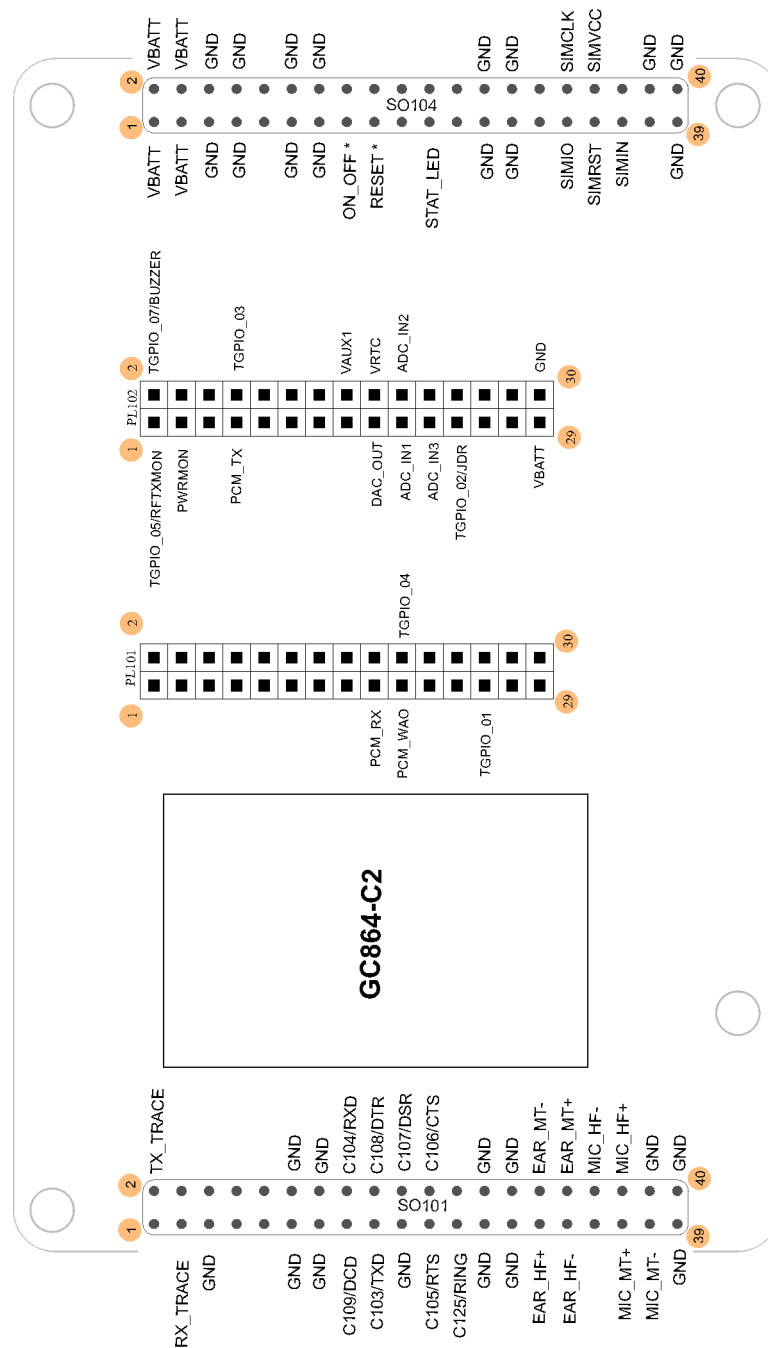

Position of GPIO ports on GC864-C2 interface



43.1.9. UC864 Interface

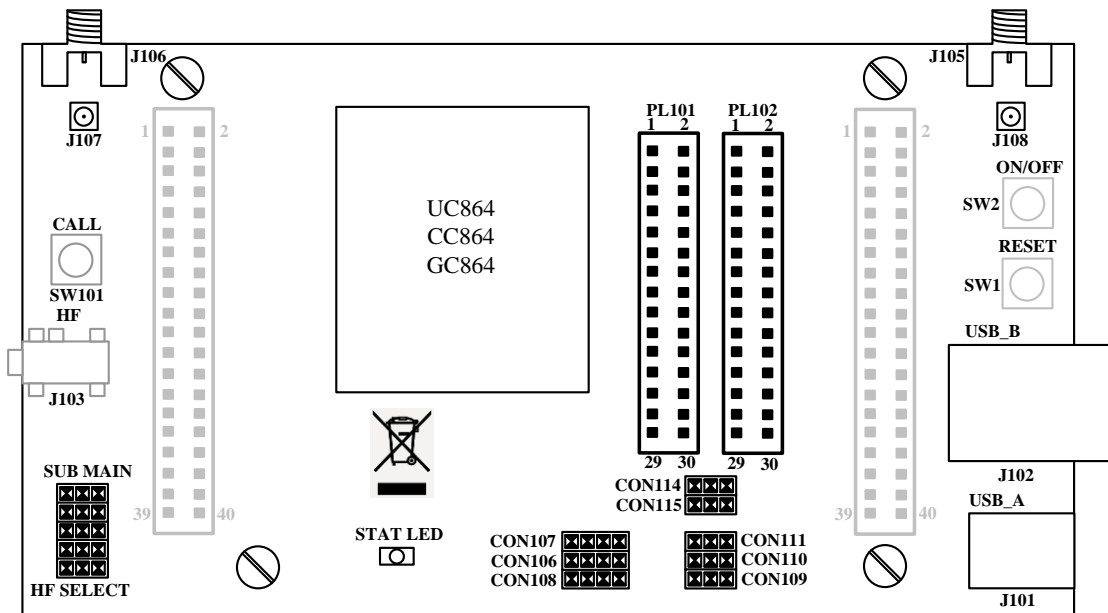

Position of GPIO on connectors of UC864 interface


PL101			
N.C	1	2	N.C
N.C	3	4	N.C
N.C	5	6	N.C
N.C	7	8	N.C
N.C	9	10	N.C
N.C	11	12	N.C
N.C	13	14	N.C
N.C	15	16	N.C
TGPIO_18/ PCM_RX	17	18	N.C
TGPIO_17/ PCM_SYNC	19	20	TGPIO_04
TGPIO_15	21	22	TGPIO_14
TGPIO_11	23	24	TGPIO_19
TGPIO_01	25	26	TGPIO_20
TGPIO_22	27	28	N.C
N.C	29	30	N.C

PL102			
TGPIO_05/ RTXMON	1	2	TGPIO_07/ BUZZER
PWRMON	3	4	RESERVED
TGPIO_08	5	6	TGPIO_09
TGPIO_10/ PCM_TX	7	8	TGPIO_03
TGPIO_16	9	10	TGPIO_13
TGPIO_12	11	12	TGPIO_06/ ALARM
PCM_CLOCK	13	14	USB_ID
N.C.	15	16	VAUX1
DAC_OUT	17	18	VRTC
ADC_IN1	19	20	ADC_IN2
ADC_IN3	21	22	TGPIO_21
TGPIO_02/JDR	23	24	N.C
N.C	25	26	N.C
RESERVED	27	28	RESERVED
VBATT	29	30	GND

GPIO pin positioning



43.1.10. HE910 Interface

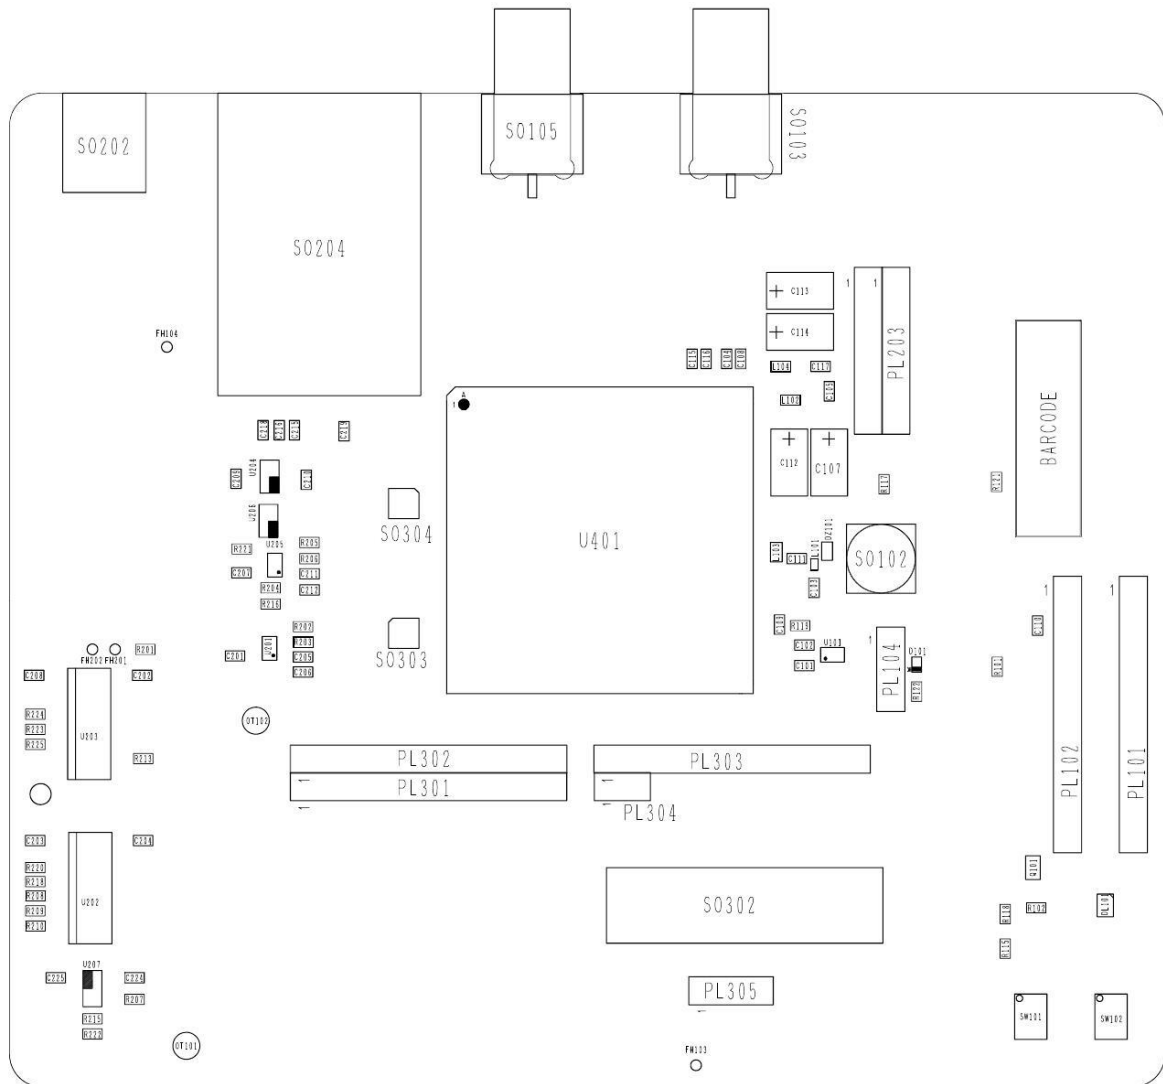

Position of GPIO on connectors of HE910 interface




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)

PL305		
Pin#	Pin Name	Description
1	-	Reserved
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V




43.1.11. GE910 Interface

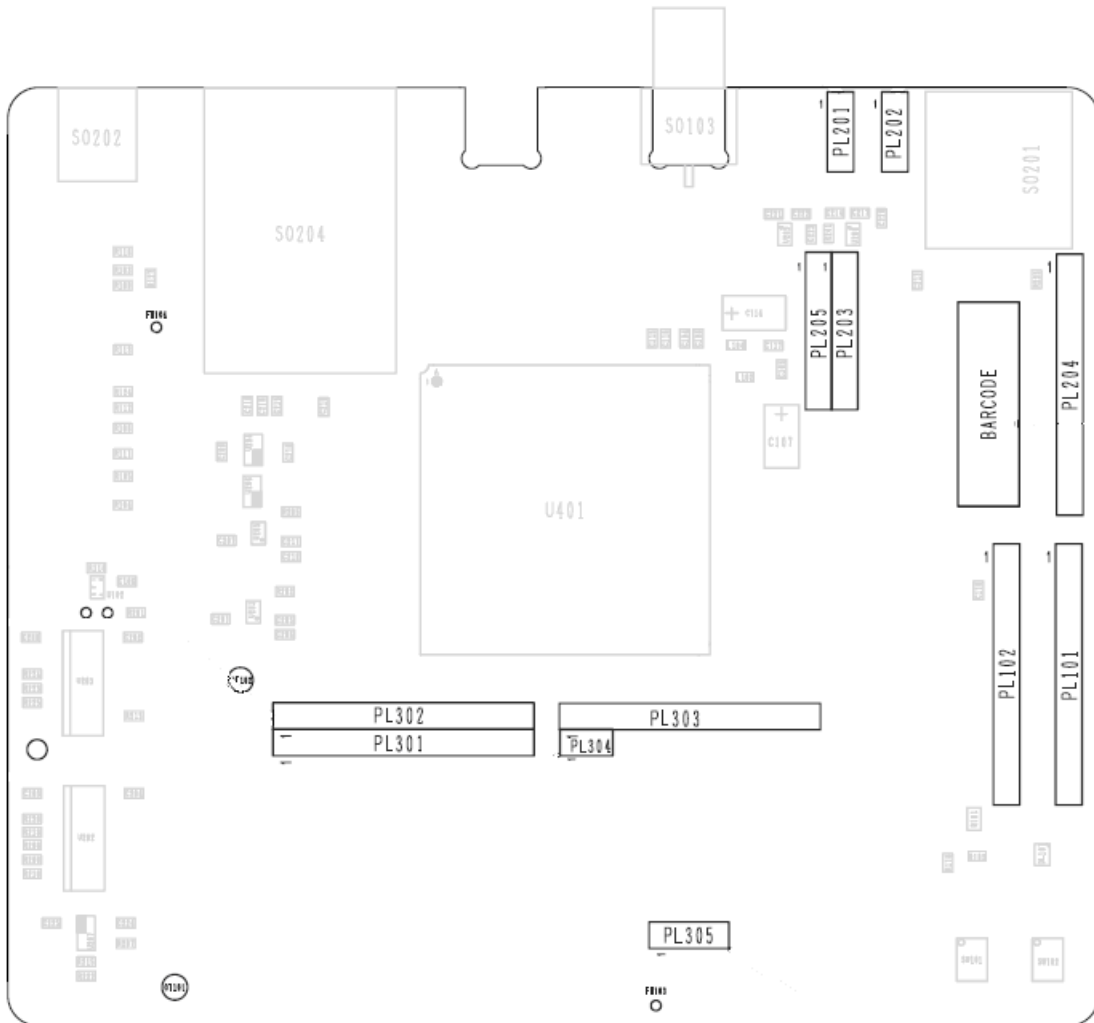

Position of GPIO on connectors of GE910 interface



43.1.12. DE910 Interface

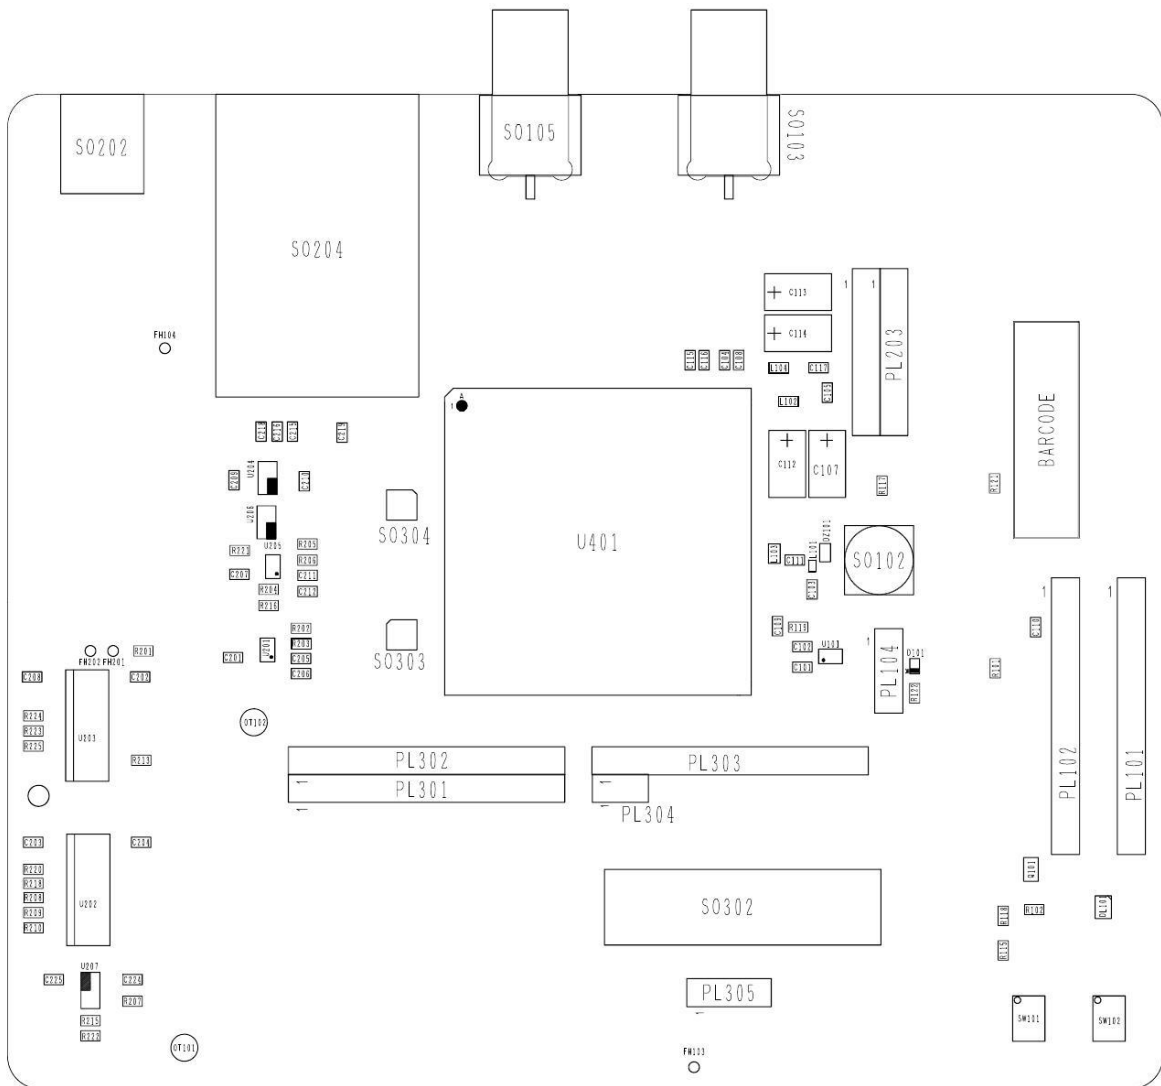

Position of GPIO on connectors of DE910 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)

PL305		
Pin#	Pin Name	Description
1	-	Reserved
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)



43.1.14. GL865 V3 Interface

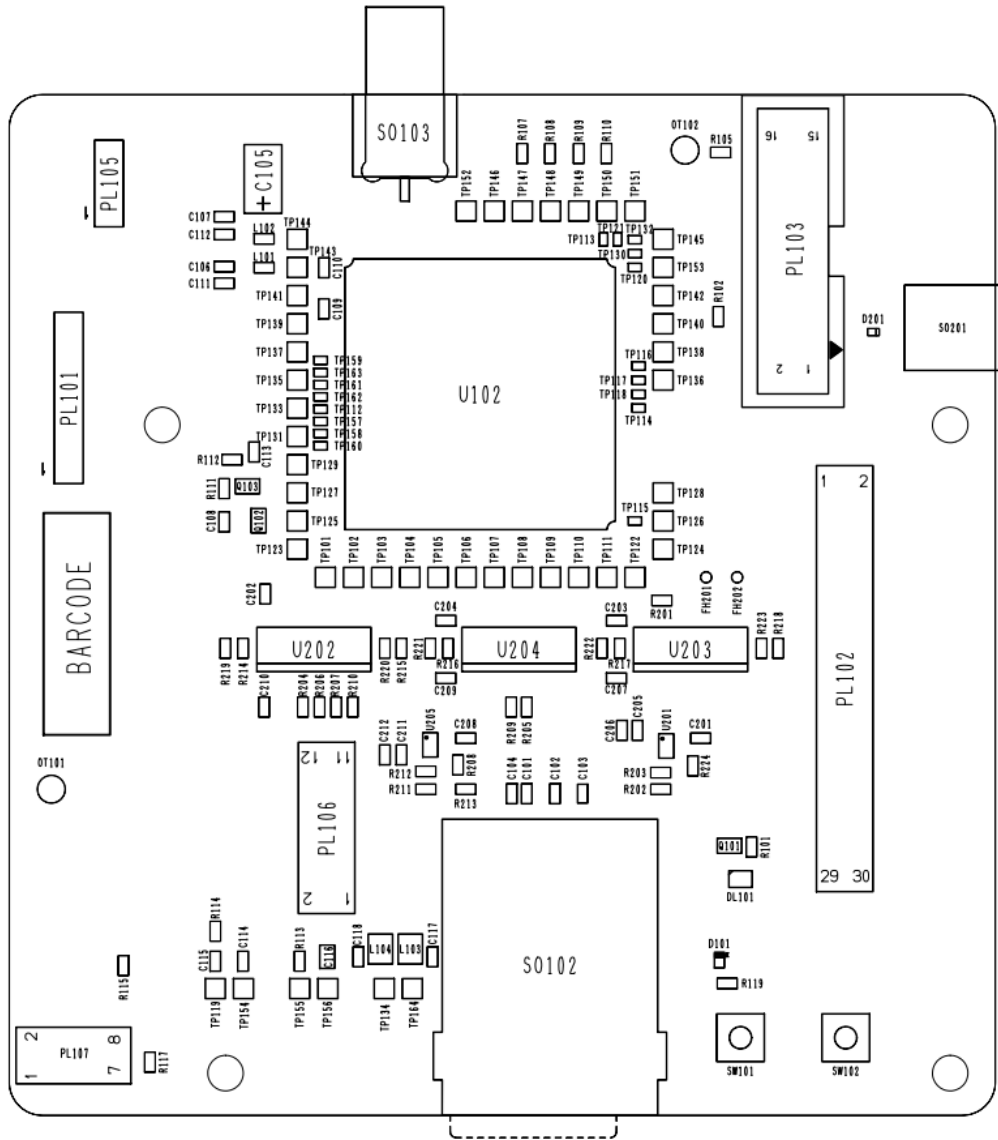

Position of GPIO on connectors of GL865 V3 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 6 (PL102) / Pin 4 (PL106)
GPIO_02	Pin 23 (PL102) / Pin 2 (PL106)
GPIO_03	Pin 8 (PL102) / Pin 6 (PL106)
GPIO_04	Pin 7 (PL102) / Pin 8 (PL106)
GPIO_05	Pin 1 (PL102)
GPIO_06	Pin 12 (PL102)
GPIO_07	Pin 2 (PL102) / Pin 7 (PL106) / Pin 3 (PL101)
GPIO_08	Pin 5 (PL102) / Pin 9 (PL106) / Pin 4 (PL101)




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 6 (PL102) / Pin 4 (PL106)
GPIO_02	Pin 23 (PL102) / Pin 2 (PL106)
GPIO_03	Pin 8 (PL102) / Pin 6 (PL106)
GPIO_04	Pin 7 (PL102) / Pin 8 (PL106)
GPIO_05	Pin 1 (PL102)
GPIO_06	Pin 12 (PL102)
GPIO_07	Pin 2 (PL102) / Pin 7 (PL106) / Pin 3 (PL101)
GPIO_08	Pin 5 (PL102) / Pin 9 (PL106) / Pin 4 (PL101)



43.1.16. HE920 Family Interface

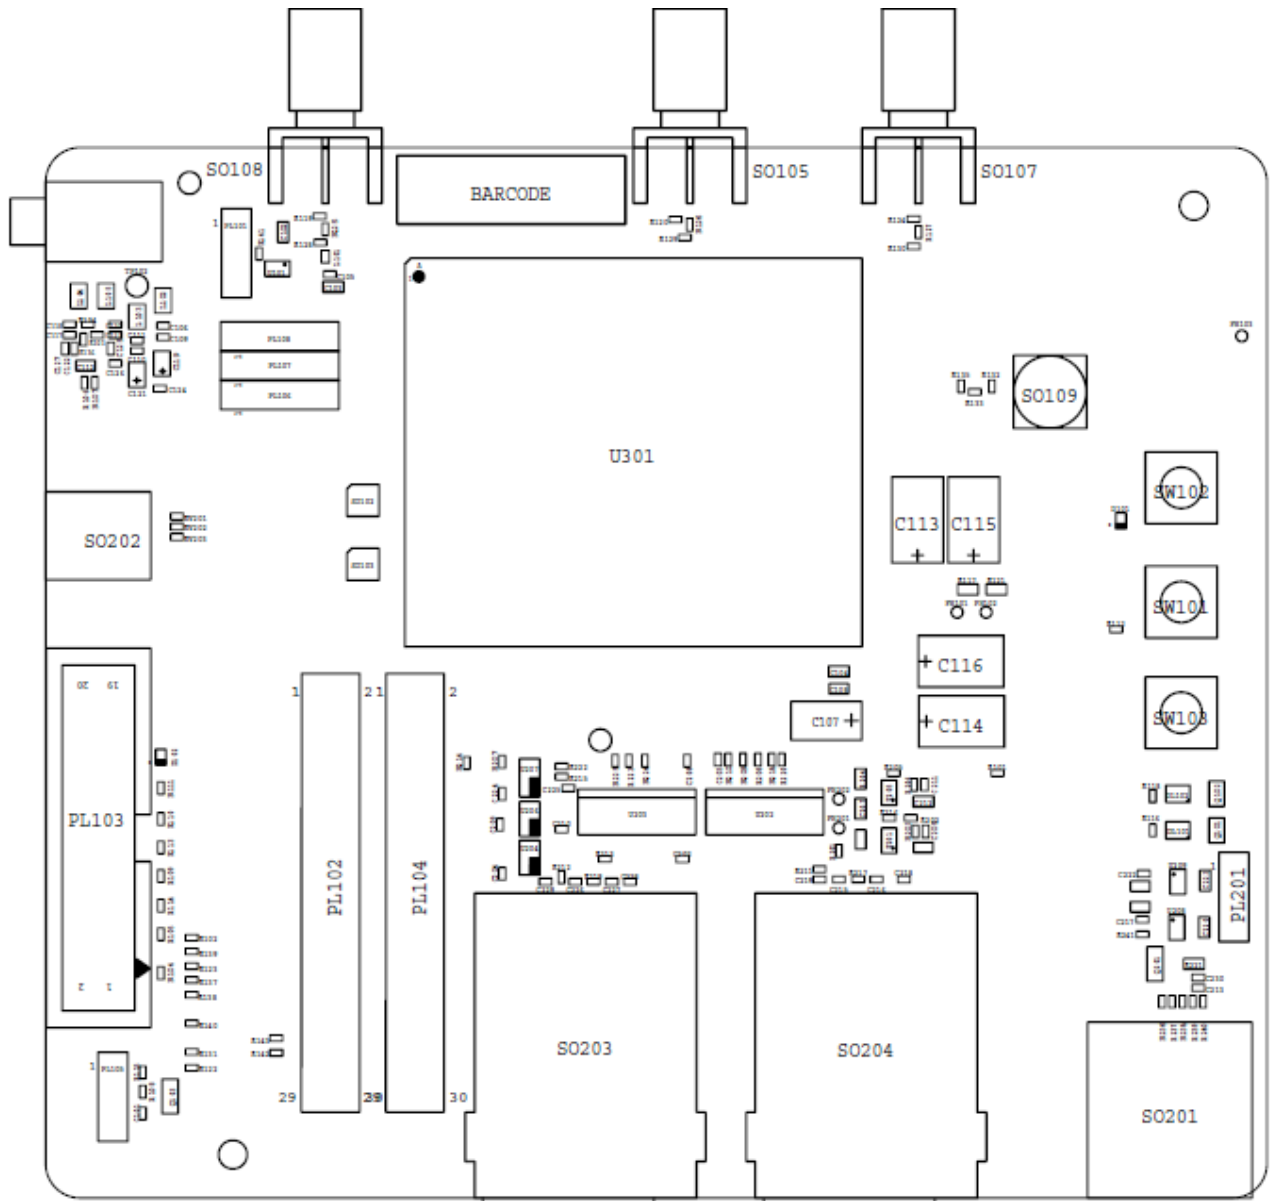

Position of GPIO on connectors of HE920 interface



The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 25 (PL102)
GPIO_02	Pin 23 (PL104)
GPIO_03	Pin 8 (PL104)
GPIO_04	Pin 20 (PL102)
GPIO_05	Pin 1 (PL104)
GPIO_06	Pin 12 (PL104)
GPIO_07	Pin 2 (PL104)
GPIO_08	Pin 5 (PL104)
GPIO_09	Pin 6 (PL104)
GPIO_10	Pin 7 (PL104)




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)

PL305		
Pin#	Pin Name	Description
1	-	Reserved
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



43.1.18. UE910 V2 Interface

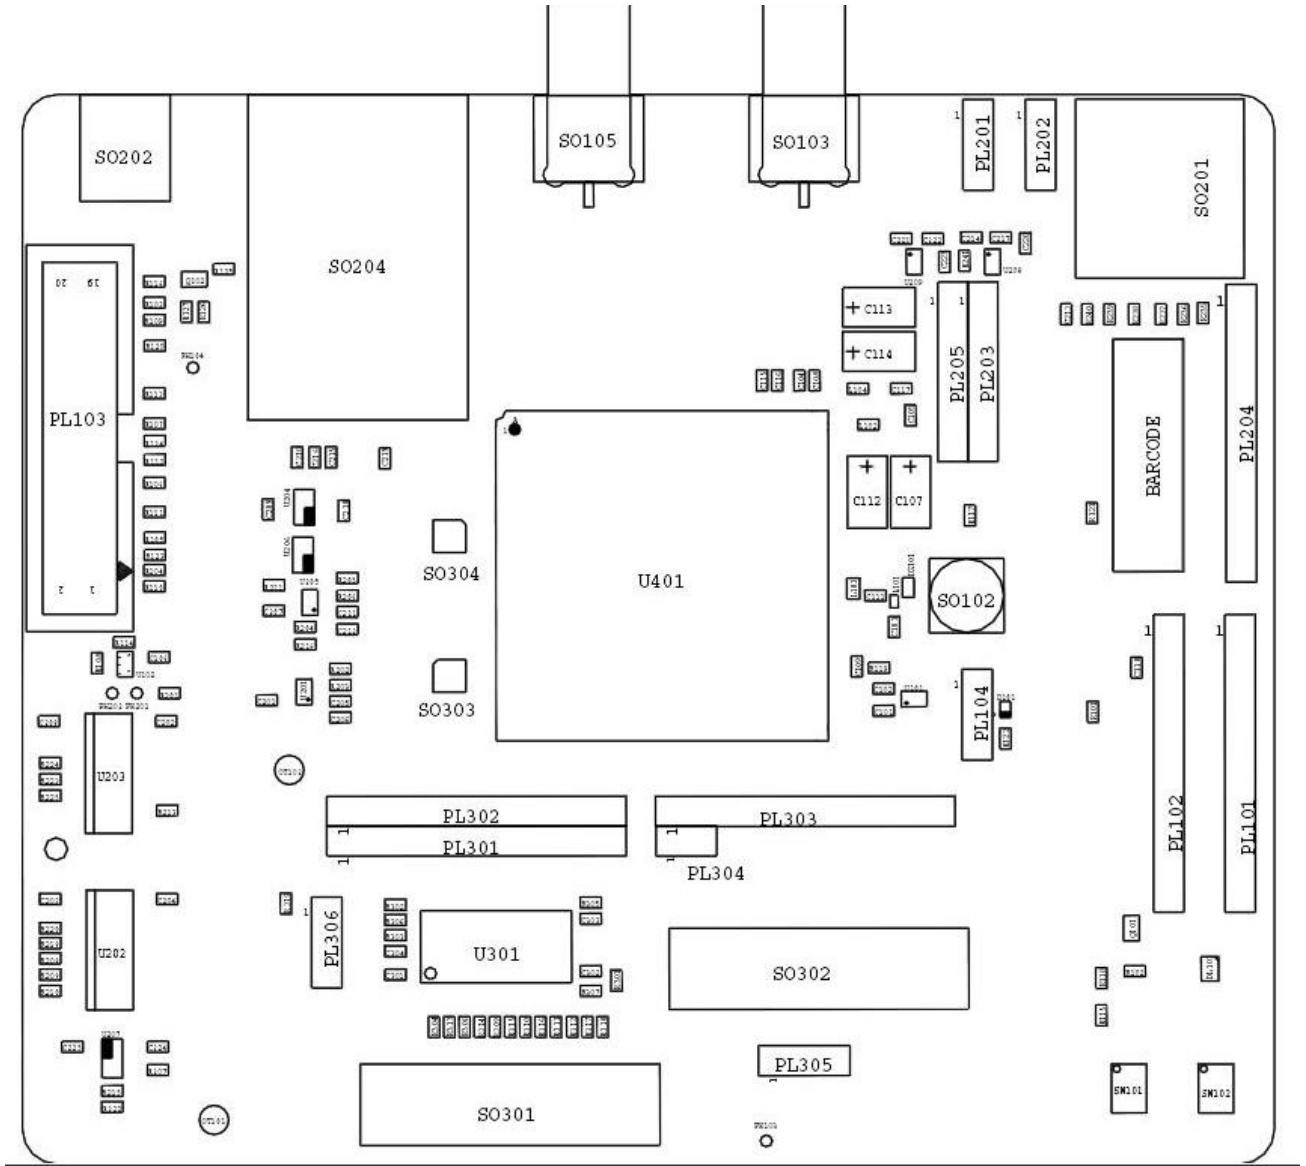

Position of GPIO on connectors of UE910 V2 interface




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)

PL305		
Pin#	Pin Name	Description
1	-	Reserved
2	VDD_IO	Input pin for the bus supply
3	VIO_1V8	VIO supply at 1.8V



43.1.20. GE866-QUAD Interface

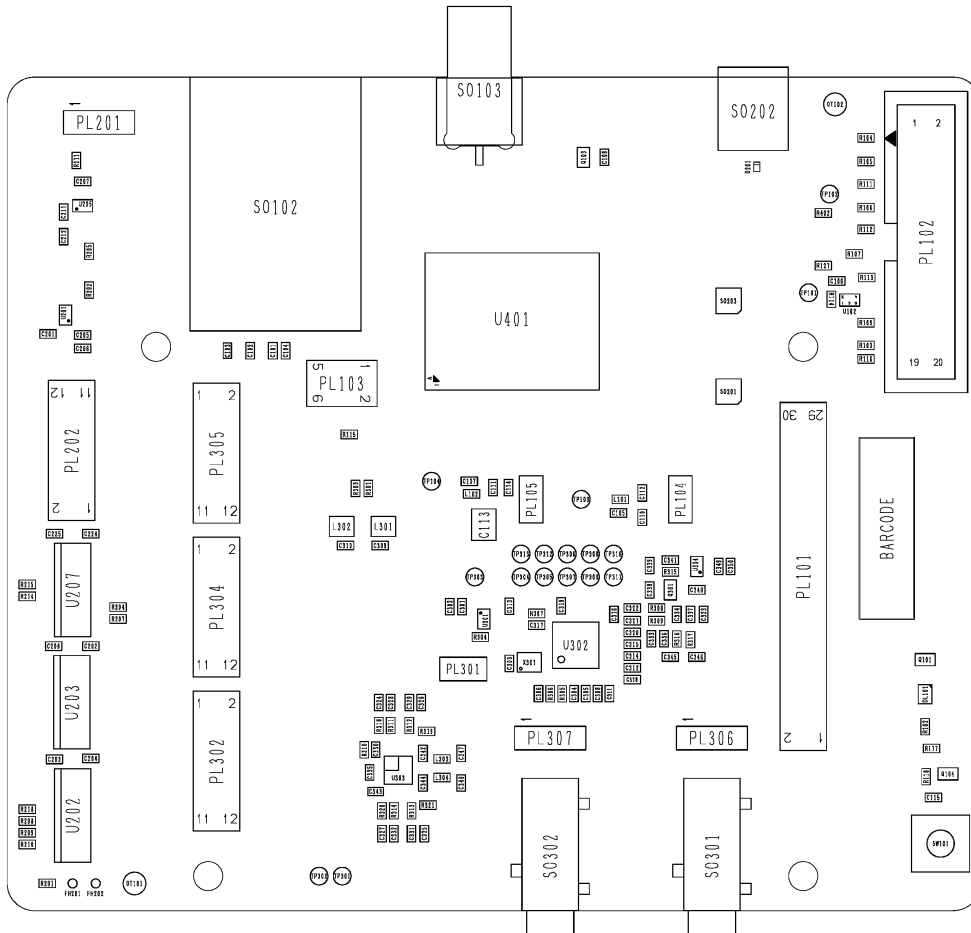


Layout of GE866-QUAD Interface

Pin Name	Pin/Connector
GPIO_01	Pin 6 (PL101) / Pin 3 (PL302)
GPIO_02	Pin 23 (PL101) / Pin 1 (PL302)
GPIO_03	Pin 8 (PL101) / Pin 5 (PL302)
GPIO_04	Pin 7 (PL101) / Pin 7 (PL302)
GPIO_05	Pin 1 (PL101) / Pin 2 (PL103) / Pin 11 (PL302)
GPIO_06	Pin 12 (PL101) / Pin 4 (PL103) / Pin 9 (PL302)
GPIO_07	Pin 5 (PL101) / Pin 6 (PL103)



43.1.21. UE866 Interface

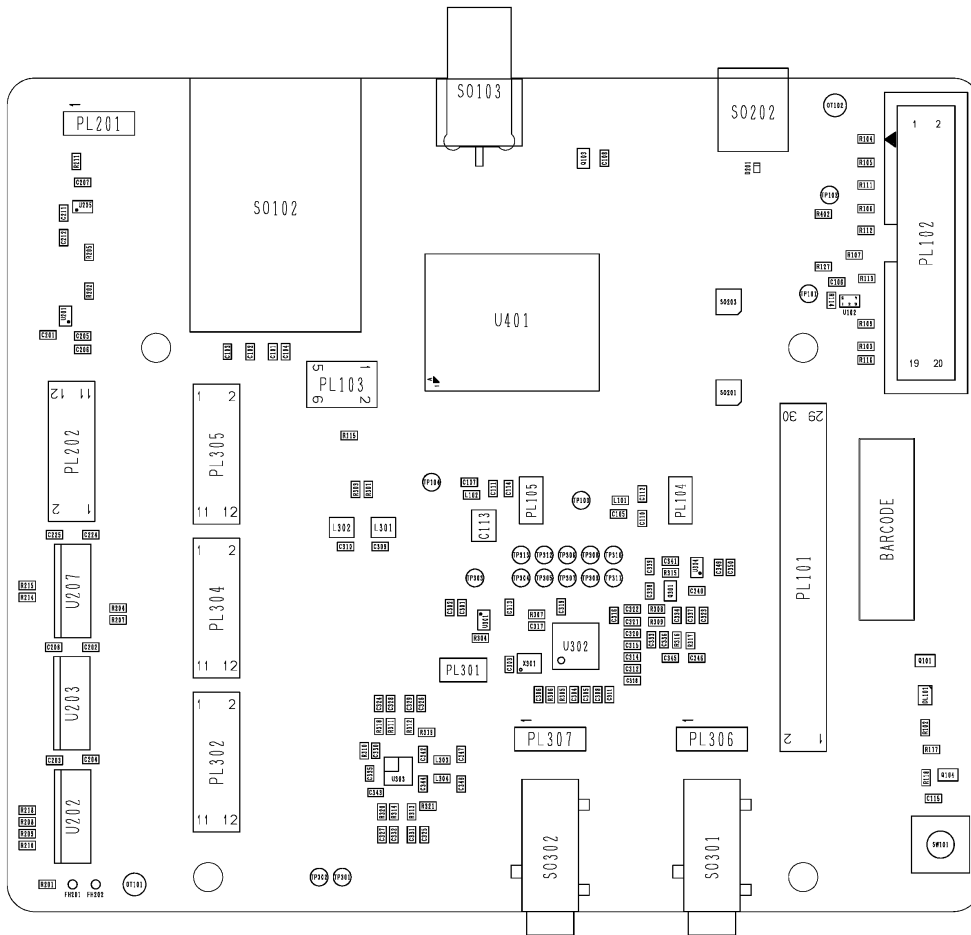


Layout of UE866 Interface

Pin Name	Pin/Connector
GPIO_01	Pin 6 (PL101) / Pin 3 (PL302)
GPIO_02	Pin 23 (PL101) / Pin 1 (PL302)
GPIO_03	Pin 8 (PL101) / Pin 5 (PL302)
GPIO_04	Pin 7 (PL101) / Pin 7 (PL302)
GPIO_05	Pin 1 (PL101) / Pin 2 (PL103) / Pin 11 (PL302)
GPIO_06	Pin 12 (PL101) / Pin 4 (PL103) / Pin 9 (PL302)
GPIO_07	Pin 5 (PL101) / Pin 6 (PL103)



43.1.22. LE910 Interface

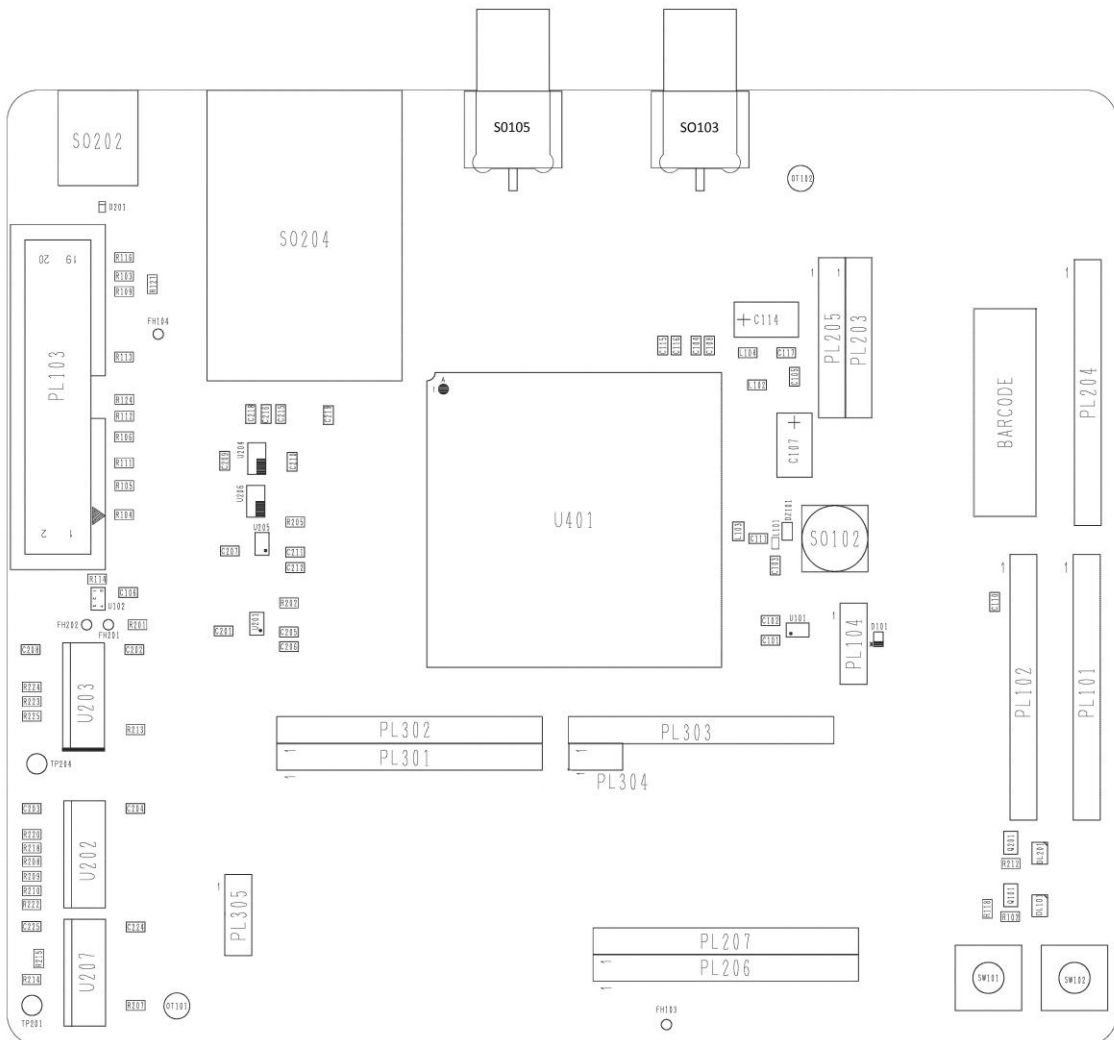

Position of GPIO on connectors of LE910 interface




The connectors are carrying the following signals:

Pin Name	Pin/Connector
GPIO_01	Pin 1 (PL302)
GPIO_02	Pin 2 (PL302)
GPIO_03	Pin 3 (PL302)
GPIO_04	Pin 4 (PL302)
GPIO_05	Pin 6 (PL102)
GPIO_06	Pin 5 (PL302)
GPIO_07	Pin 6 (PL302)
GPIO_08	Pin 6 (PL303)
GPIO_09	Pin 7 (PL303)
GPIO_10	Pin 8 (PL303)



Telit EVK2 User Guide


1w0300704 Rev.19 – 2015/01/26

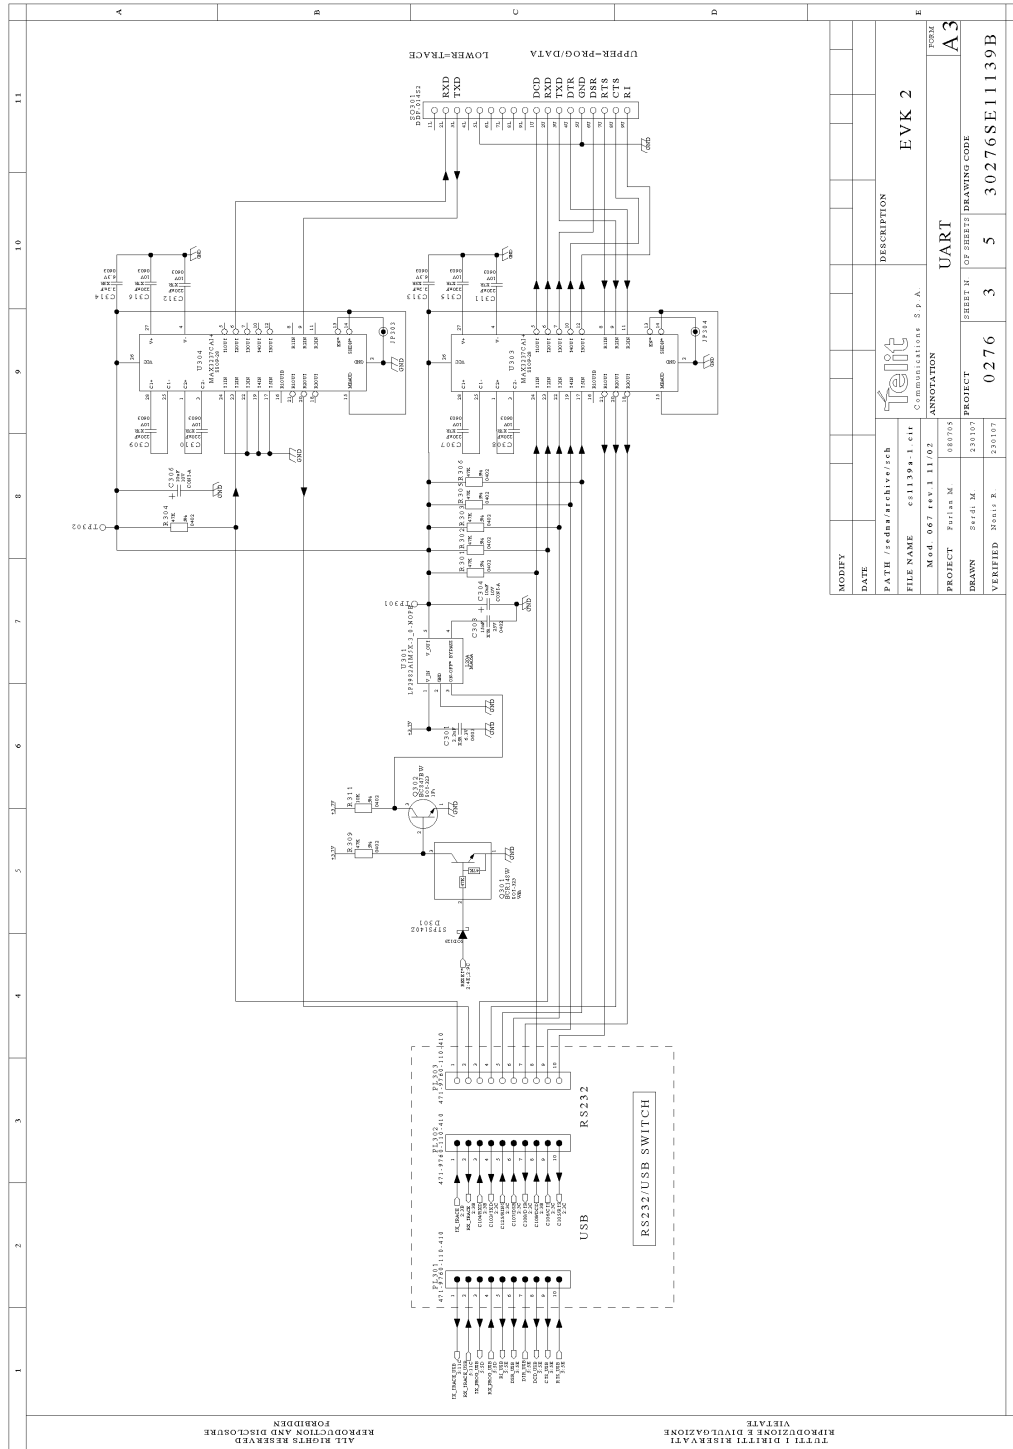


MODIFY	DATE	DESCRIPTION
		EVK 2

FILE NAME	cs1139a-1.cnt	COMMUNICATIONS S.p.A.
PROJECT	Parlan M	080705
DRAWN	Stefano M.	220107
VERIFIED	Stefano R.	220107
PROJECT	0276	3
SHEET N. OF SHEET	5	30276SE11139B
ANNOTATION	UART	A3




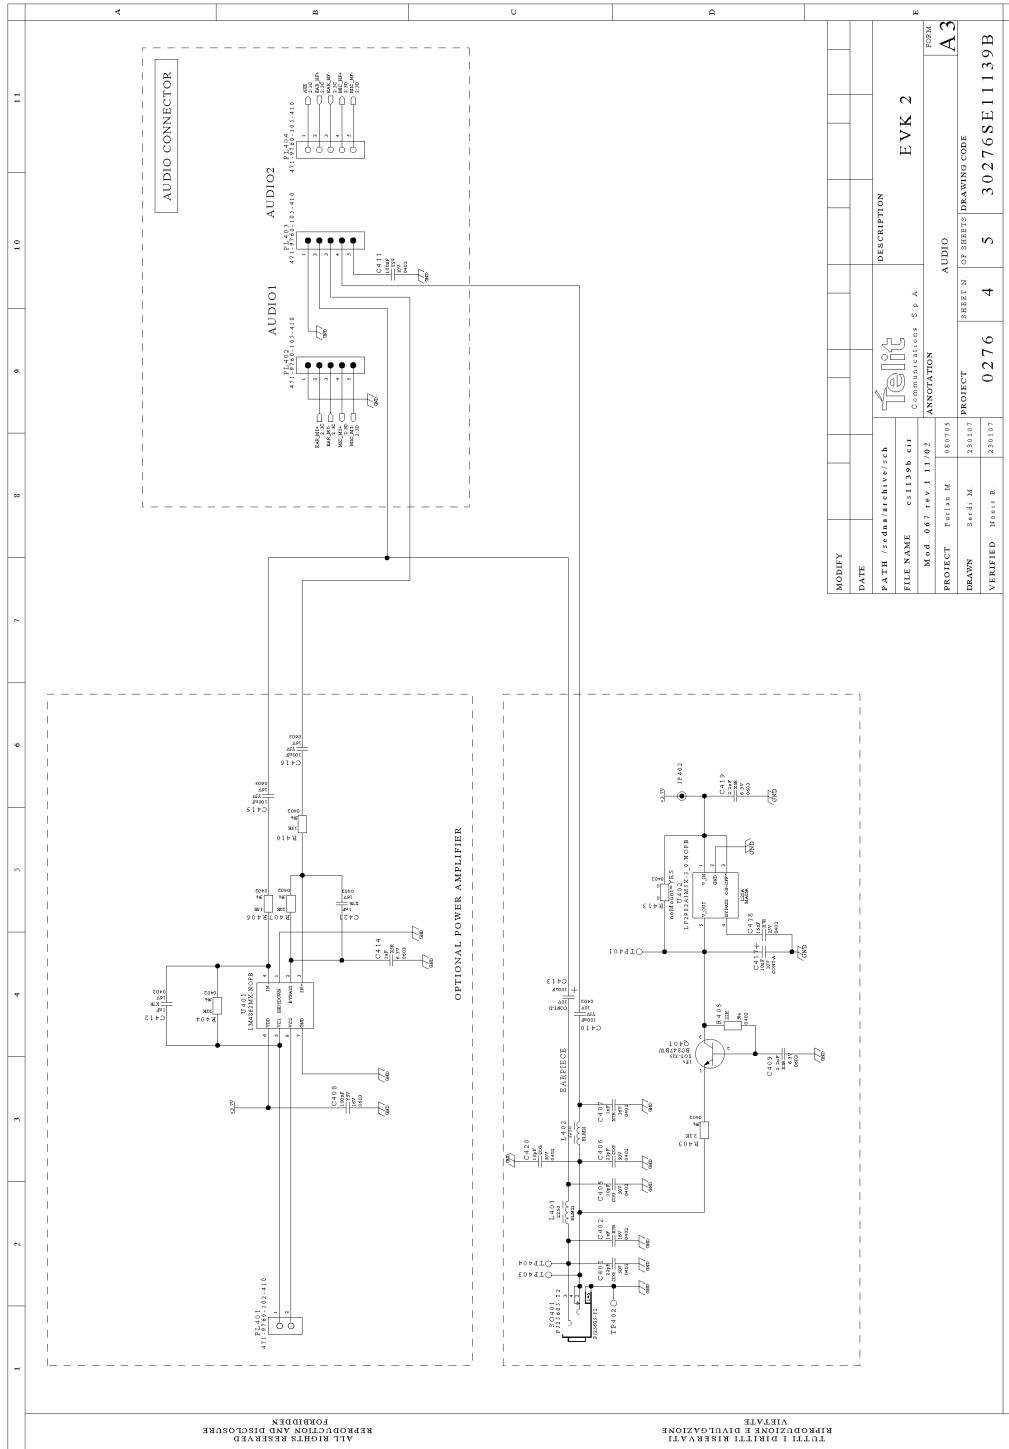


Telit EVK2 User Guide
1w0300704 Rev.19 - 2015/01/26

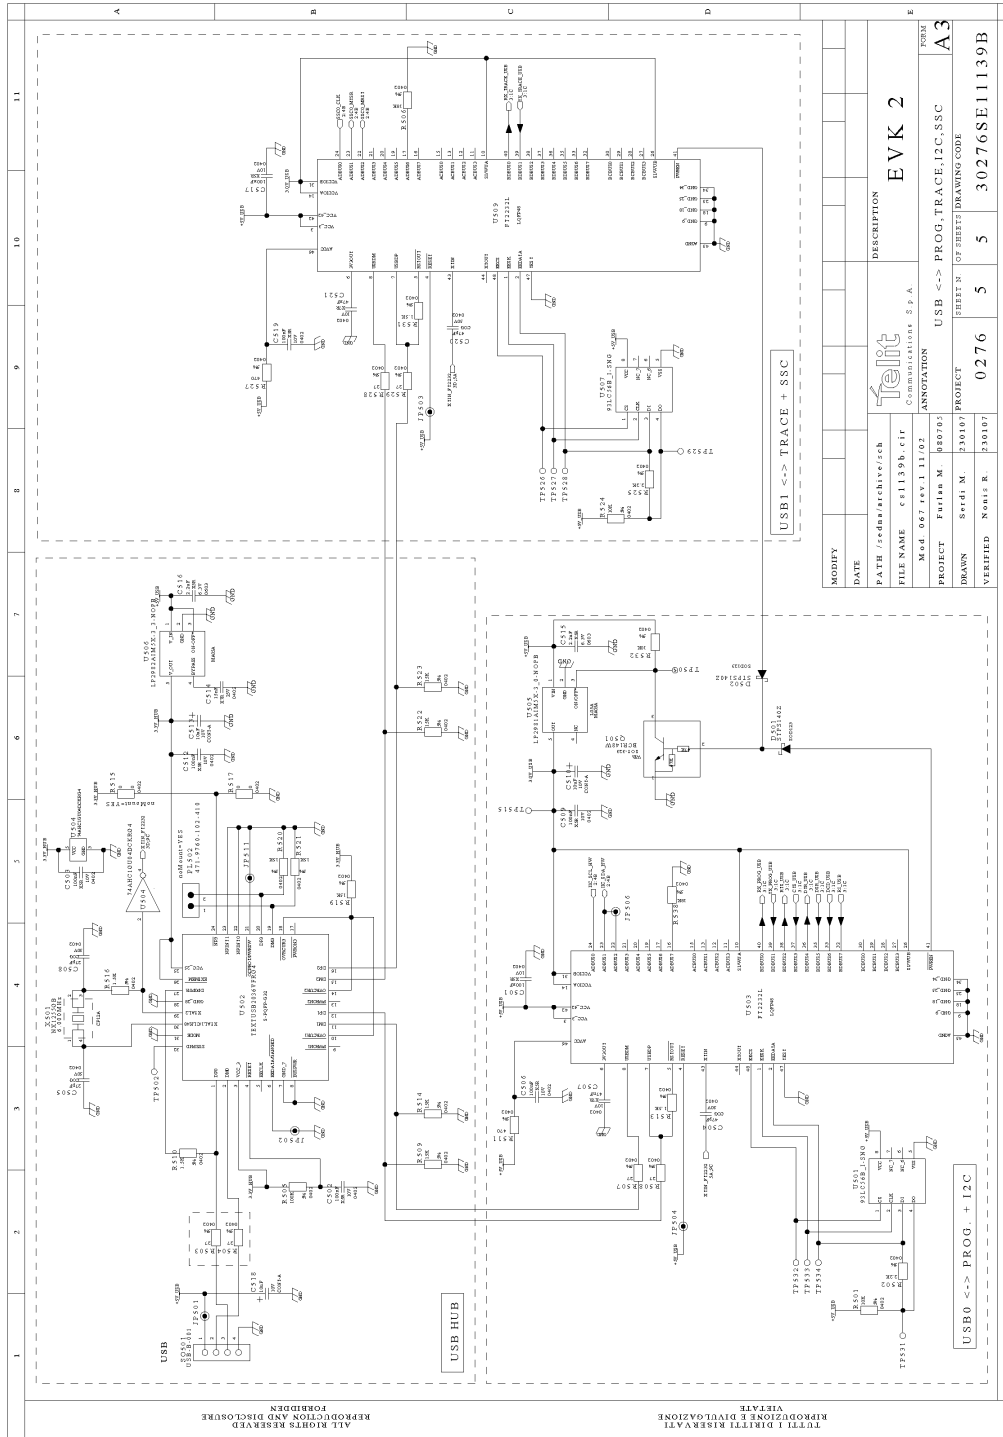


44.3. GE863 Interface Board

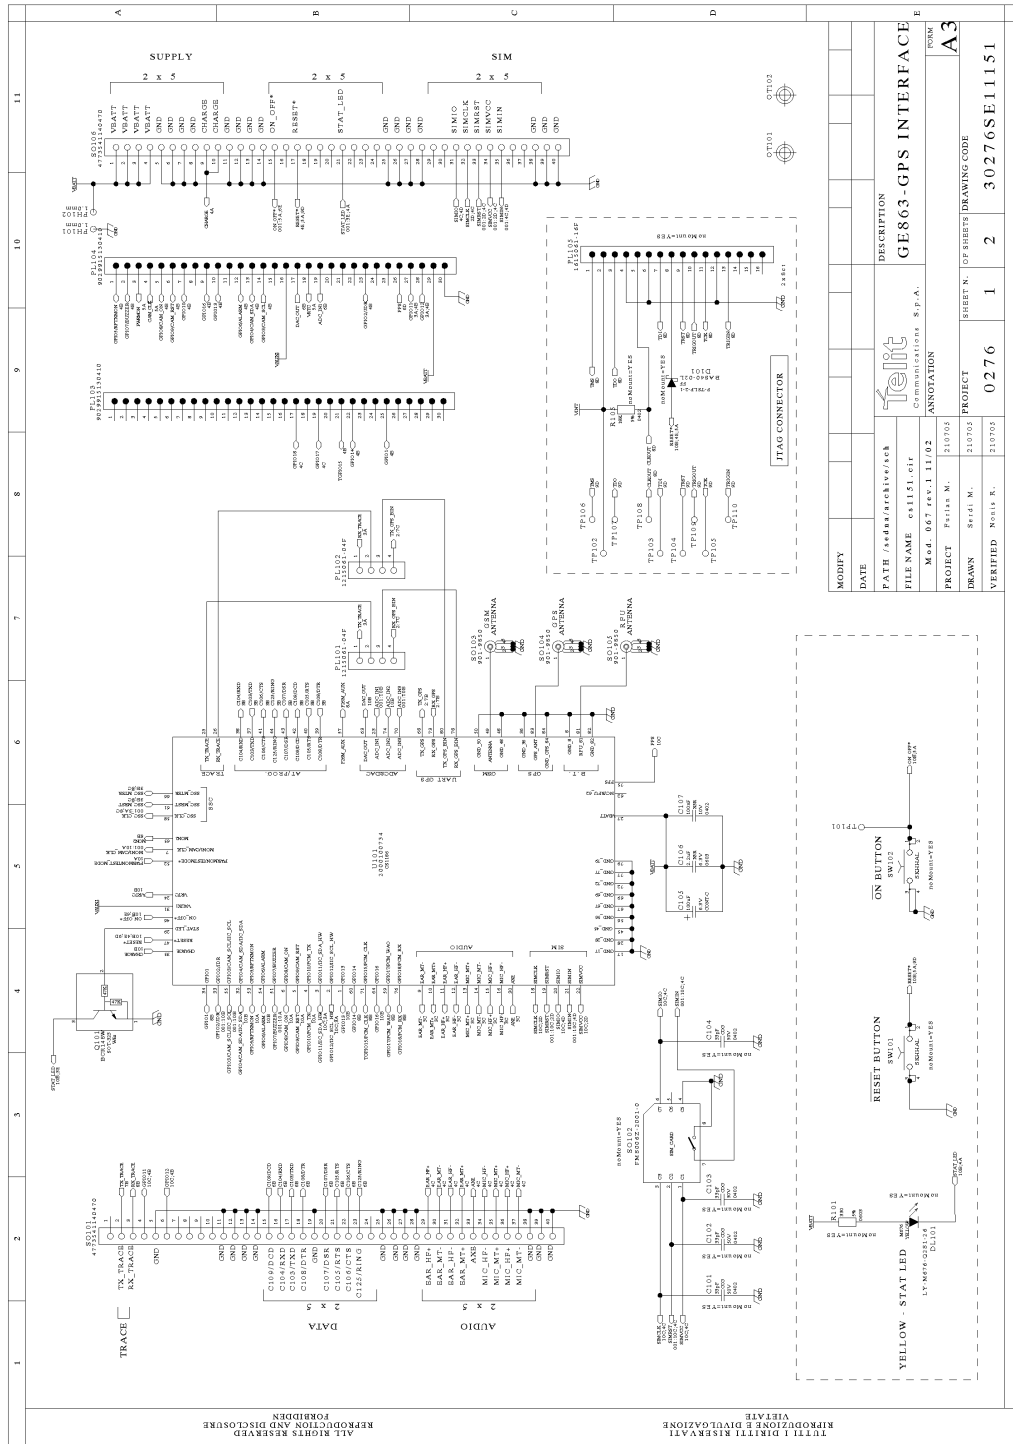


44.4. GE864 Interface board

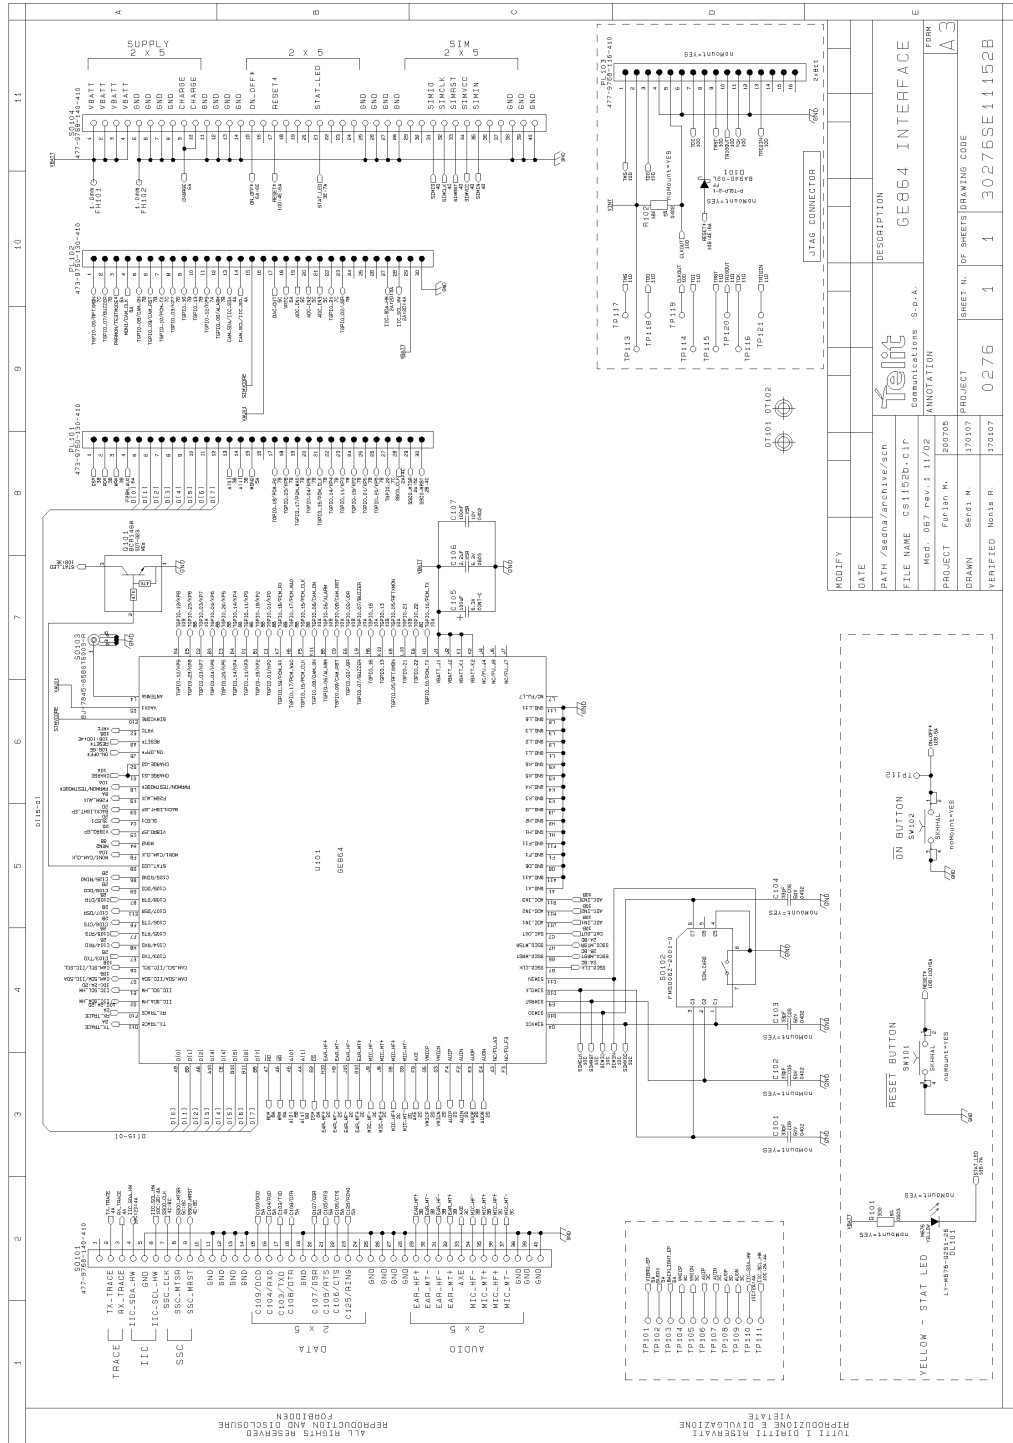


44.5. GE864 Interface board - Automotive

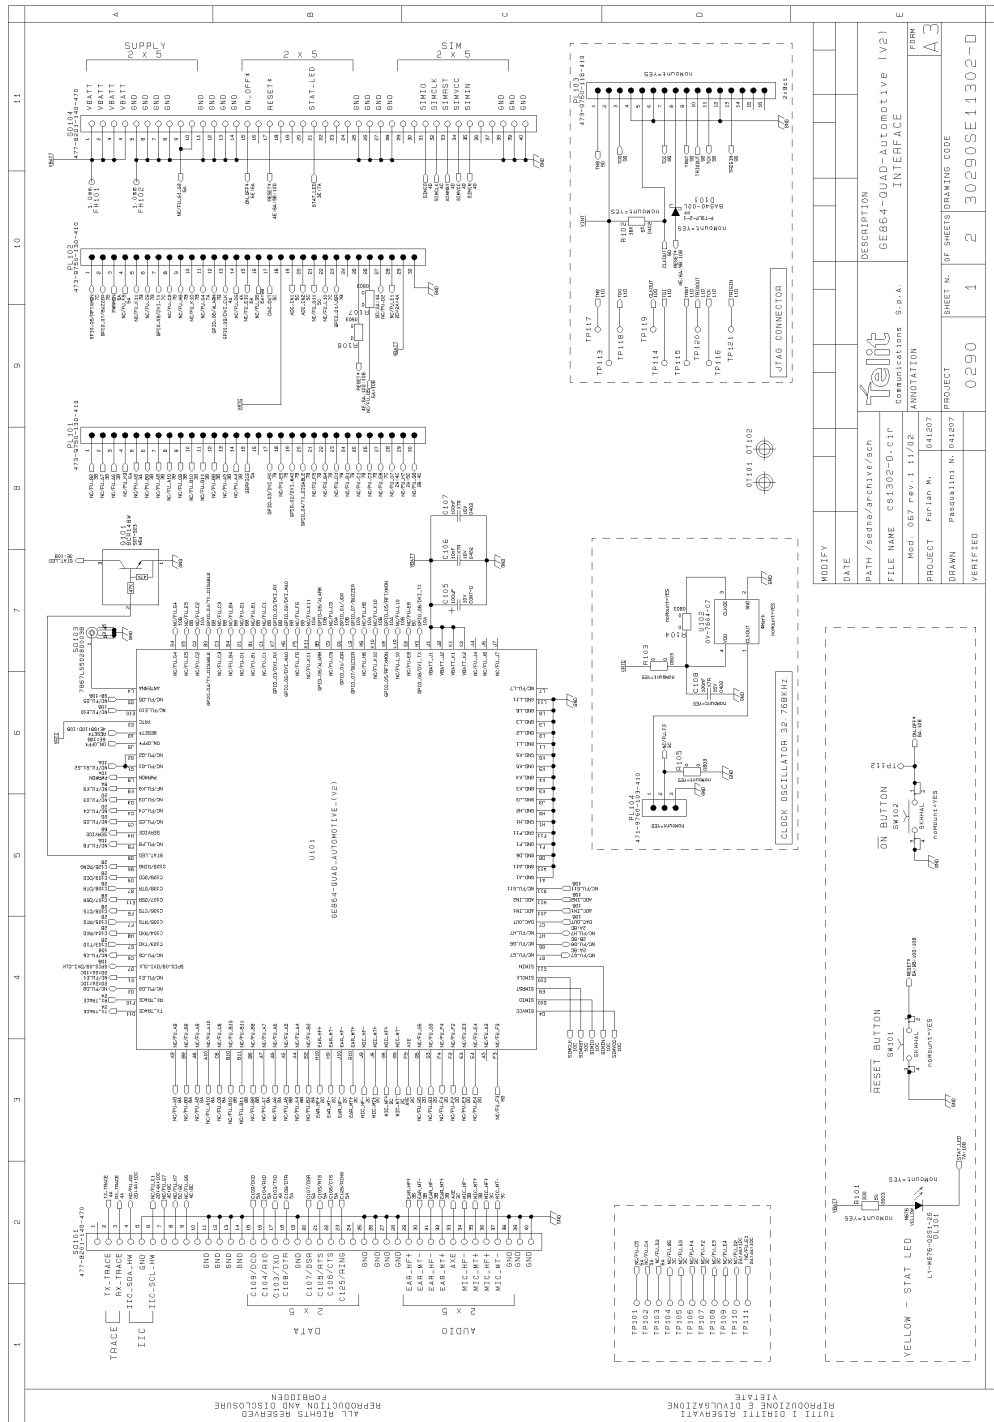


44.6. GE864 Interface board – V2

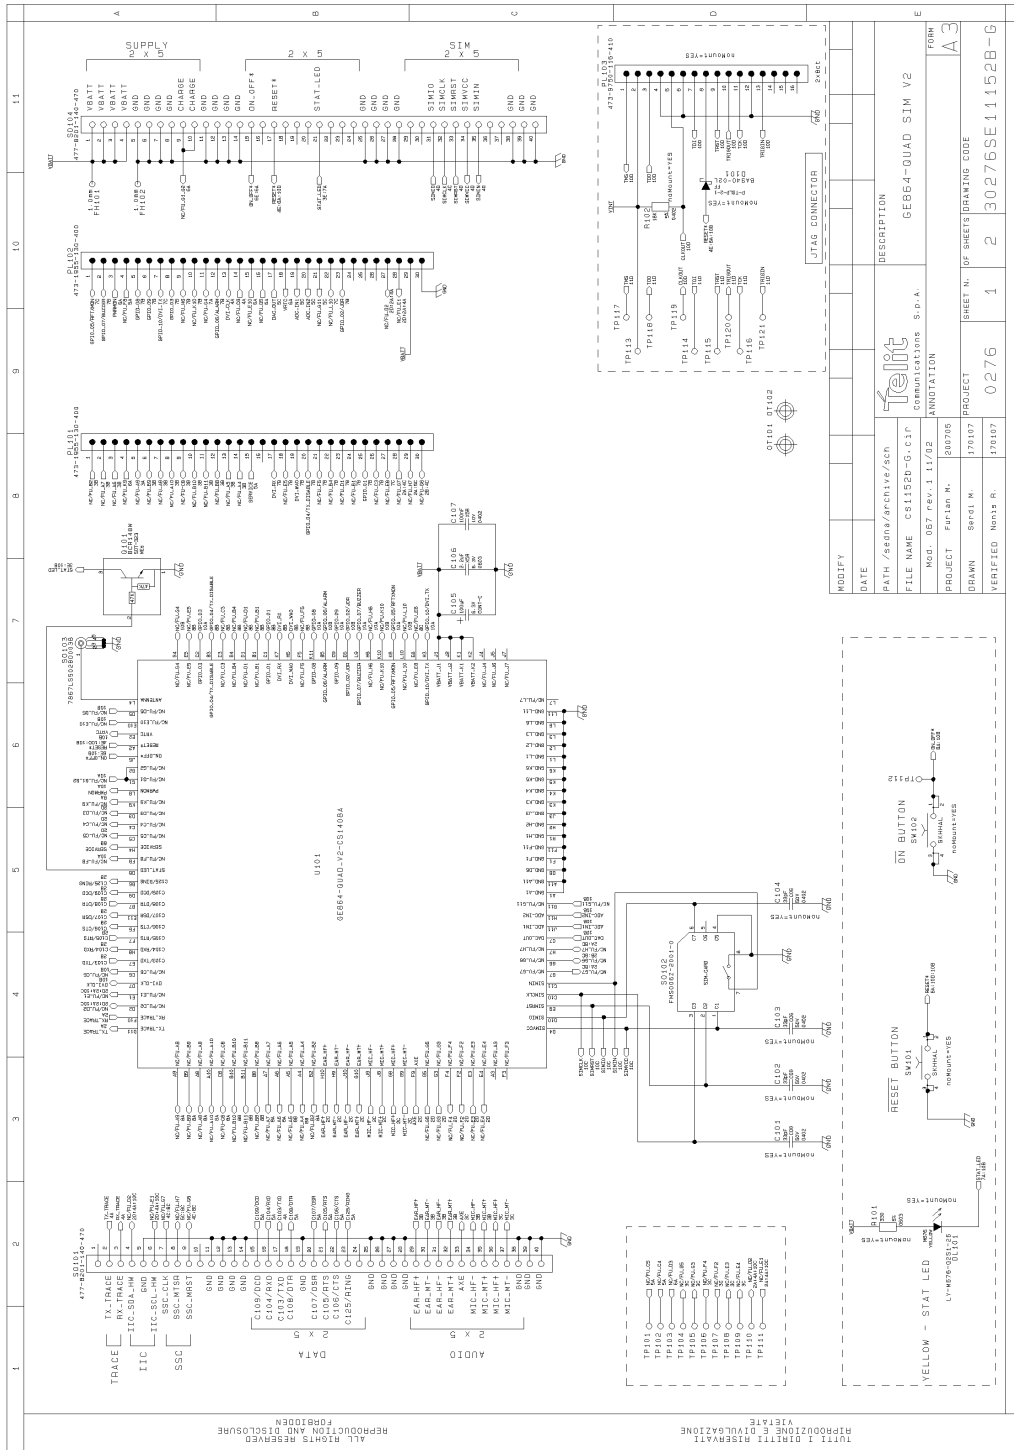


44.7. GE864-GPS Interface board

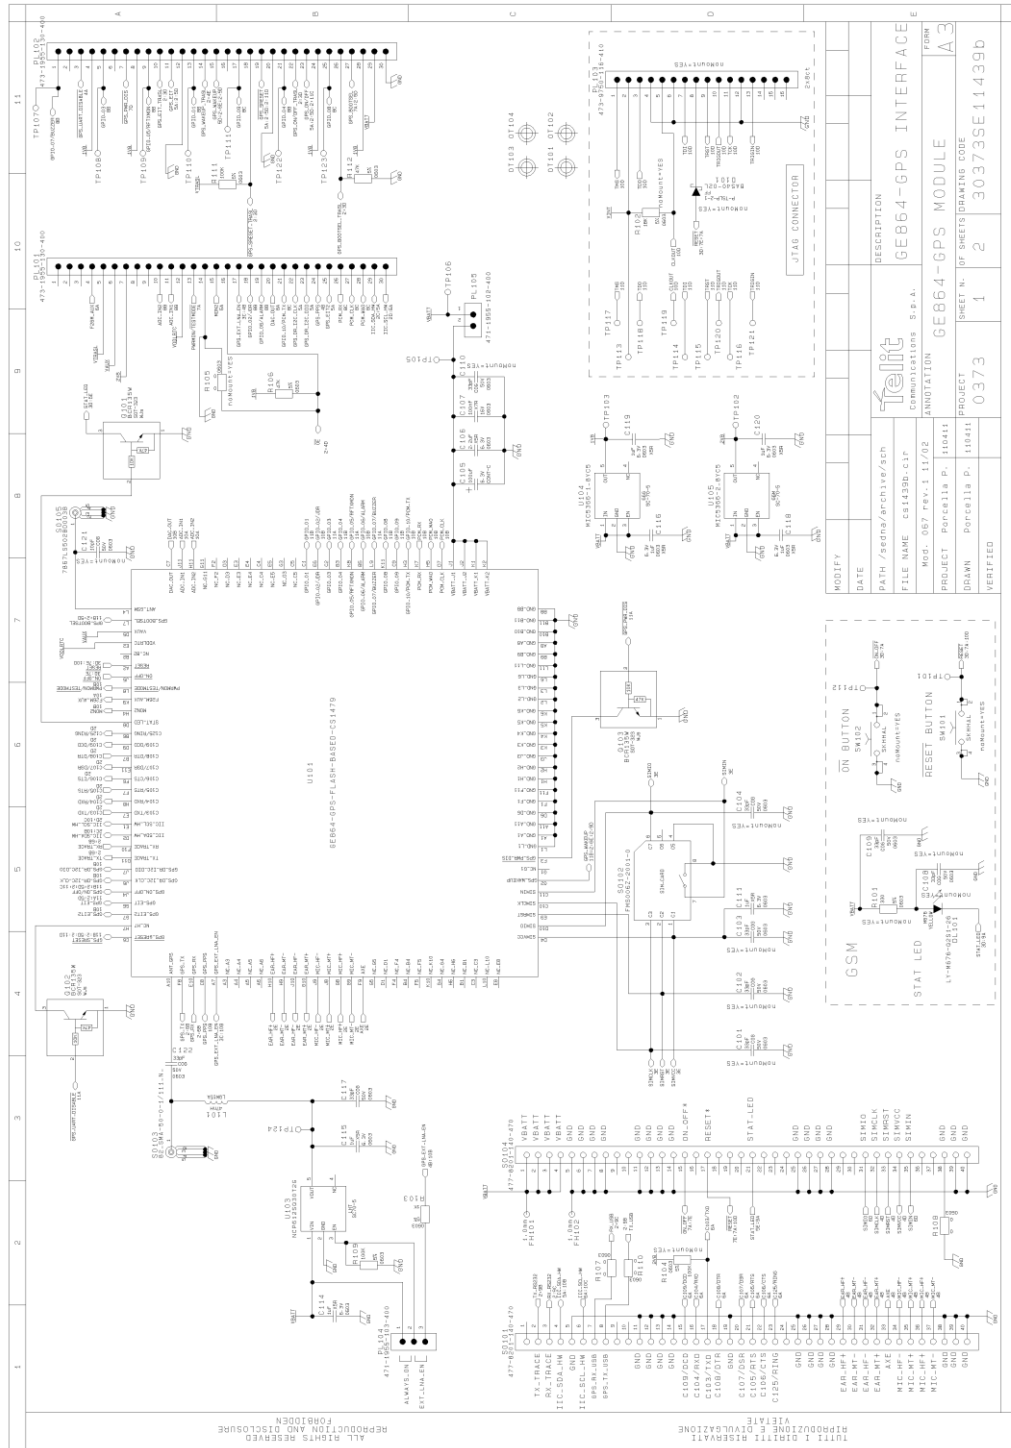


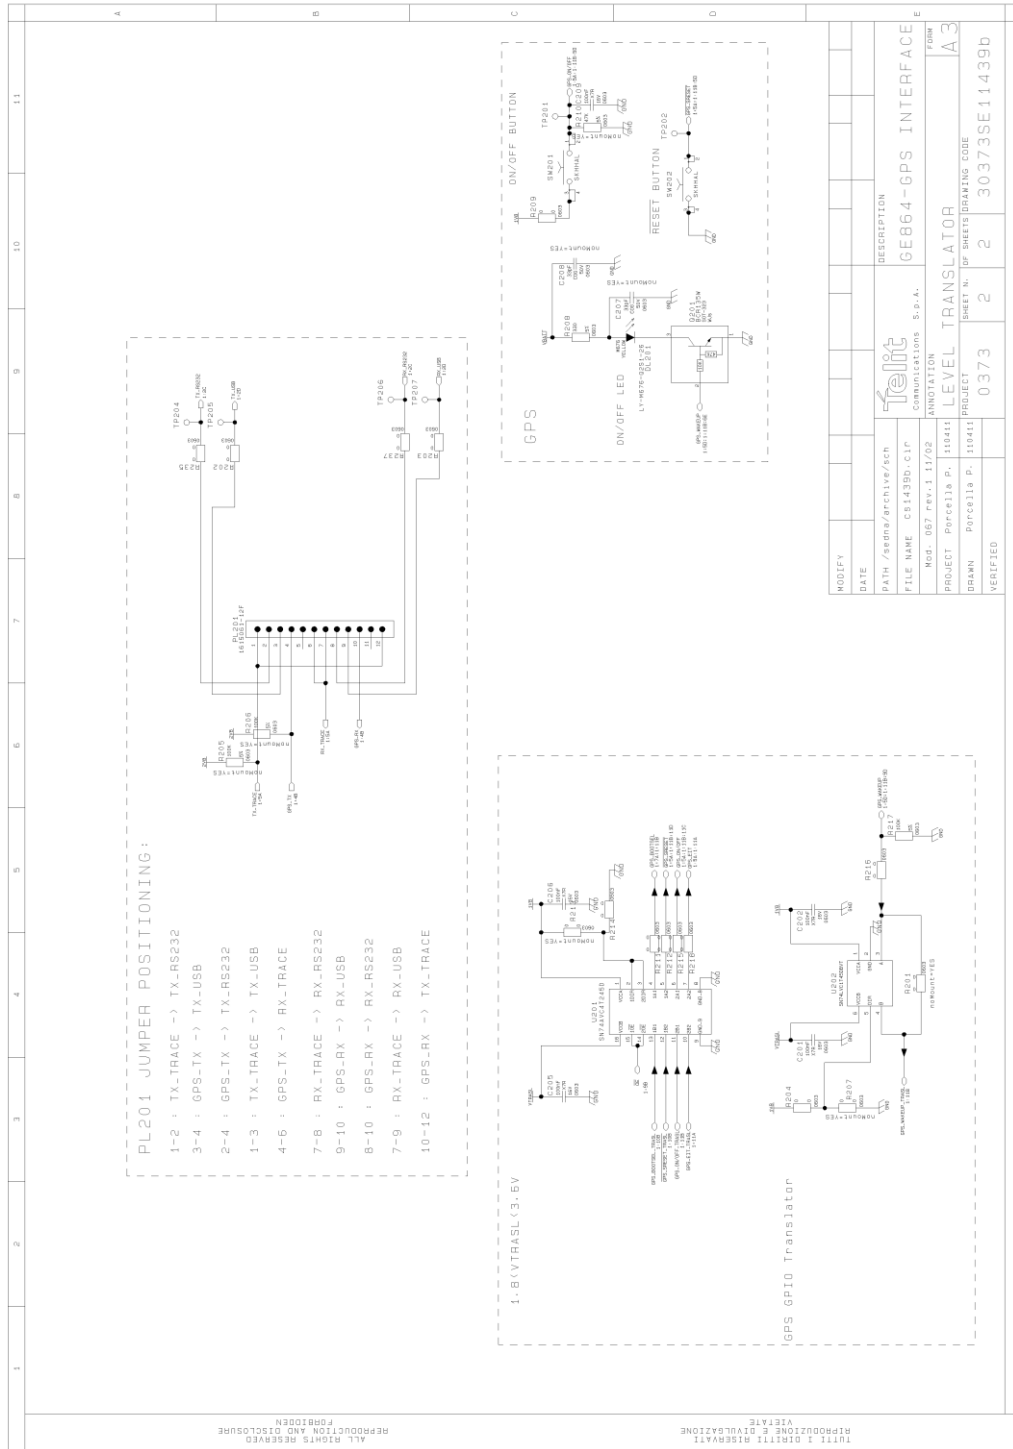


44.8. GE865/SE867-AGPS Interface board

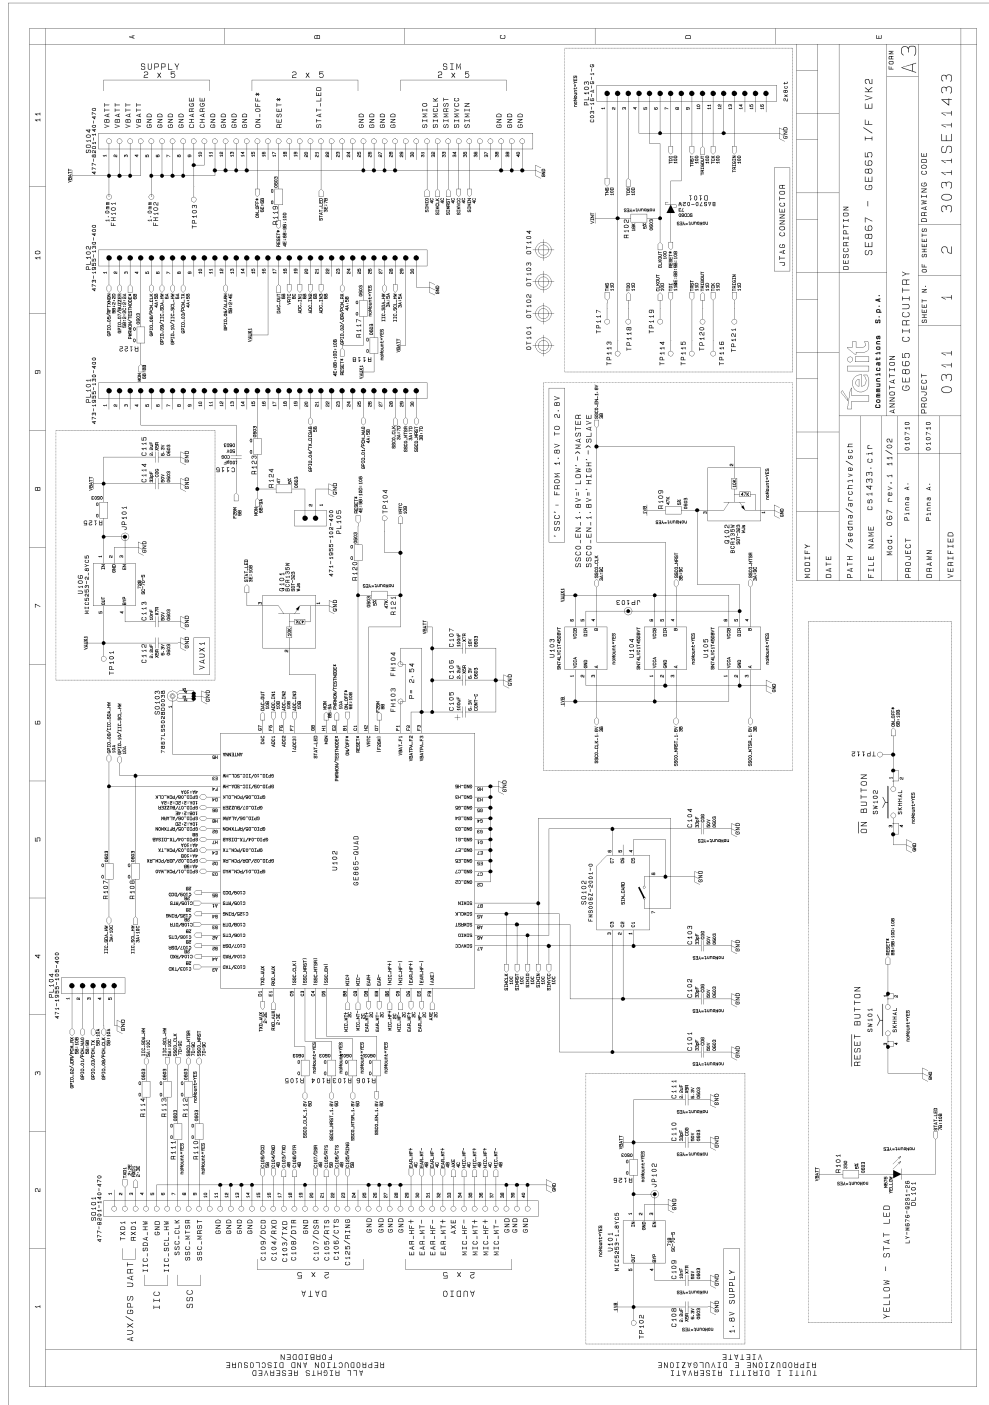


44.9. GE865 Interface board

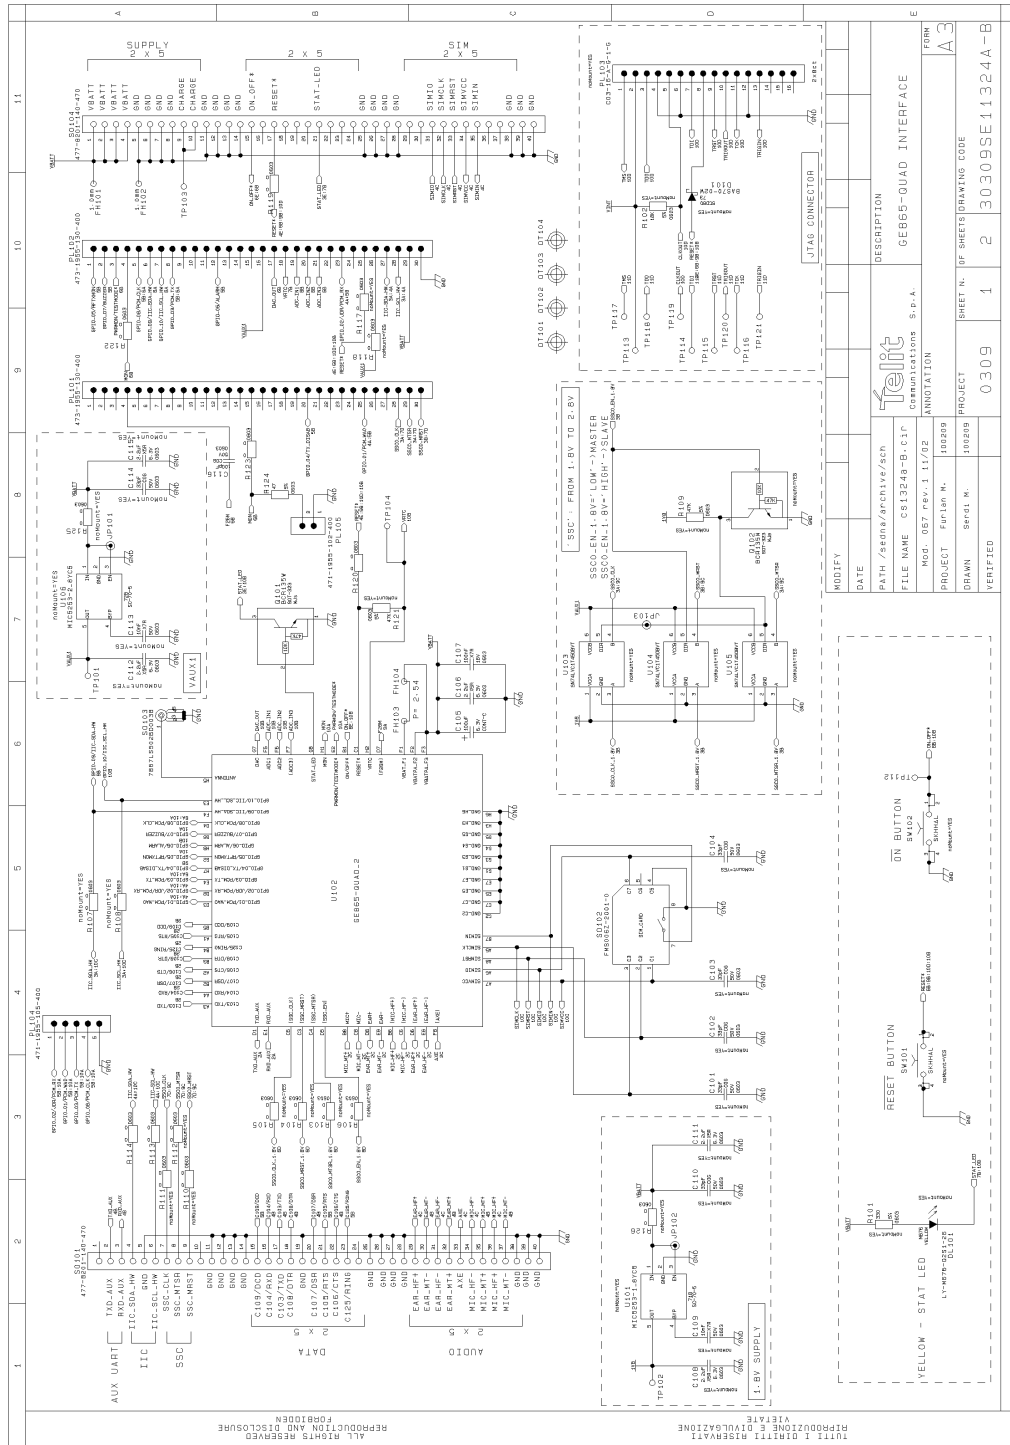


44.10. GL865 Interface board

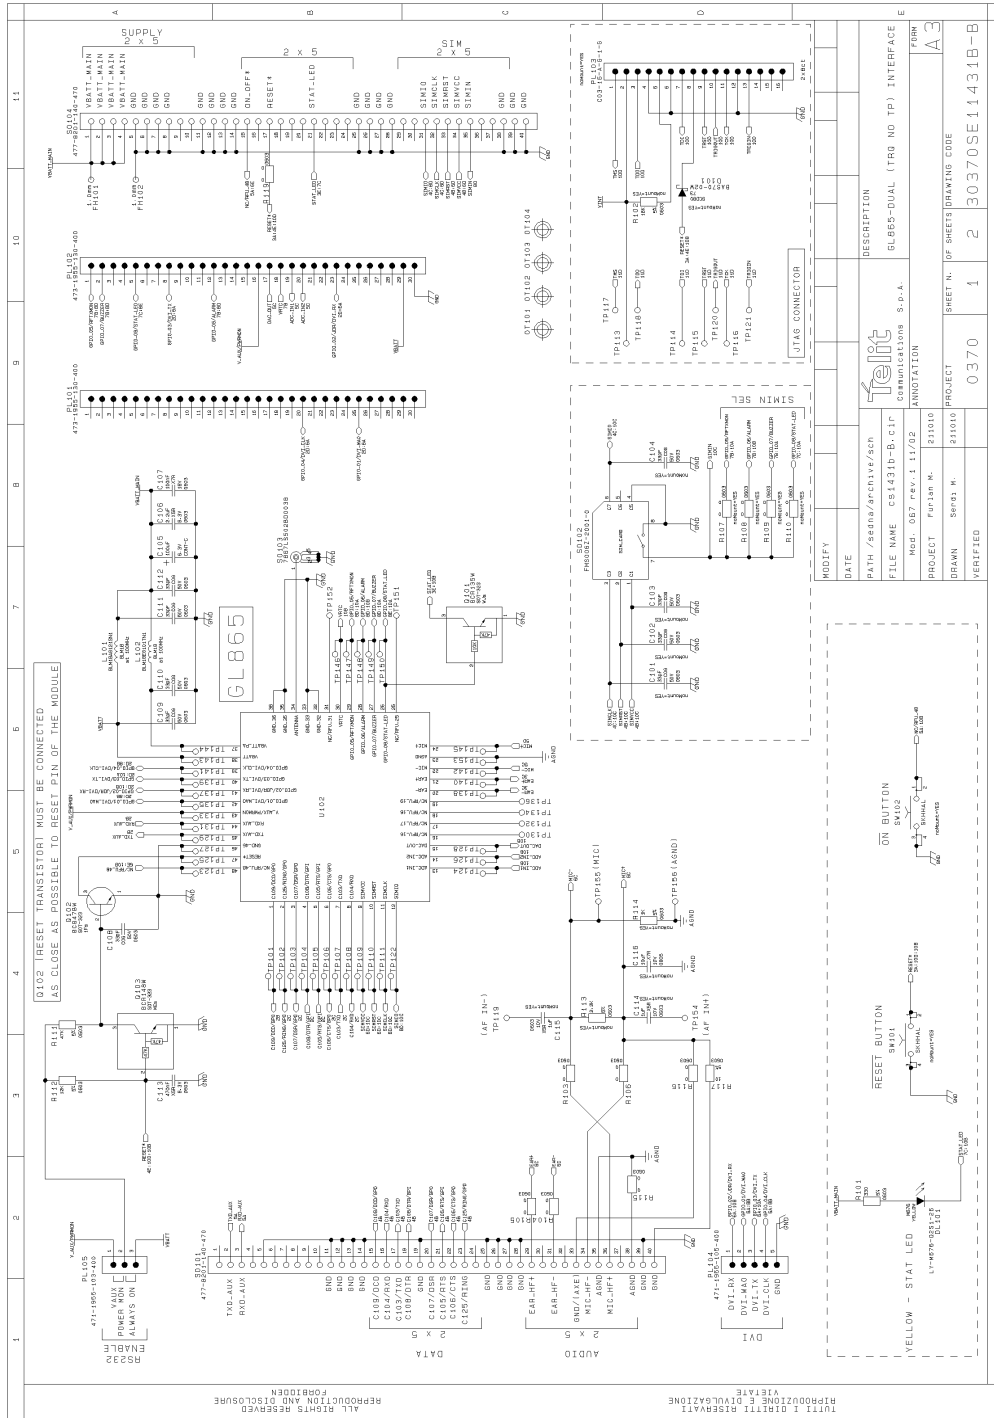


44.11. GC864 Interface board

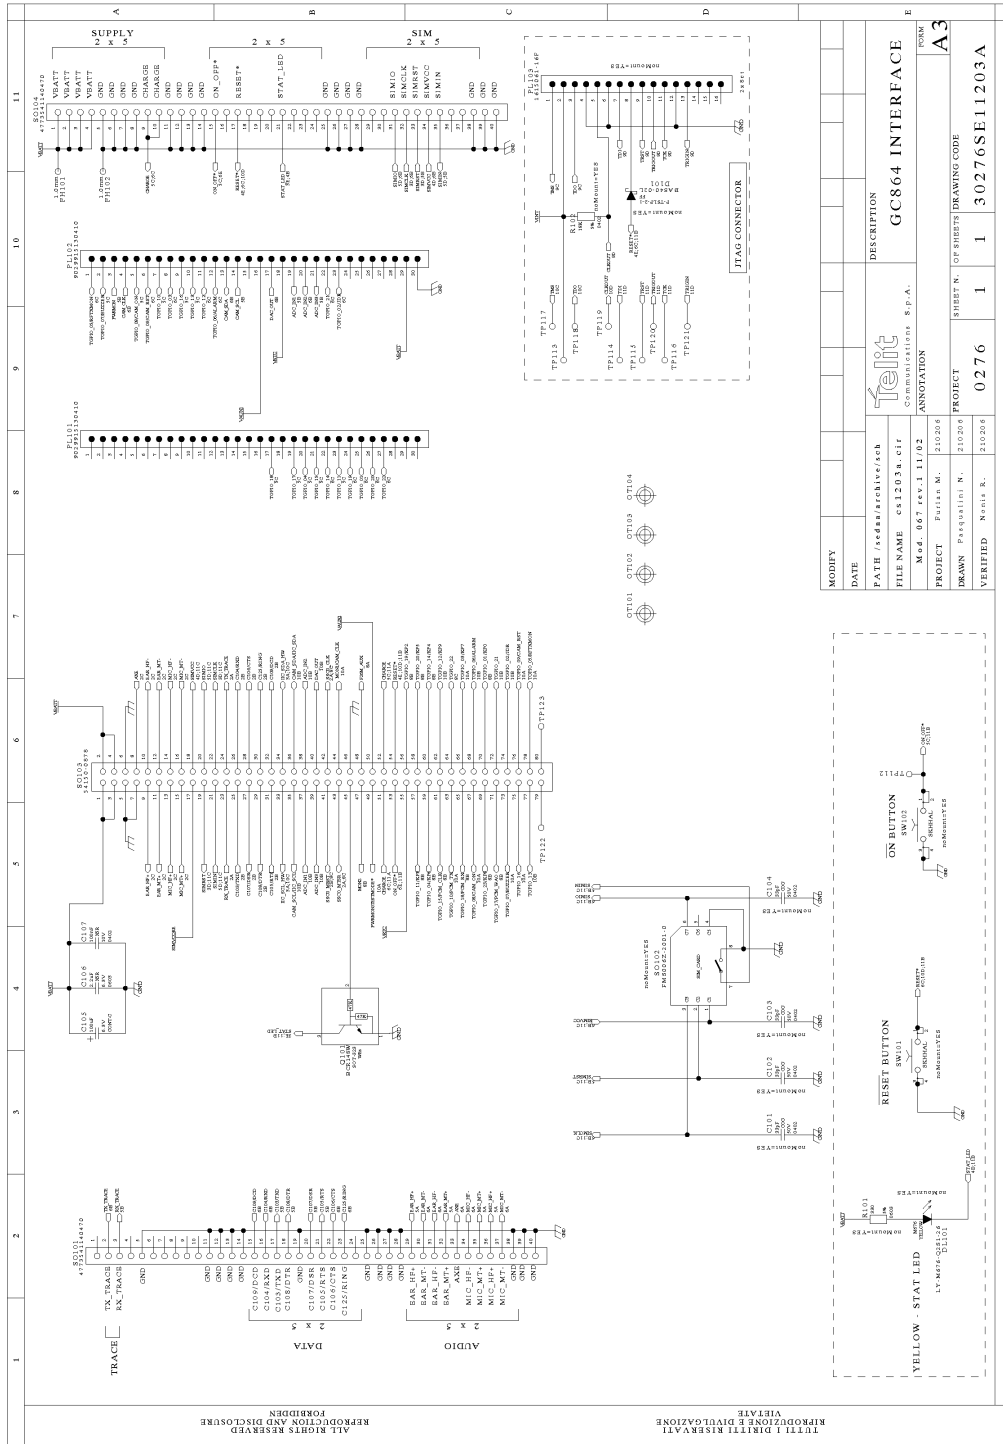


44.12. GC864-C2 Interface board

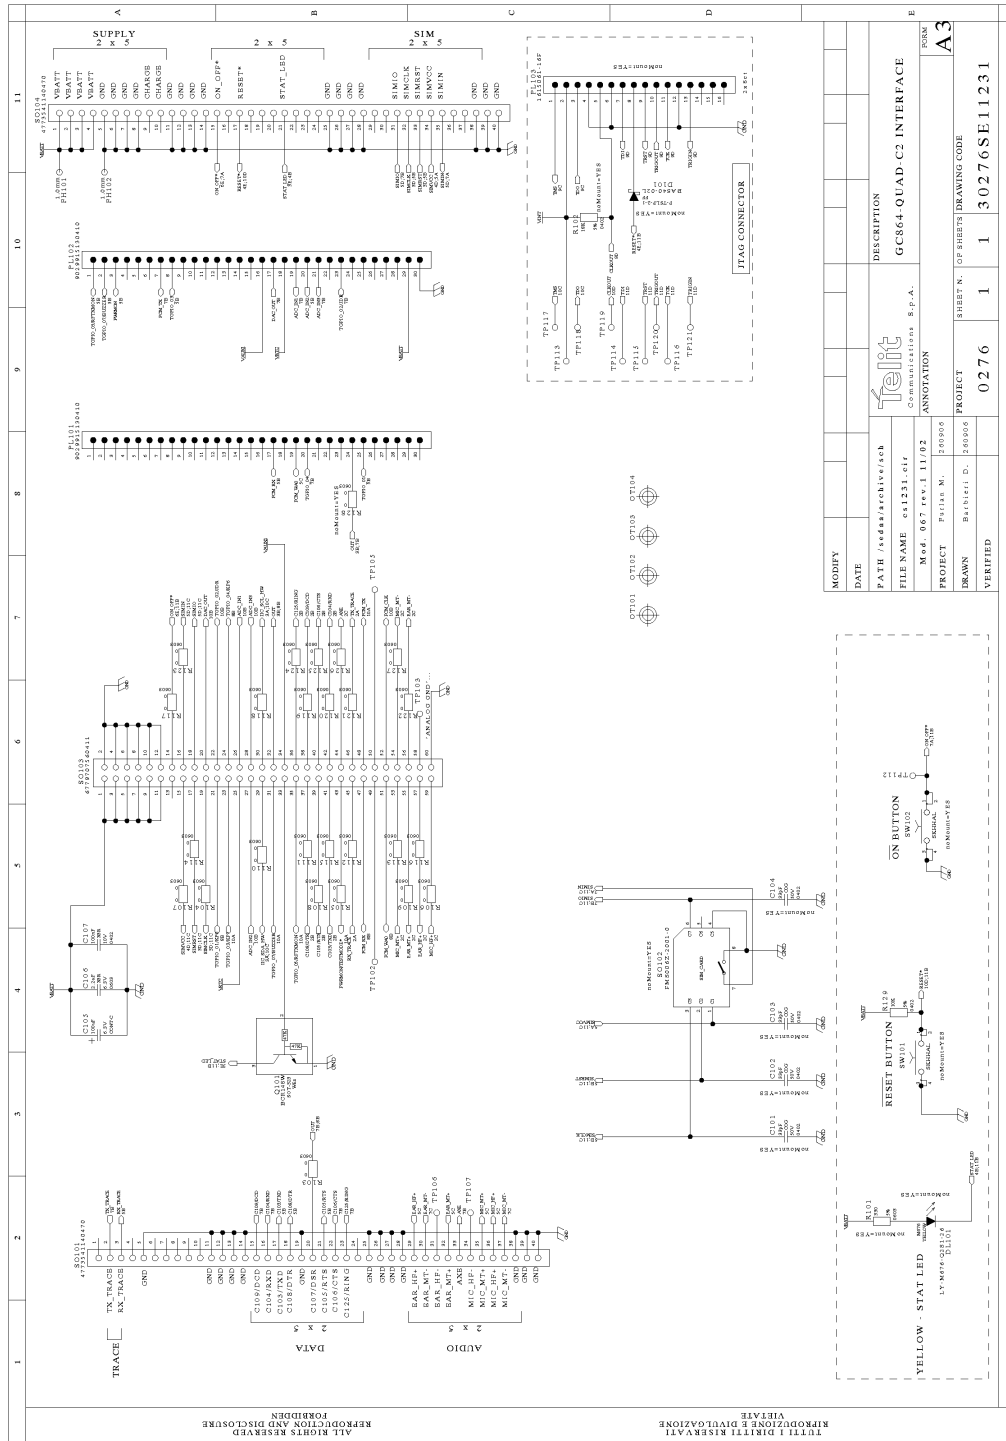

44.13. UC864 Interface board

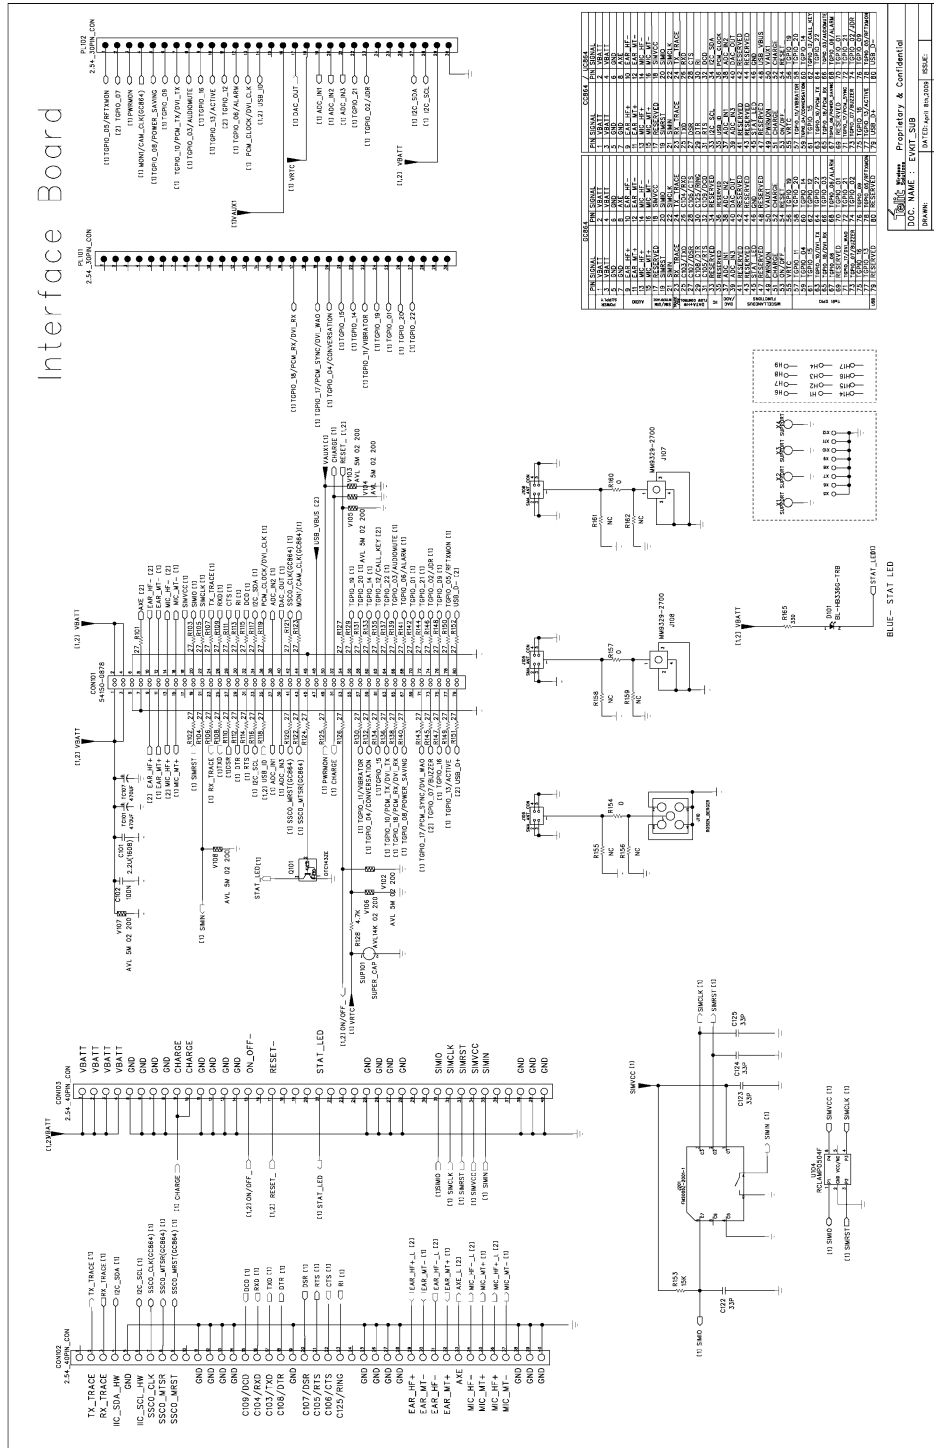


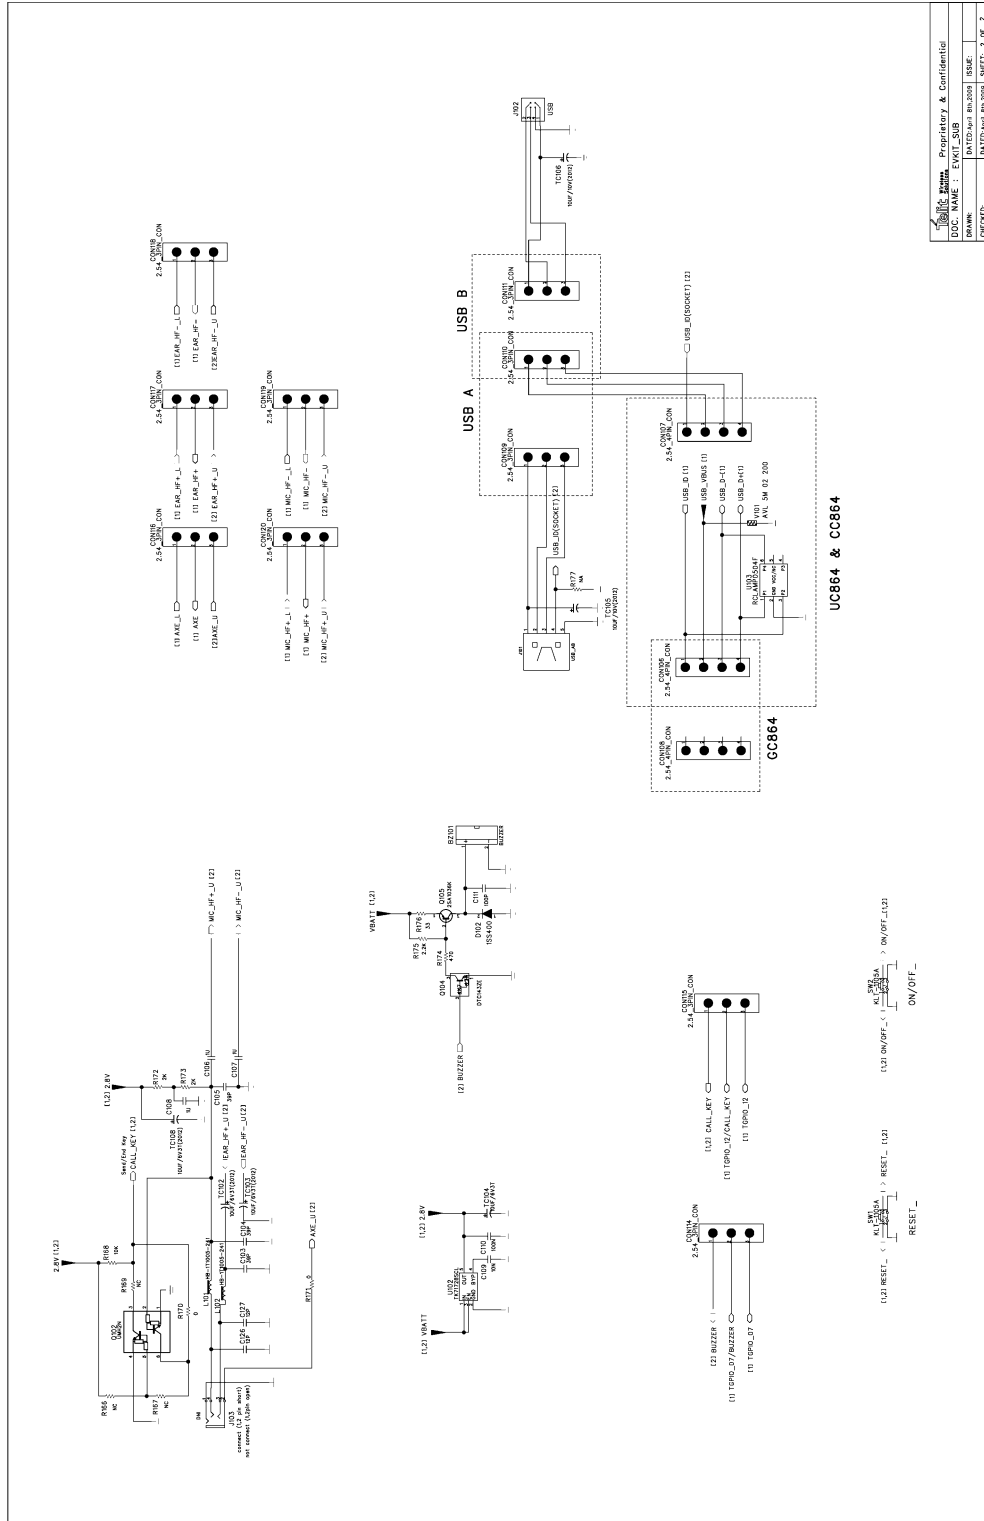

Telit Proprietary & Confidential			
DOC. NAME :	EVK2_SDB	REV. :	19
DOC. CODE :	EVK2_SDB	REV. DATE :	2015/01/26
CHANGED :		DATE :	2015/01/26
		SHEET :	2 OF 2




44.14. HE910/UE910 Interface board

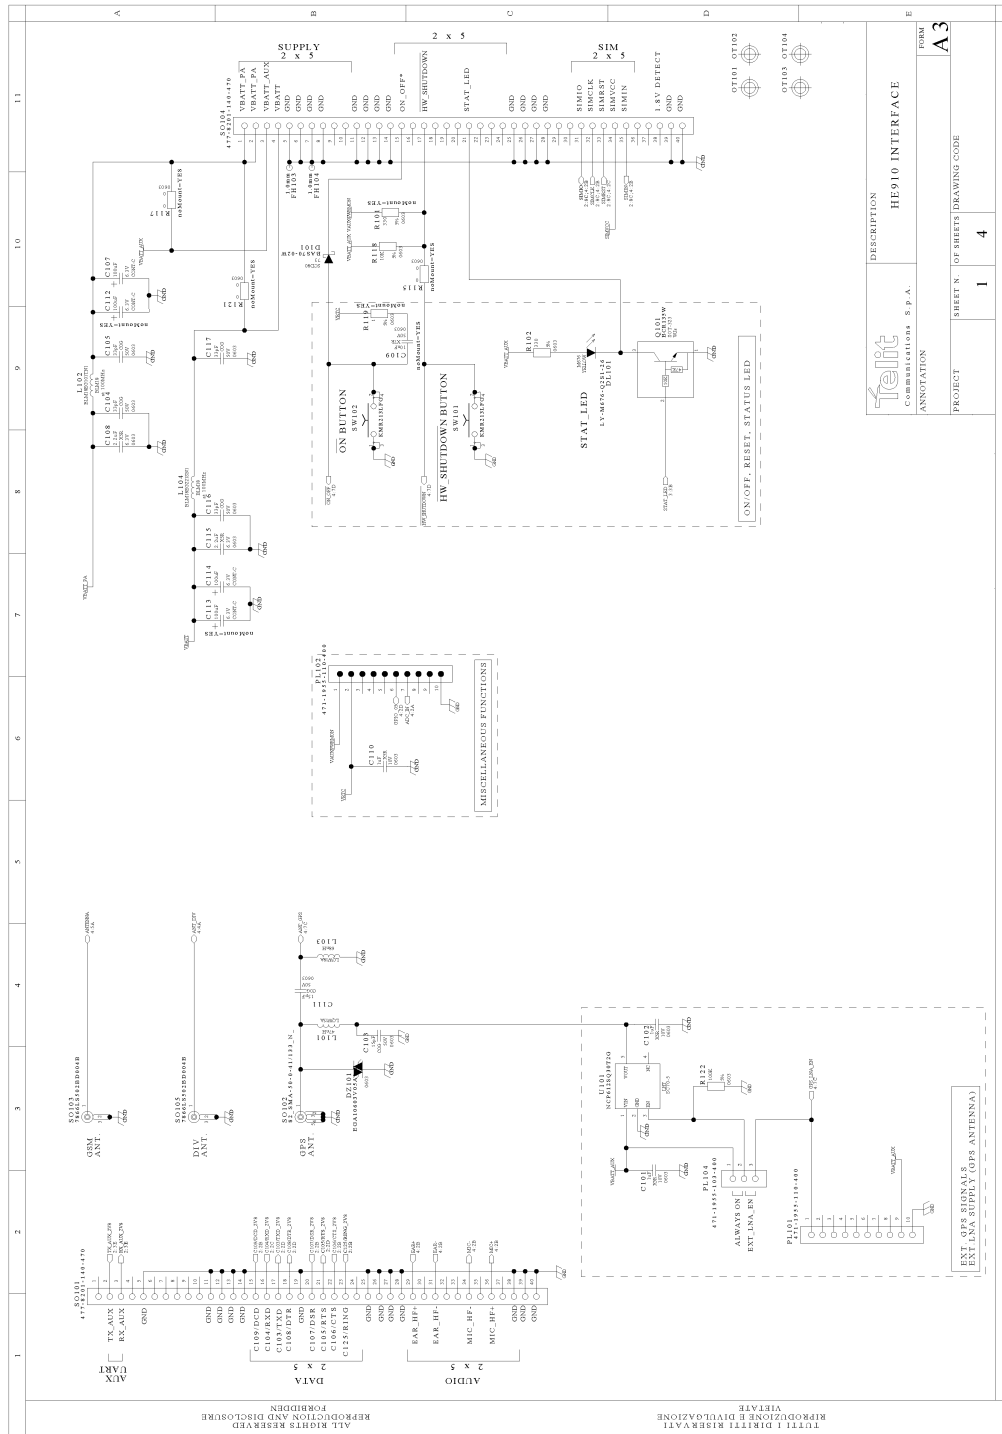


DESCRIPTION		HE910 INTERFACE	
ANNOTATION		Communications S.p.A.	
PROJECT	SHEET N.	OF SHEETS	DRAWING CODE
	1	4	A3




Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

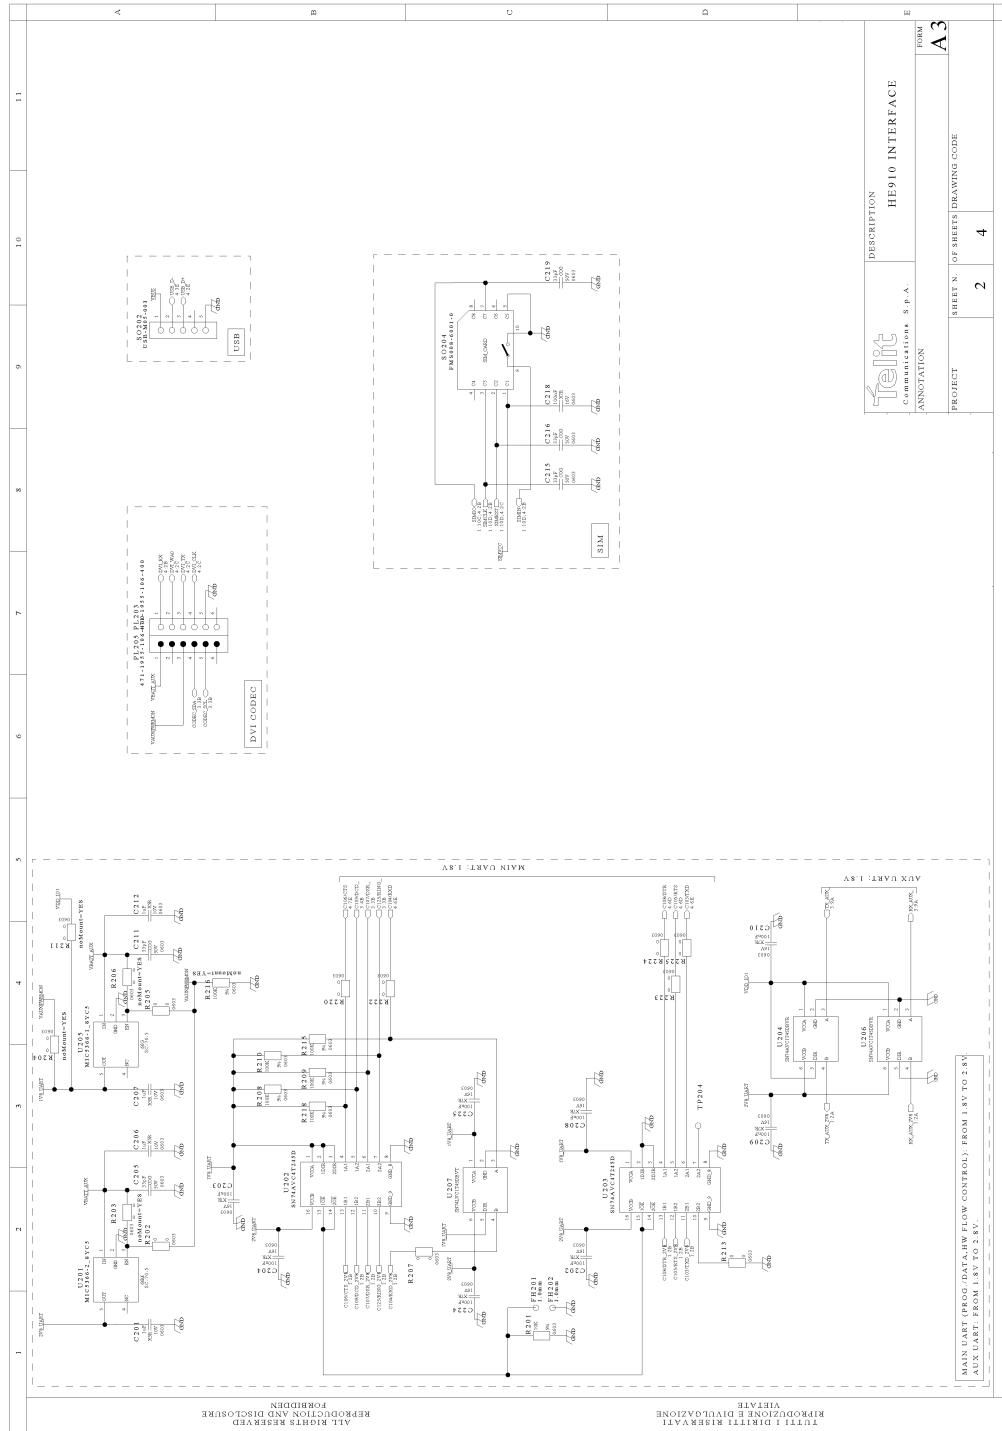

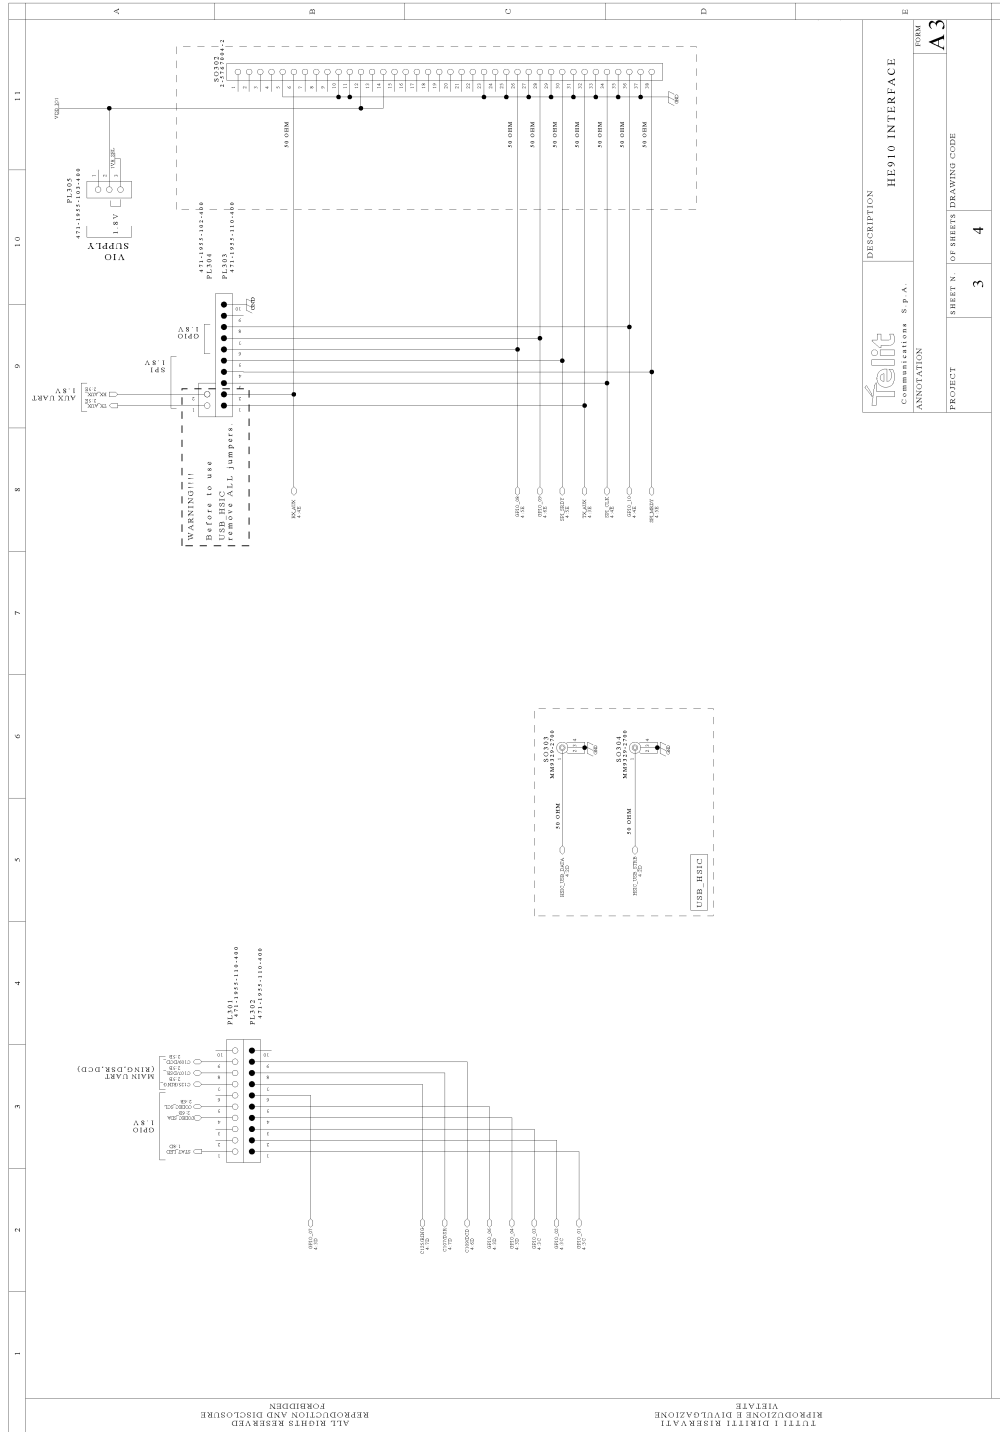


DESCRIPTION		HE910 INTERFACE	
ANNOTATION		FORM	
PROJECT		SHEET N.	OF SHEETS DRAWING CODE
		3	4
		A3	



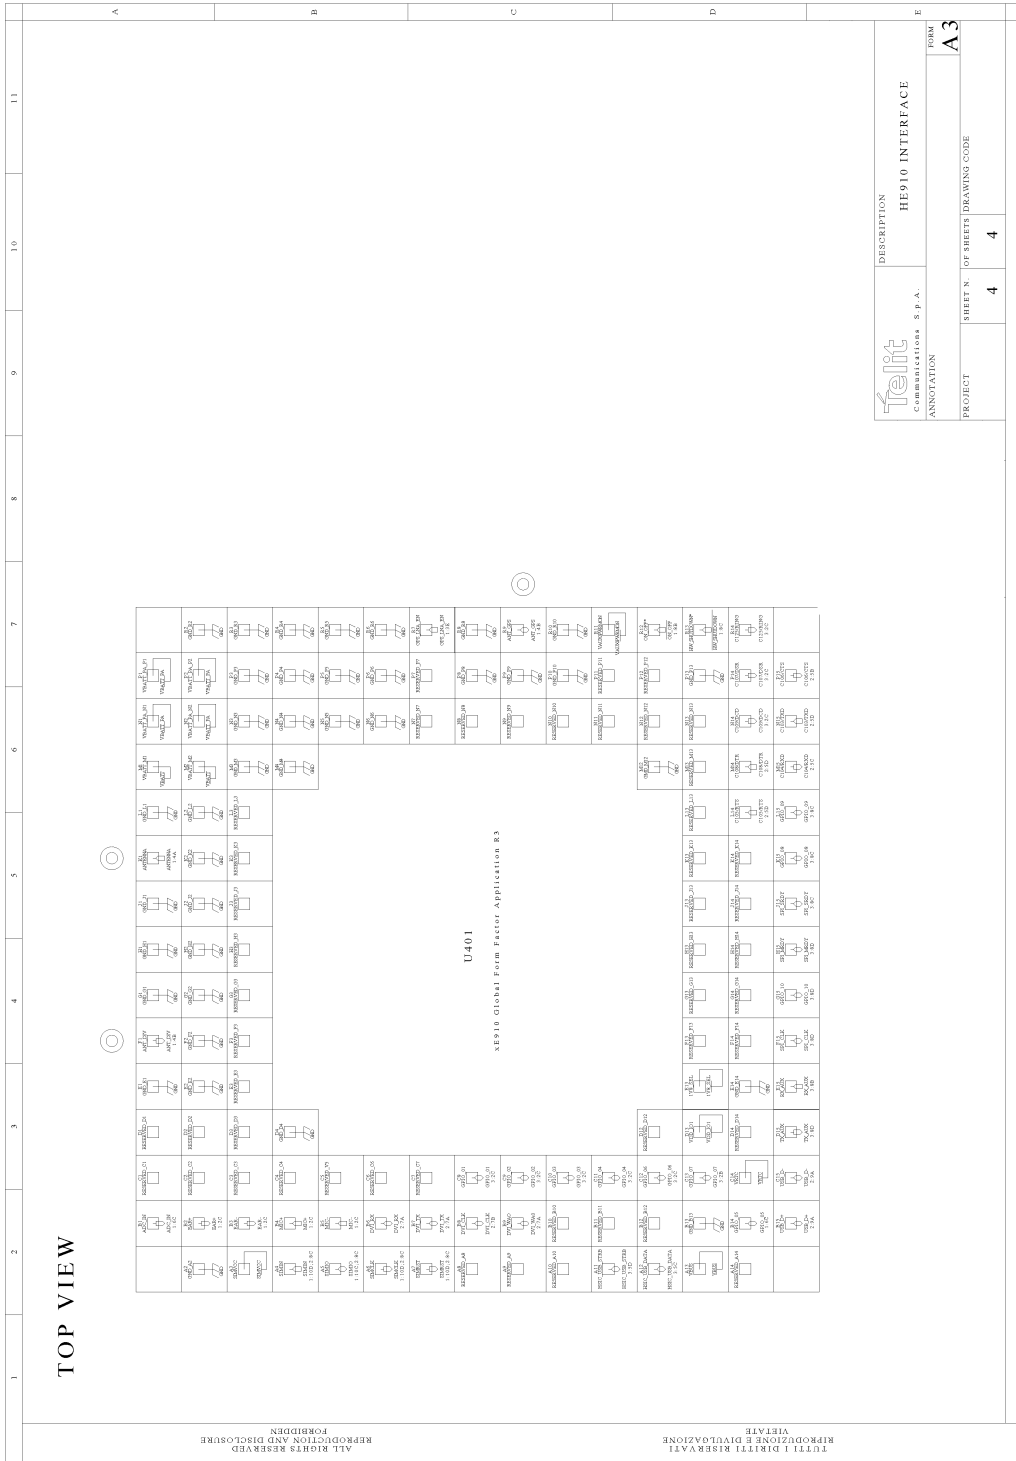



44.15. GE910 Interface board

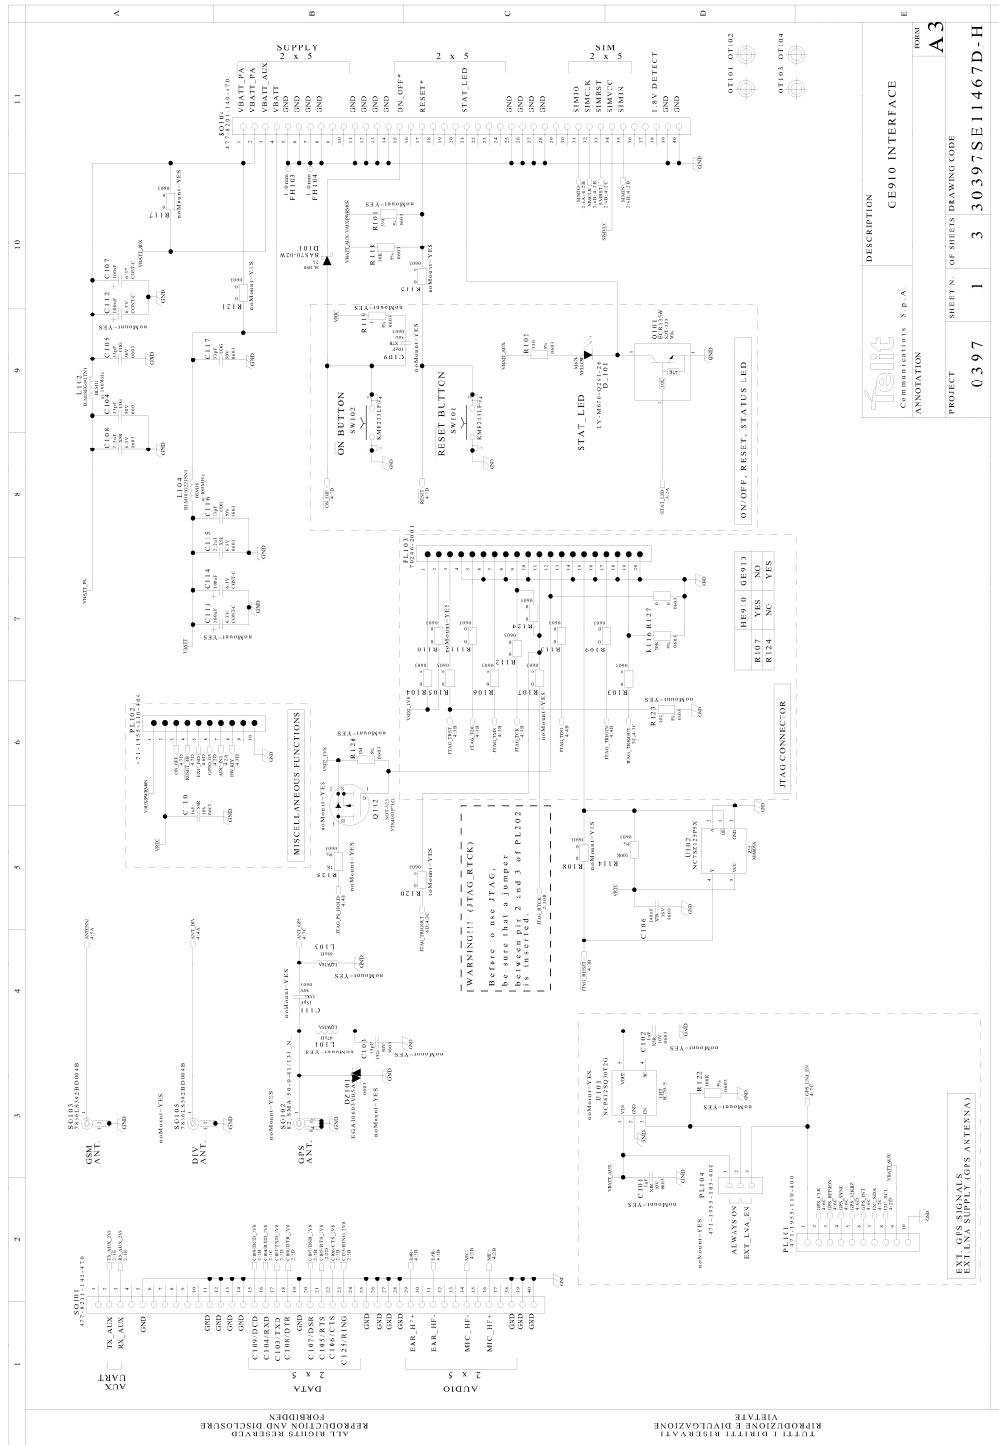

DESCRIPTION		GE910 INTERFACE	
COMMENTS		A3	
PROJECT		0397	
SHEET N.		1	
OF SHEETS		3	
DRAWING CODE		30397SE11467D-H	




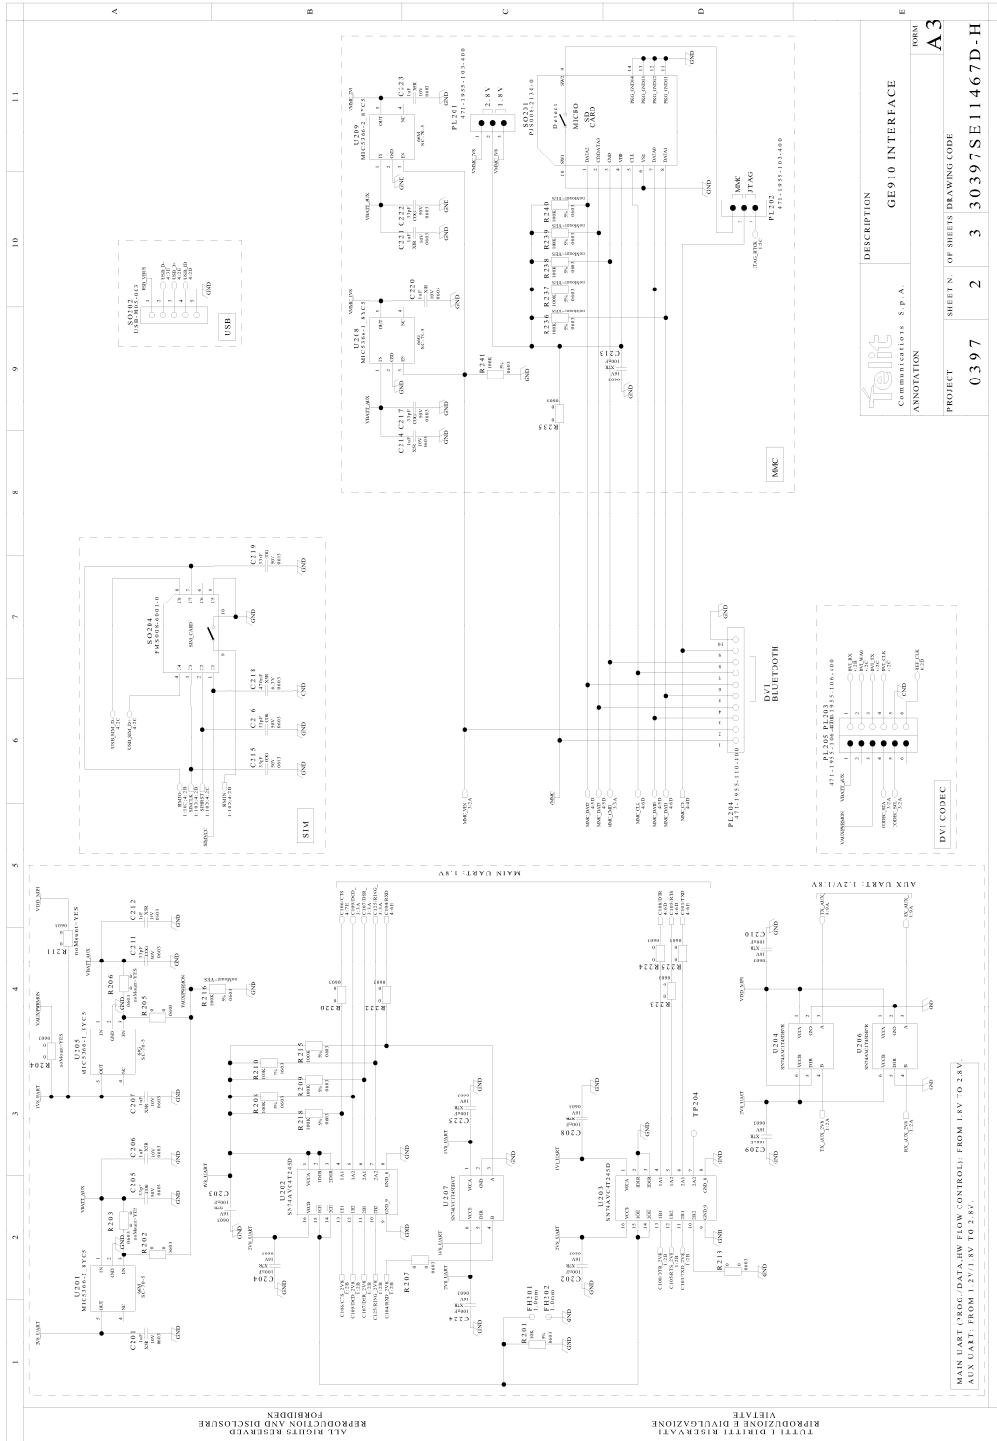

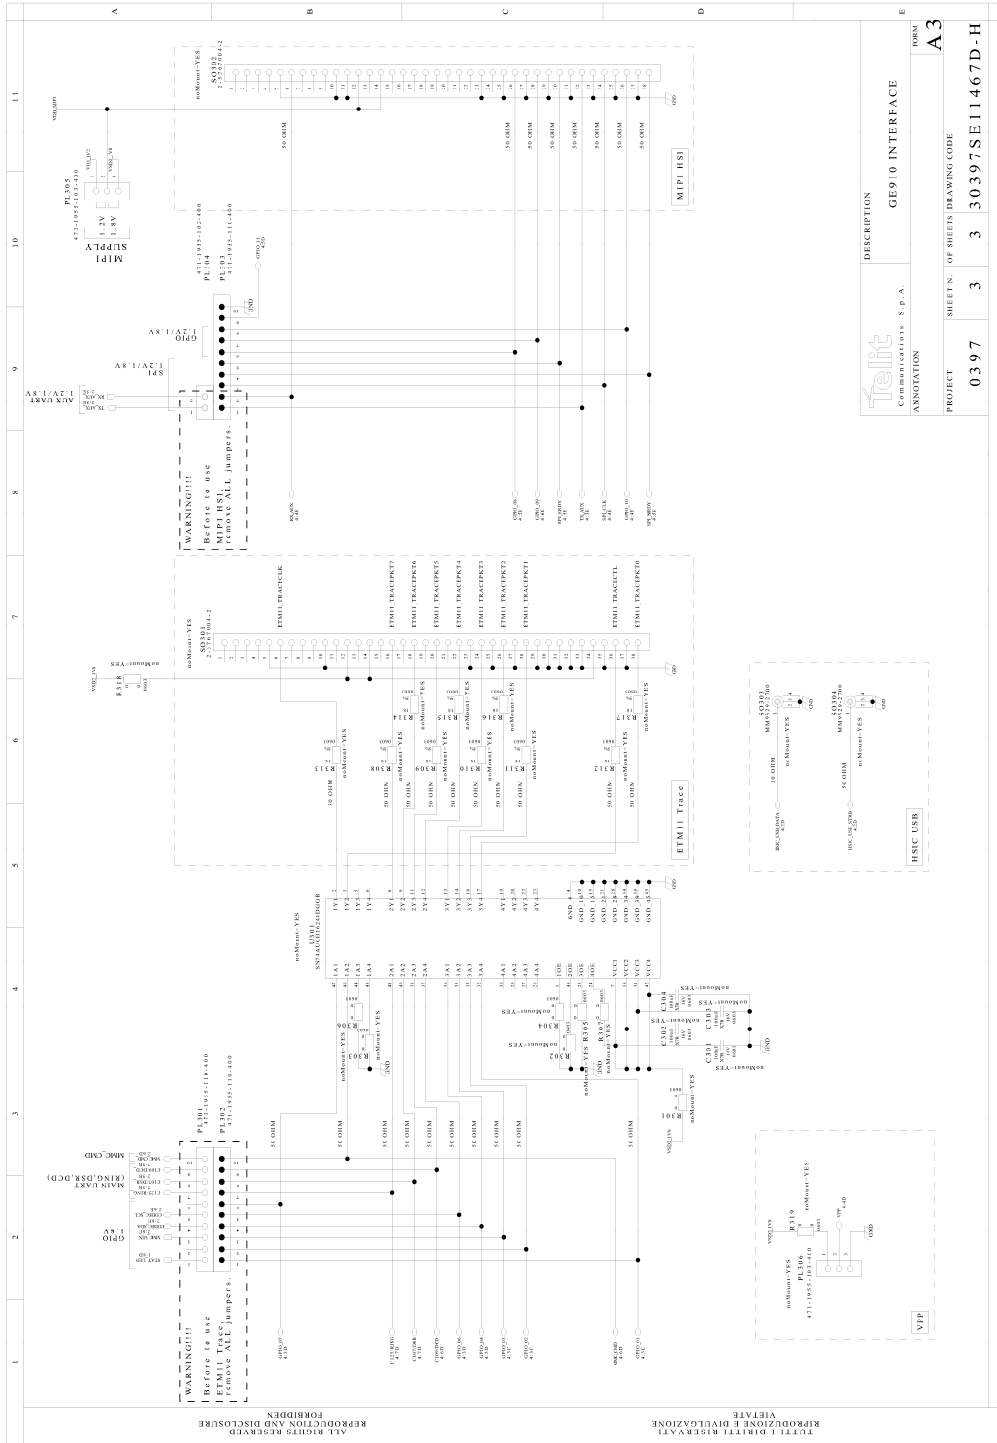


 COMMUNICATIONS S.p.A.	DESCRIPTION	DESCRIPTION	DESCRIPTION
	GE910 INTERFACE	GE910 INTERFACE	GE910 INTERFACE
ANNOTATION	PROJECT	SHEET N.	OF SHEETS DRAWING CODE
	0397	3	30397SE11467D-H
			FORM
			A3



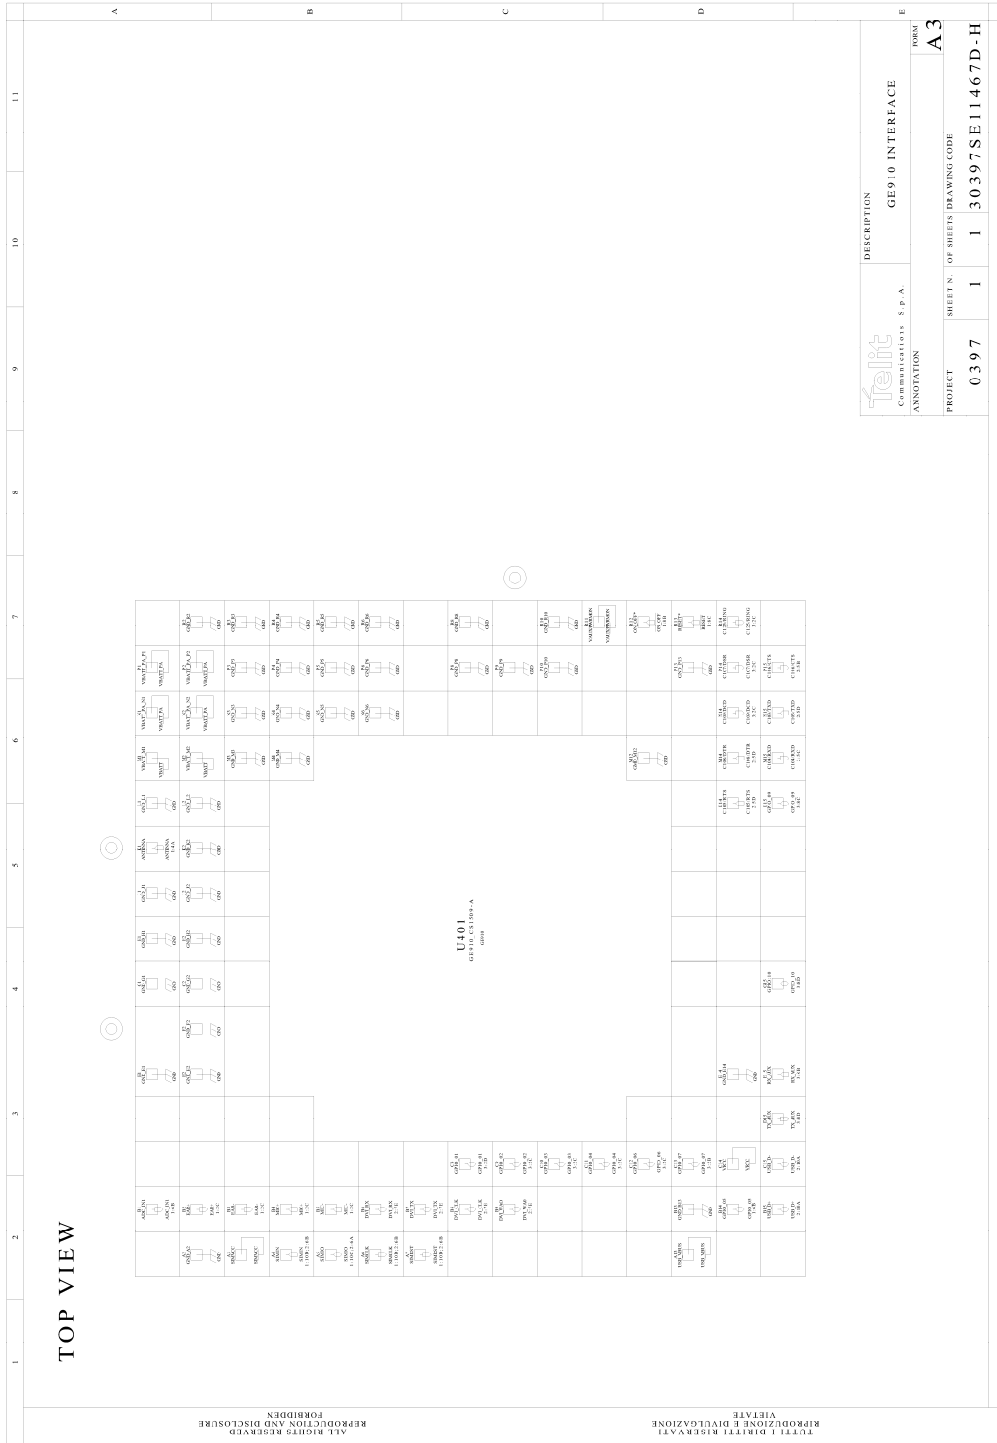


44.16. GE910-GNSS Interface board

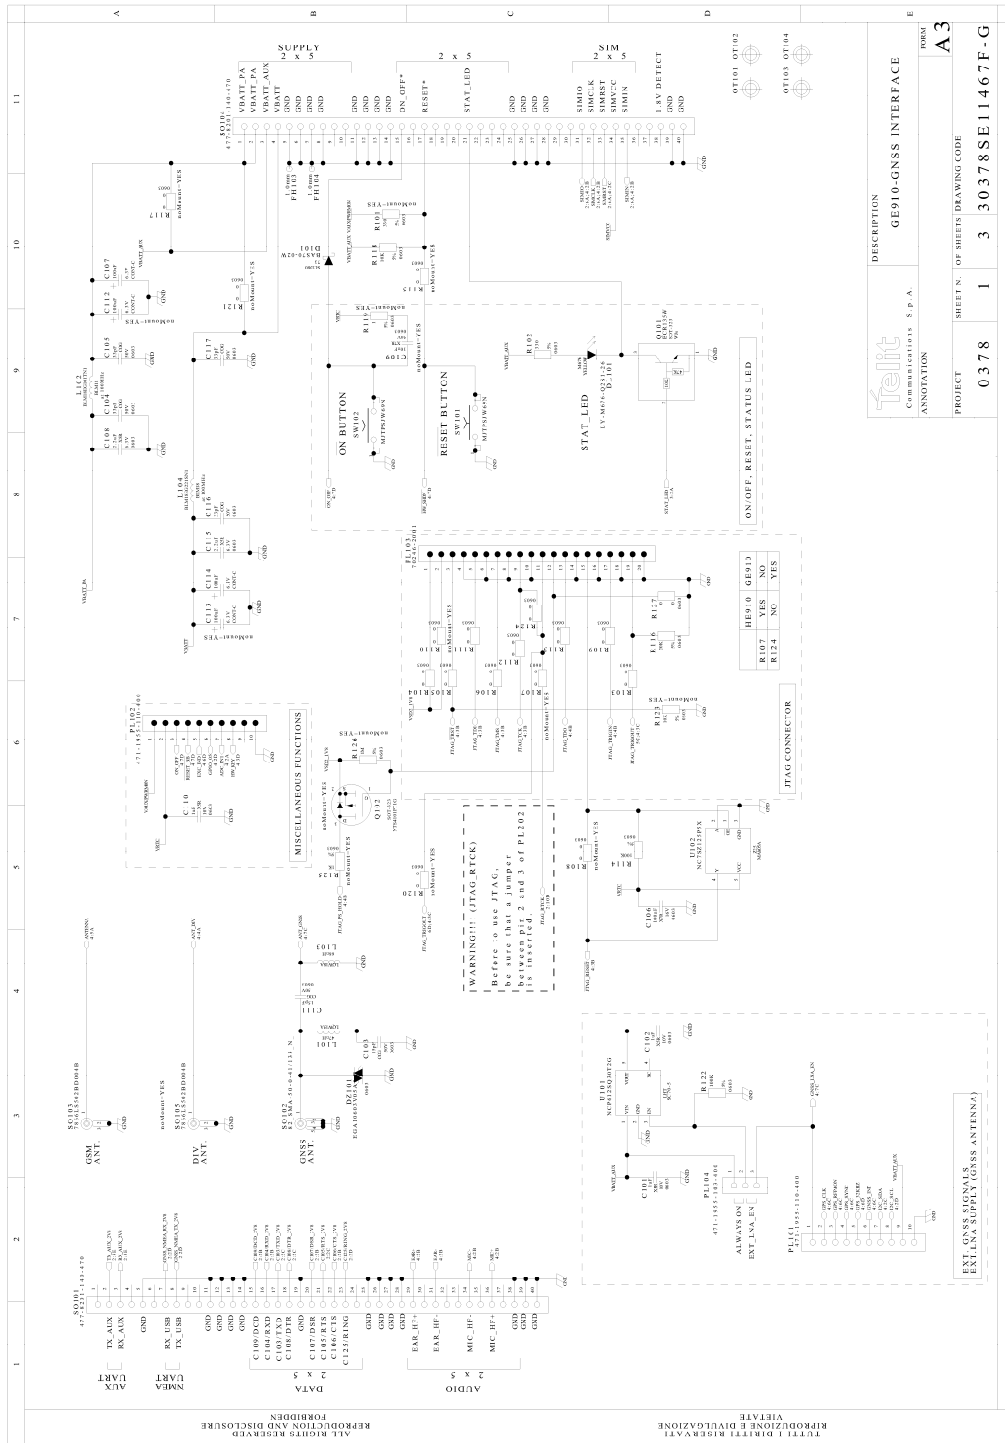


DESCRIPTION		GE910-GNSS INTERFACE	
PROJECT		0378	
SHEET N.		1	
OF SHEETS DRAWING CODE		3 30378SE11467F-G	
ANNOTATION		A3	




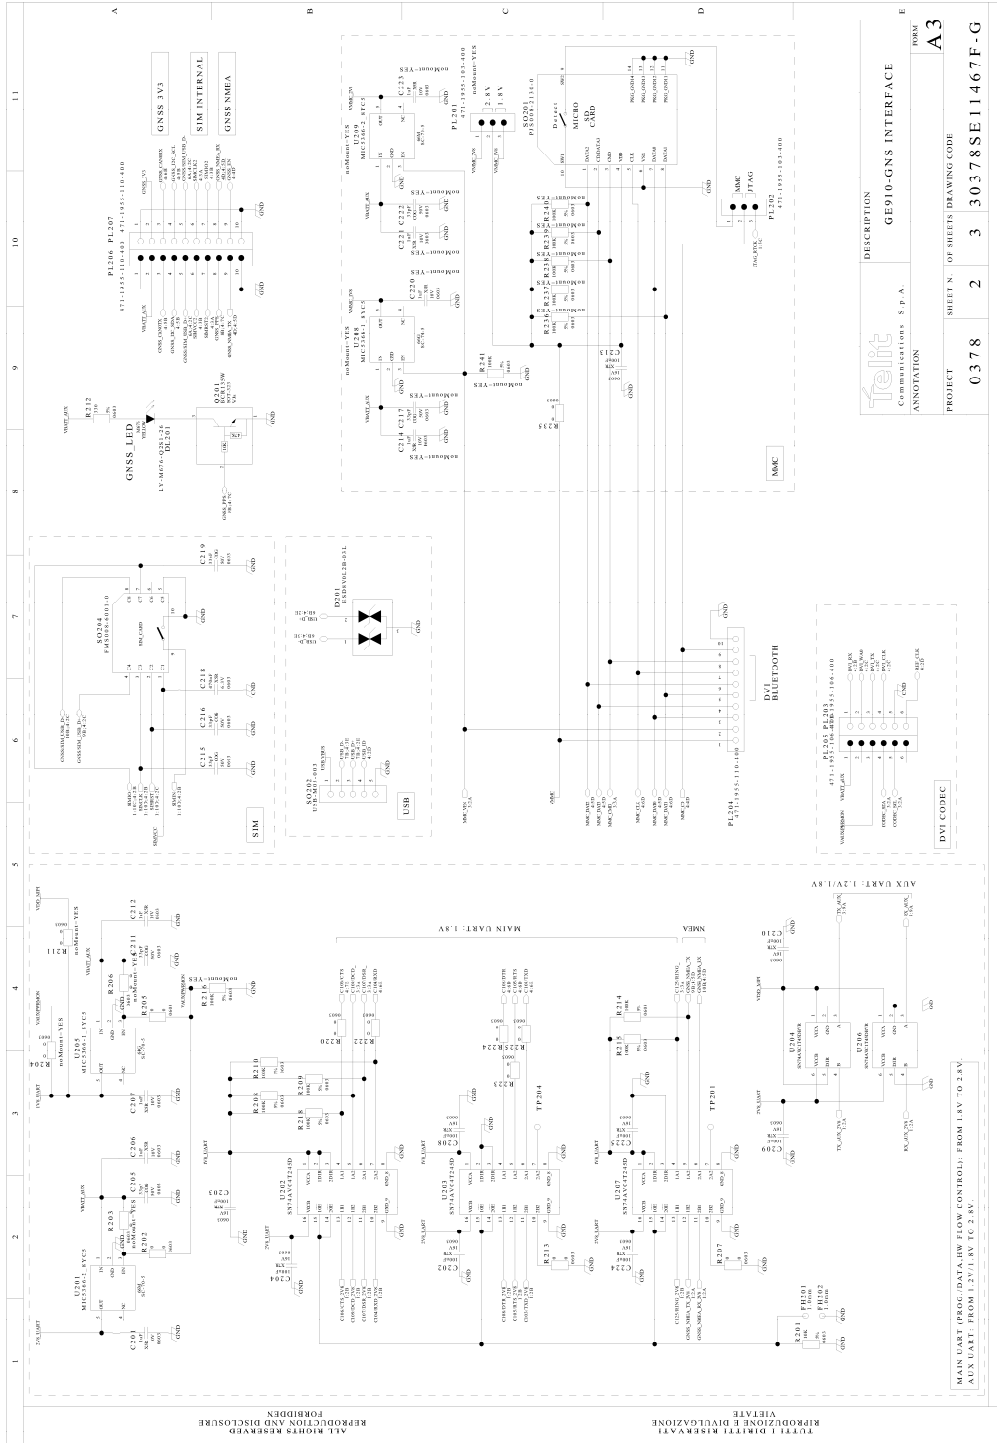


 COMMUNICATIONS S.p.A.	DESCRIPTION	GE910-GNS INTERFACE	REVISION	A.3
	ANNOTATION			
PROJECT	0378	SHEET N.	2	OF SHEETS DRAWING CODE
			3	30378SE11467F-G




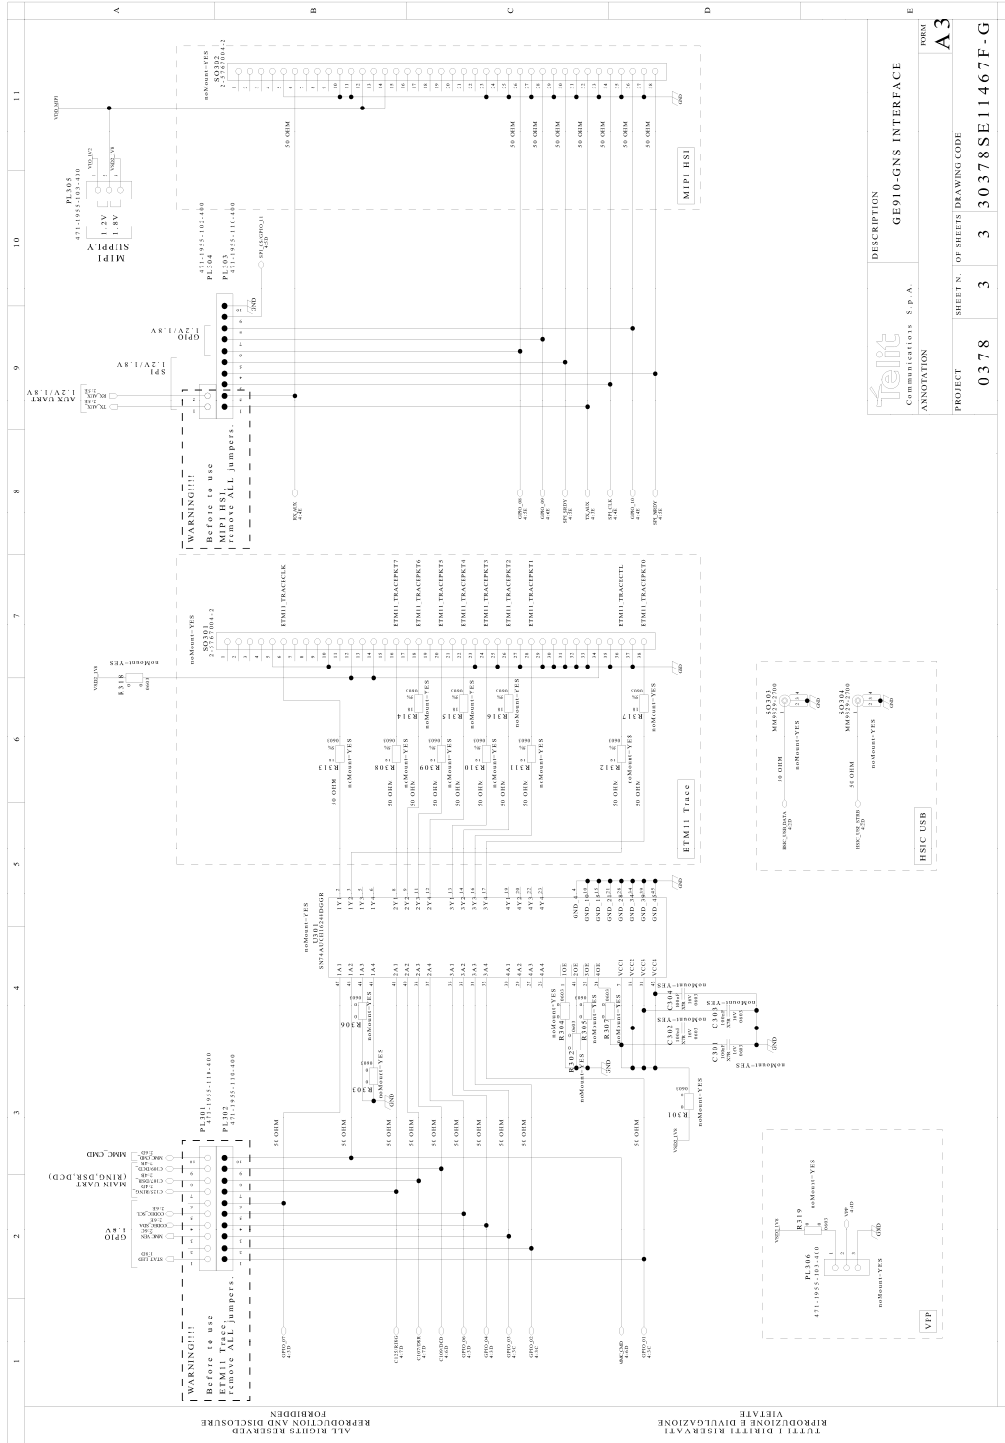


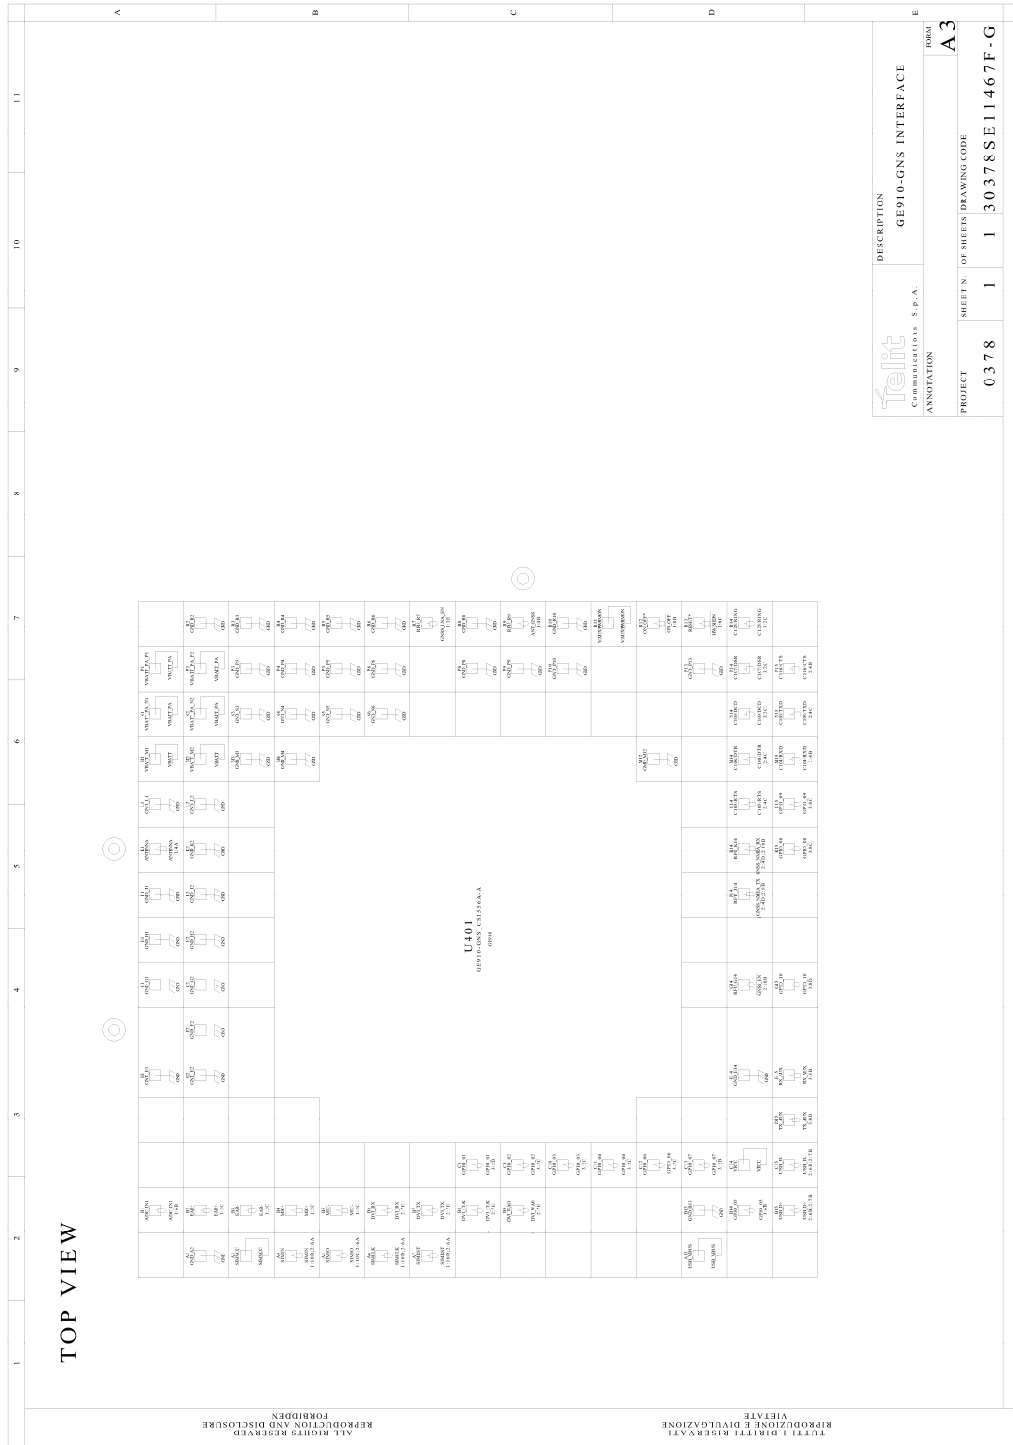


44.17. GE910-QUAD V3 Interface board

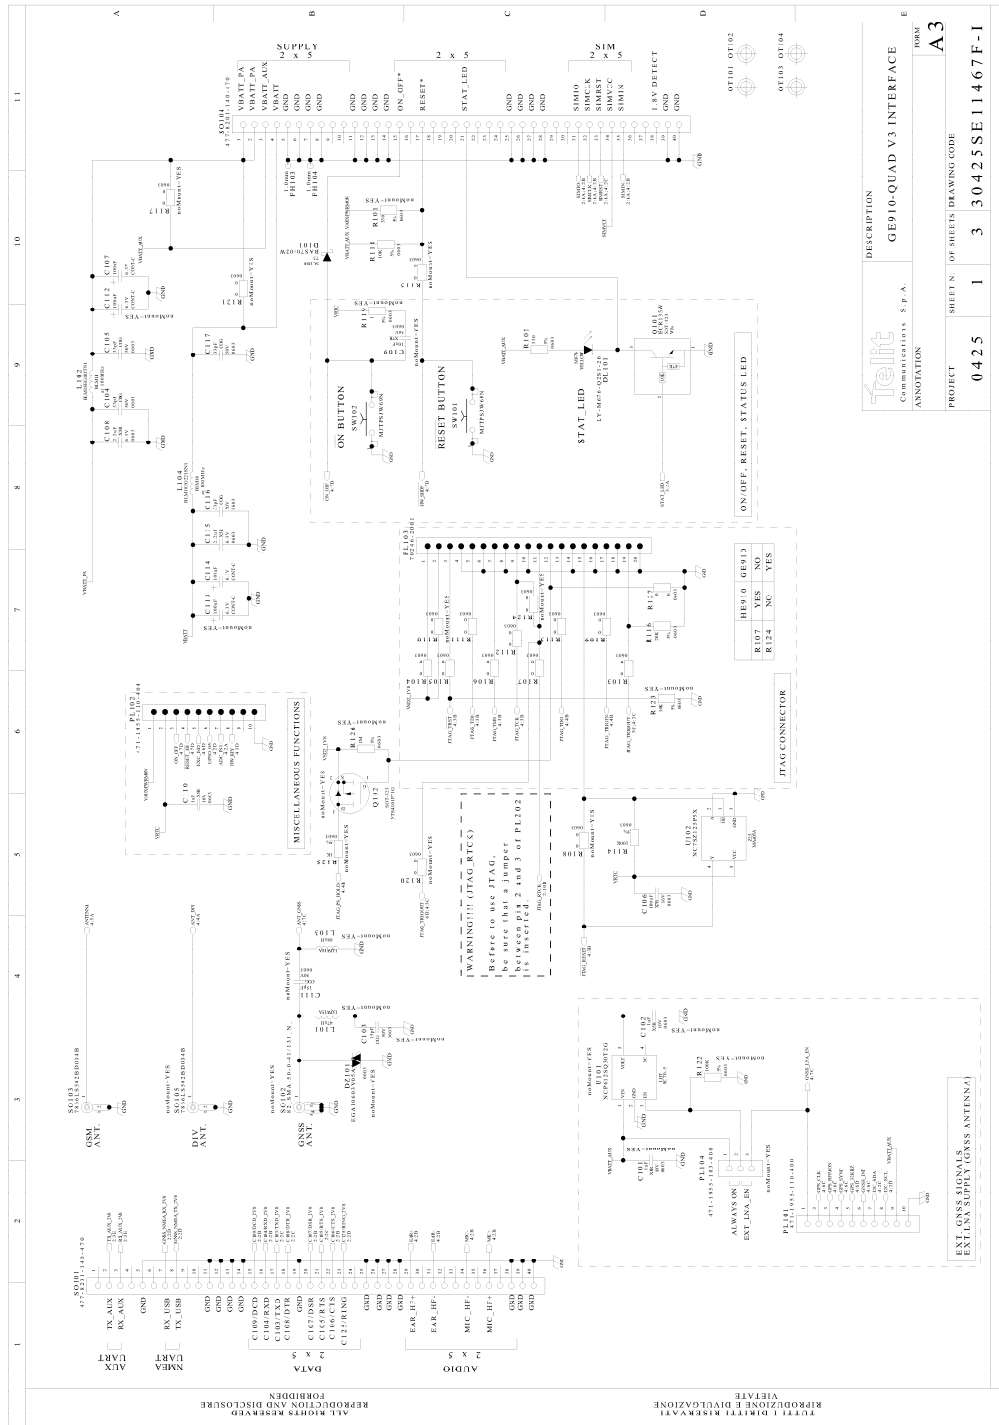


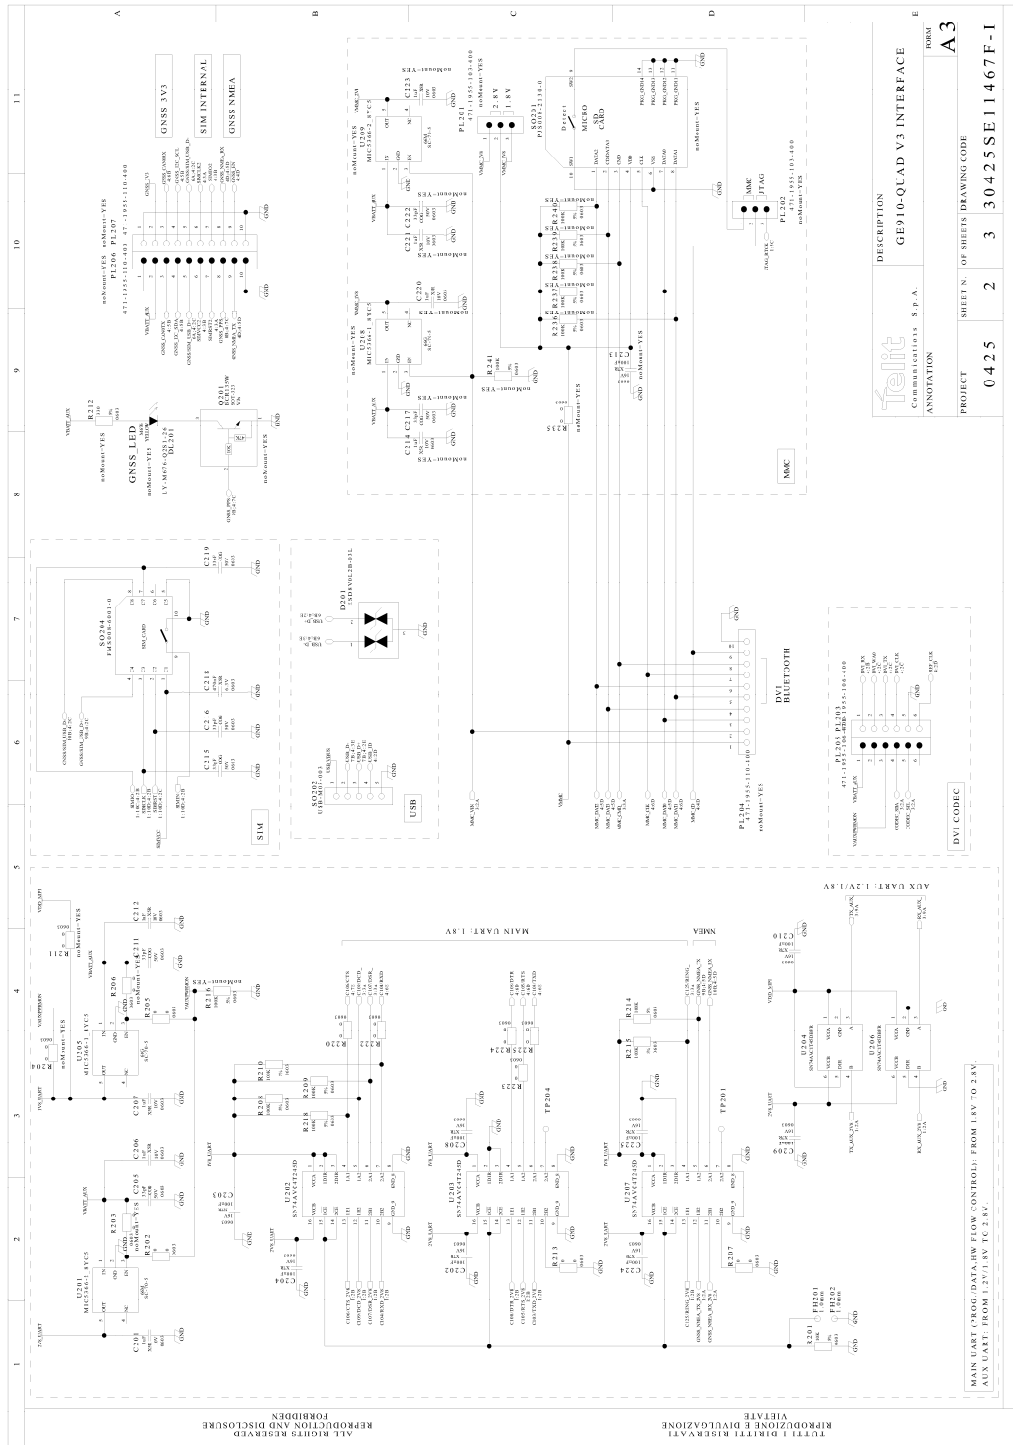


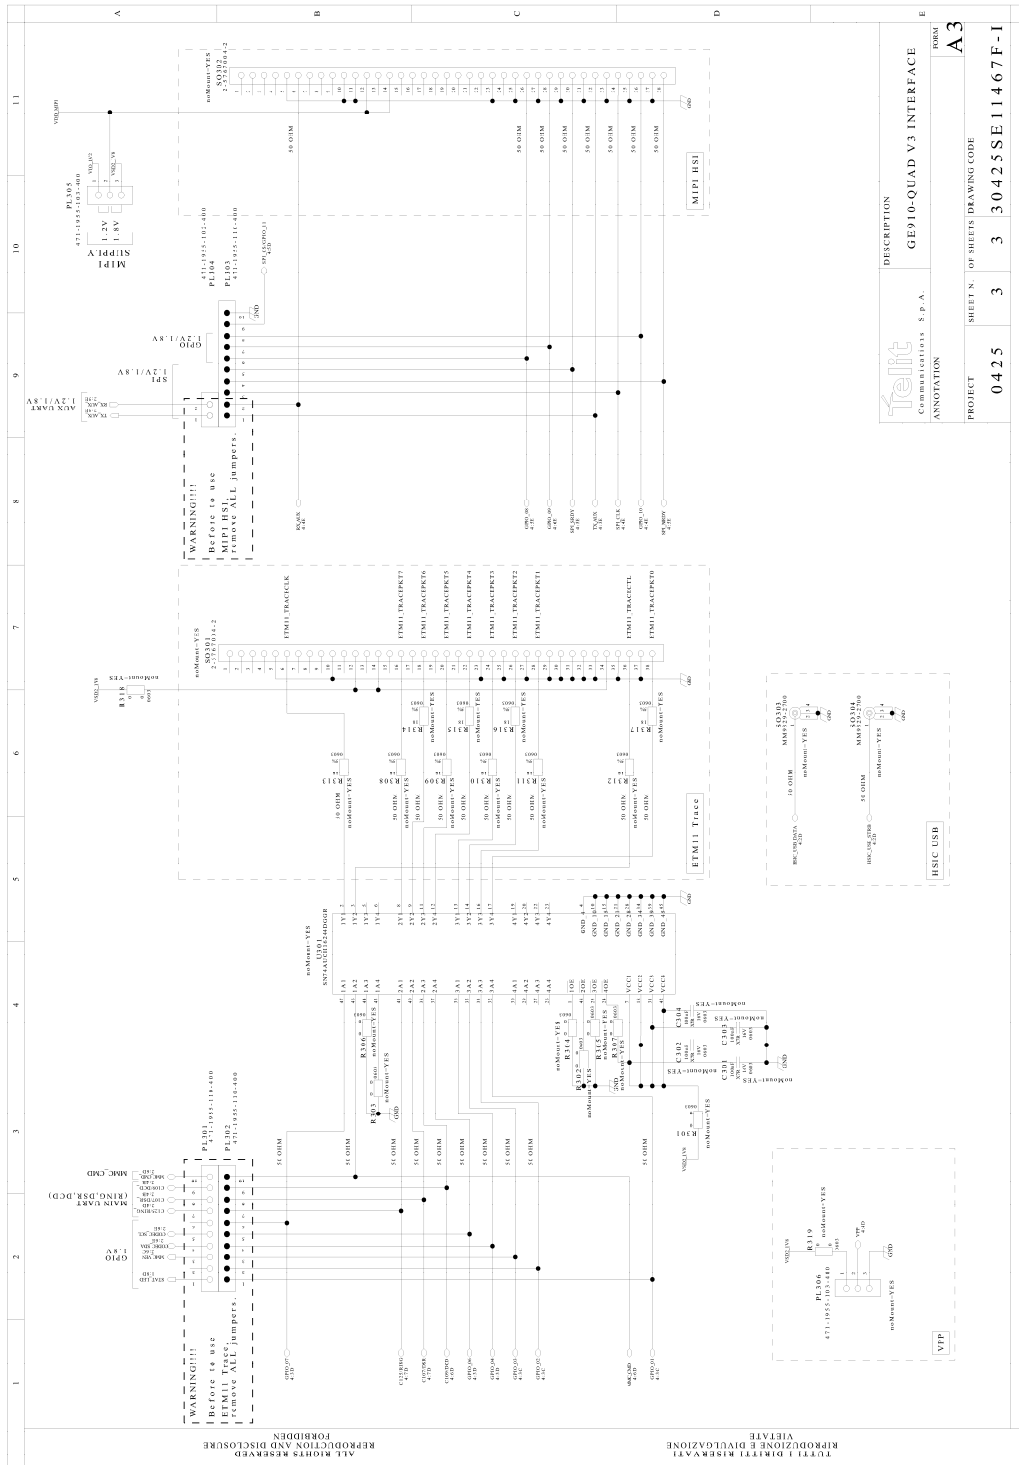


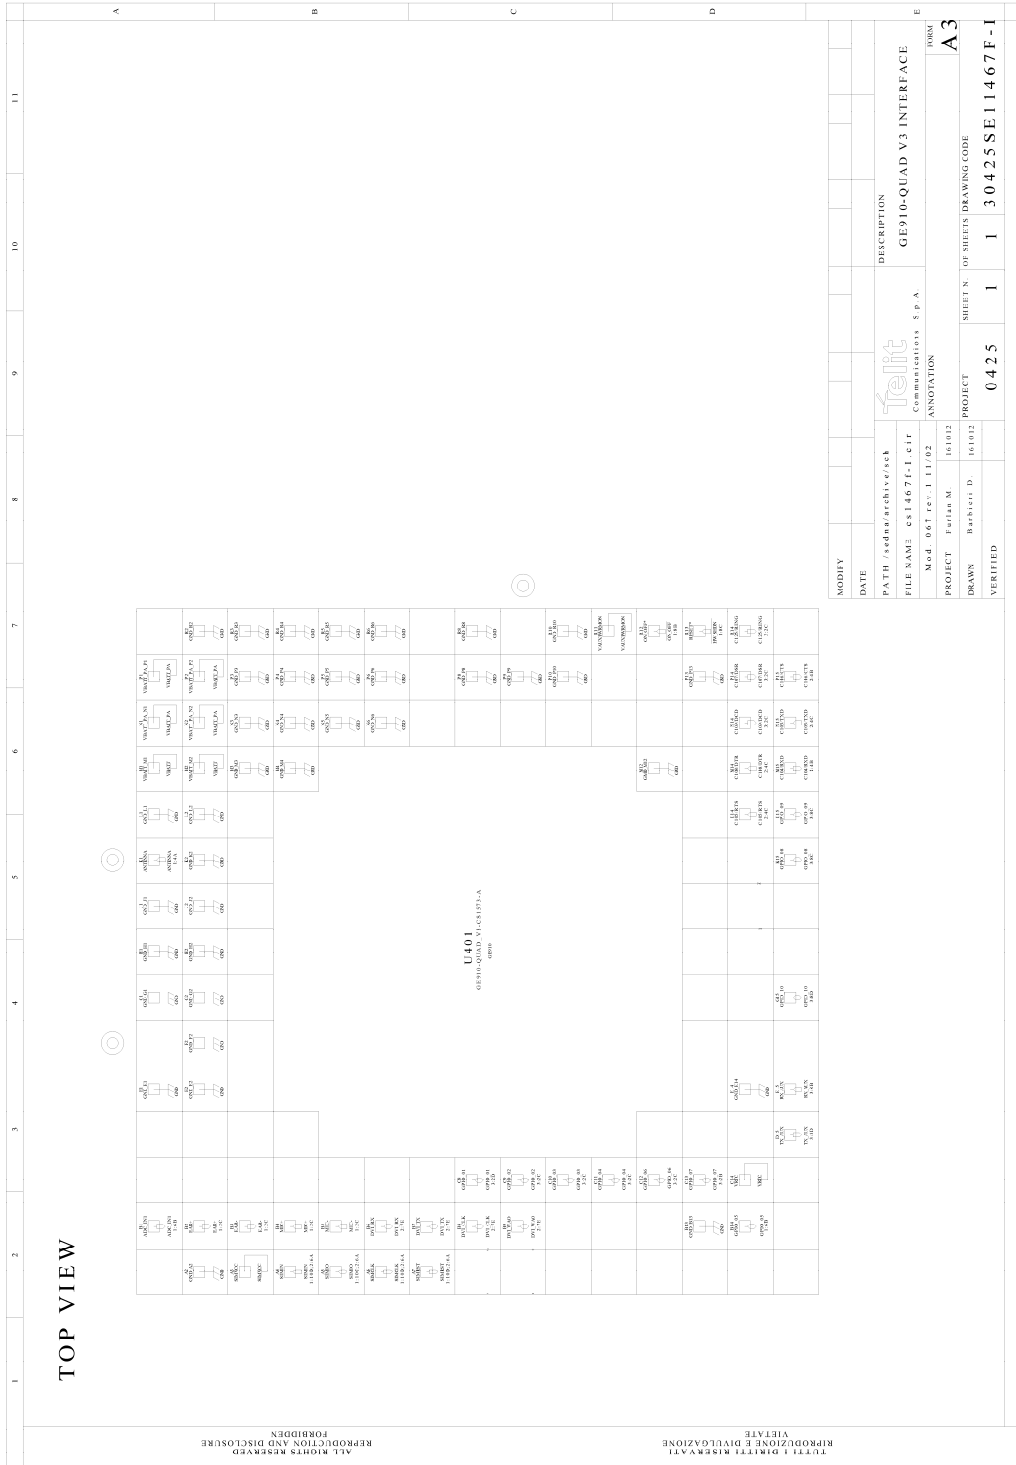

44.18. GE865 – JF2 Interface board

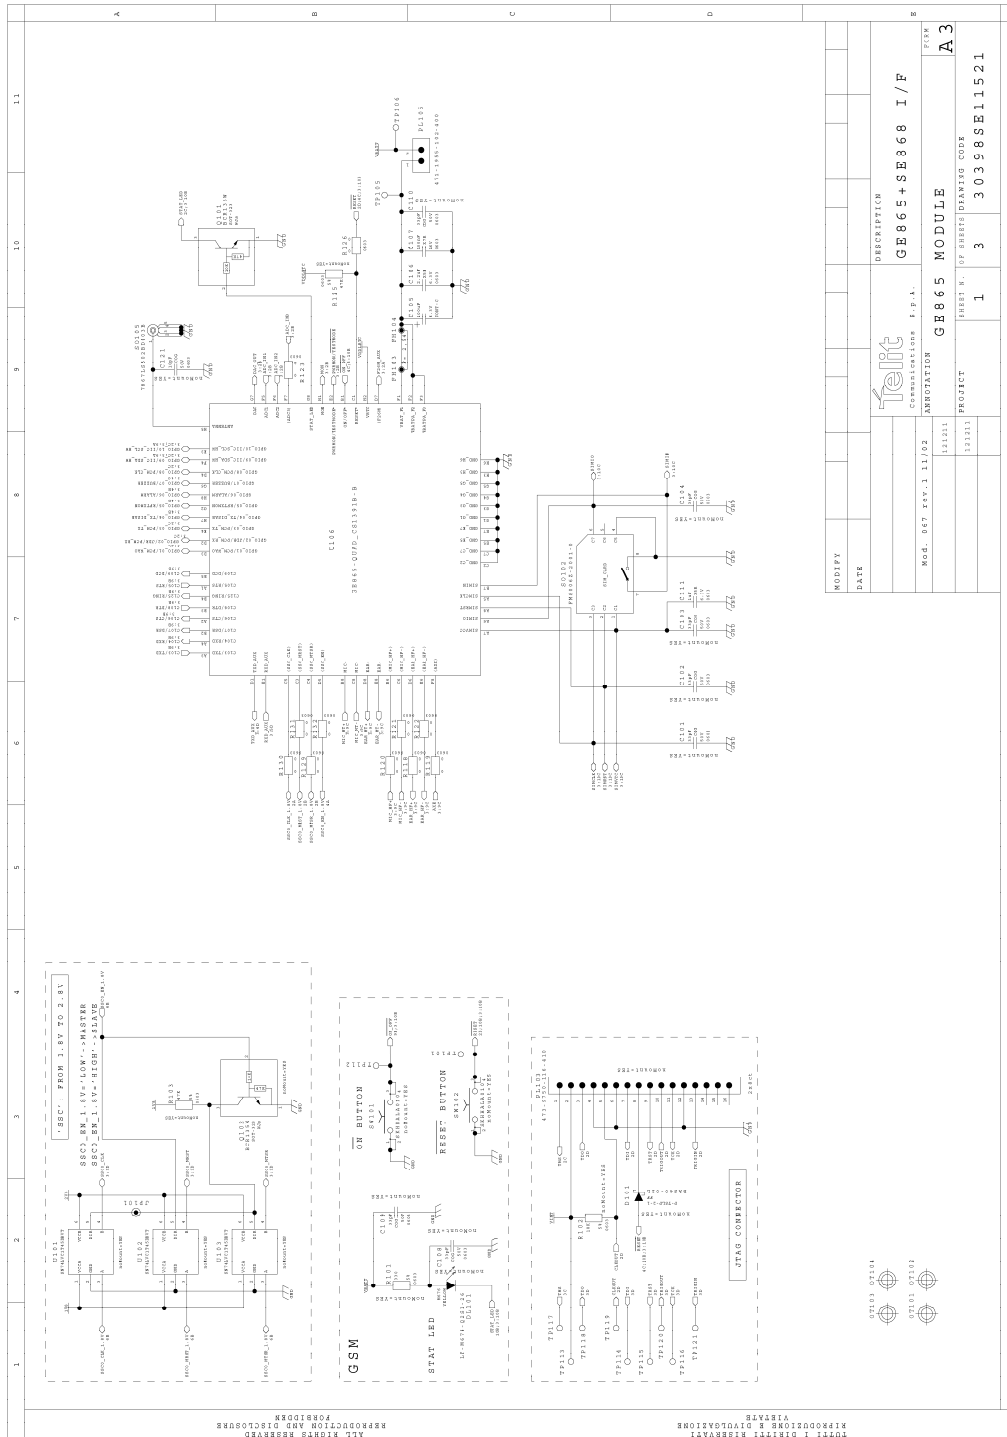

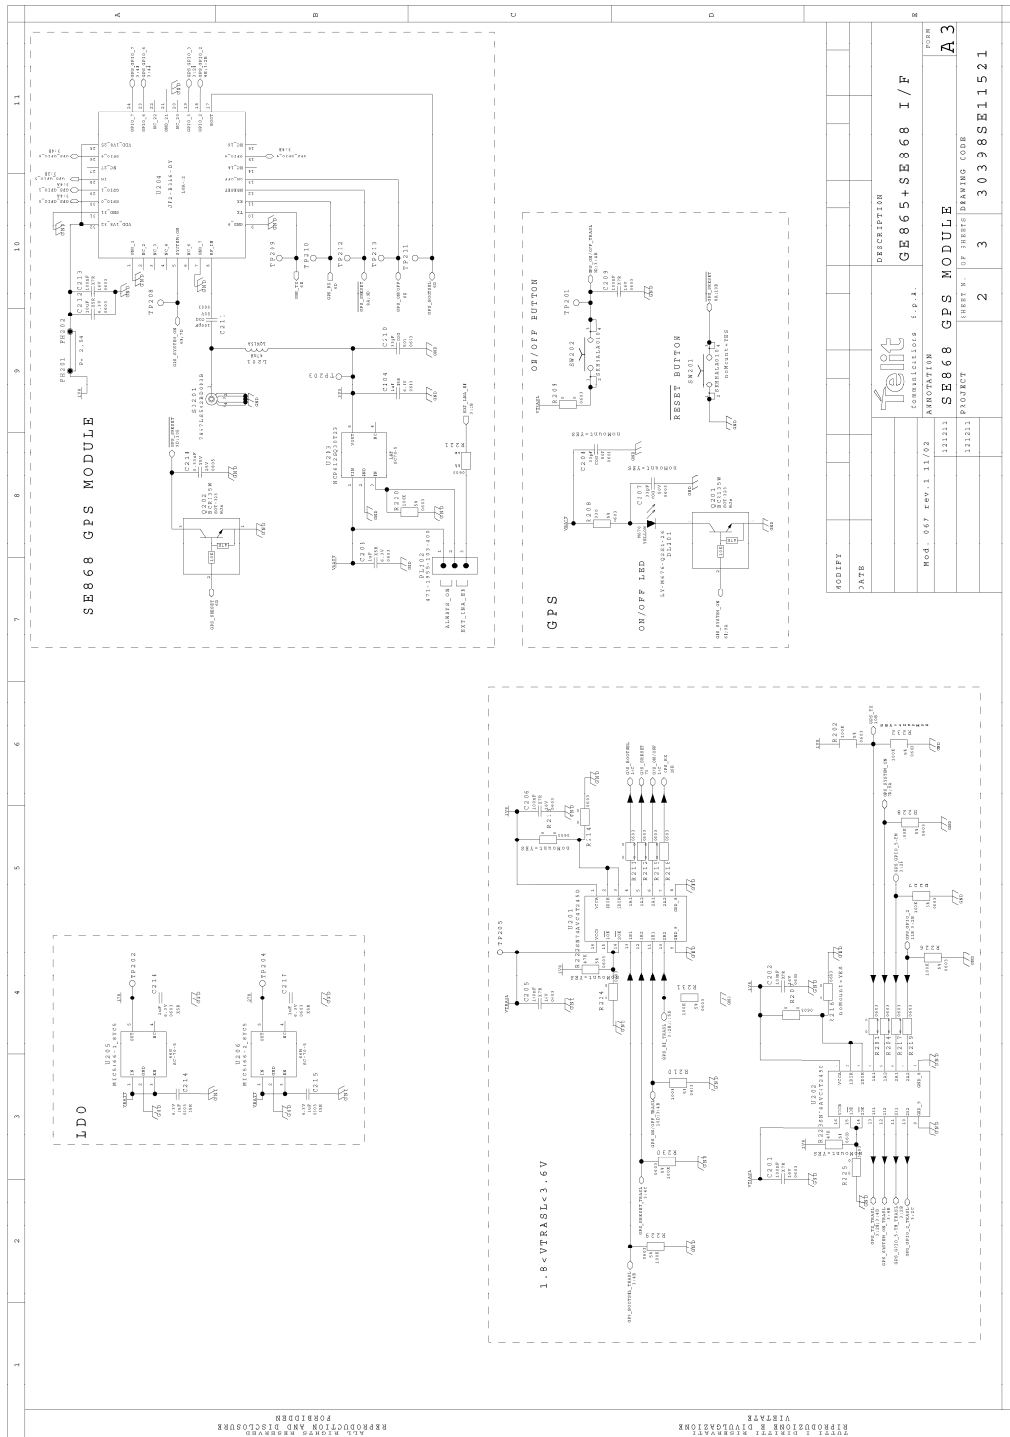


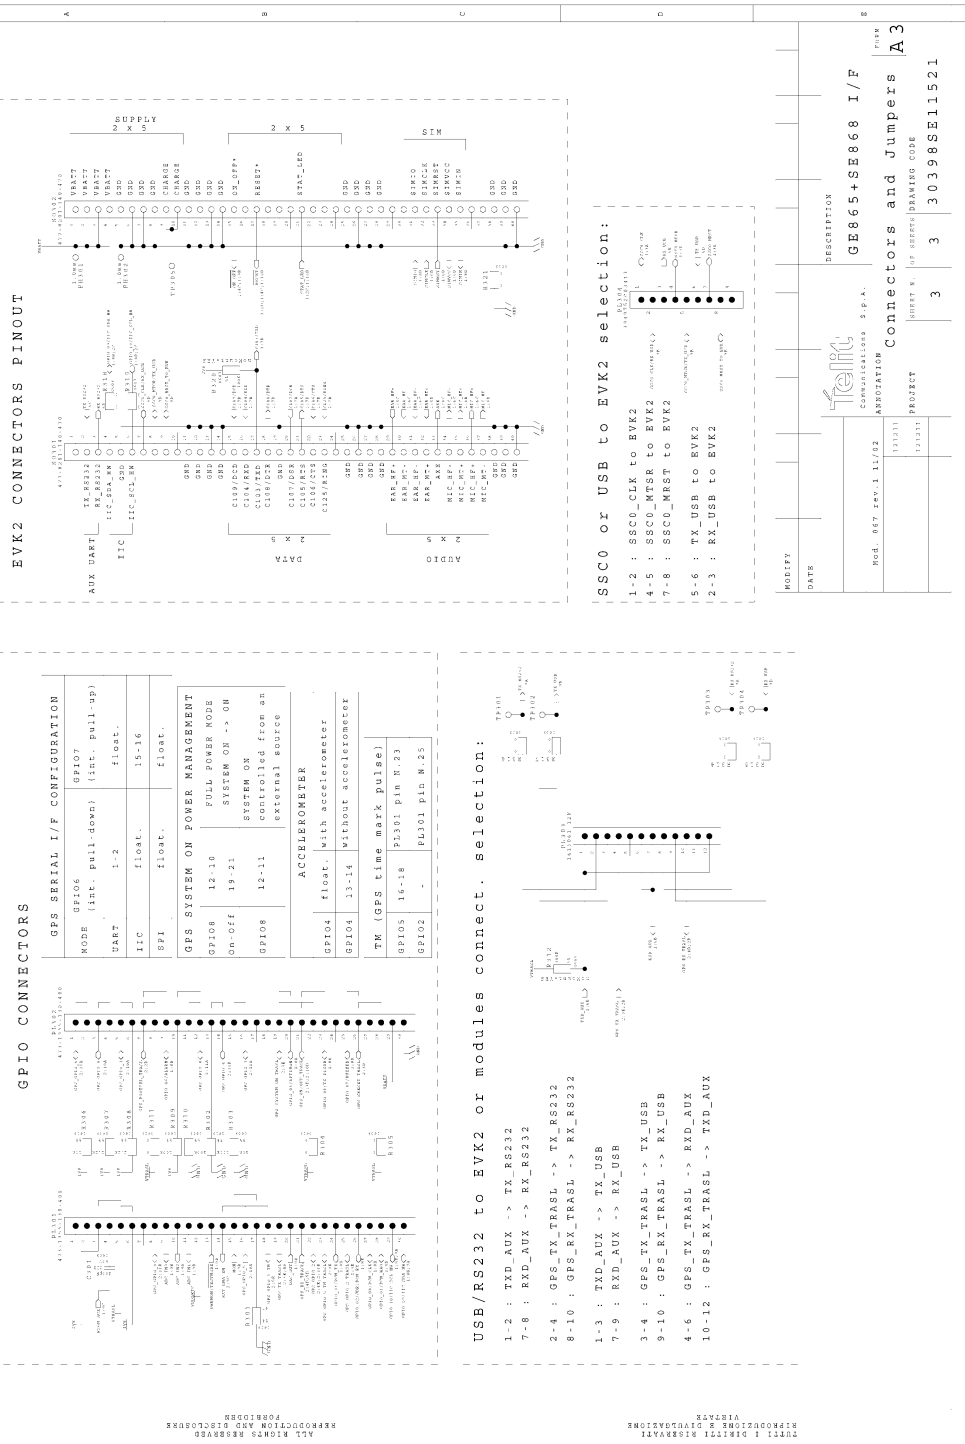



REVISED BY		DESCRIPTION	
DATE			
Mod. 067 rev.1 11/02		GB865+SE868 I/P	
TECHNICAL INFORMATION		PROJECT	
DESIGNER	3	PROJECT	30398SE11521
DESIGNATION	3	PROJECT	30398SE11521
TECHNICAL INFORMATION		PROJECT	
DESIGNER	3	PROJECT	30398SE11521
DESIGNATION	3	PROJECT	30398SE11521




44.19. GL865 – SL869/JN3 Interface board

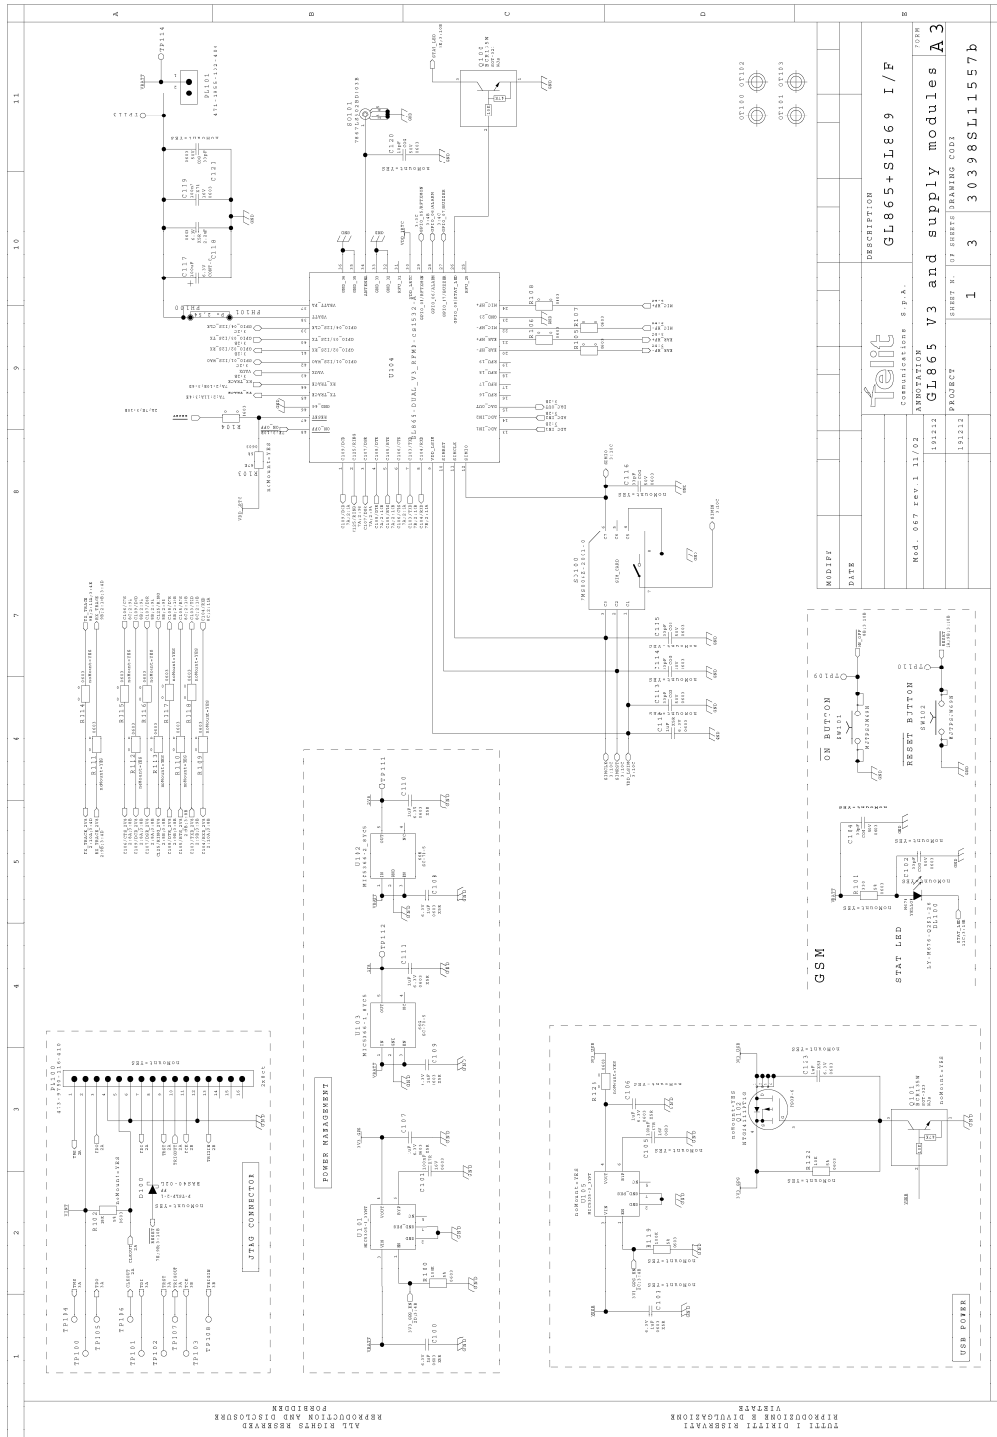


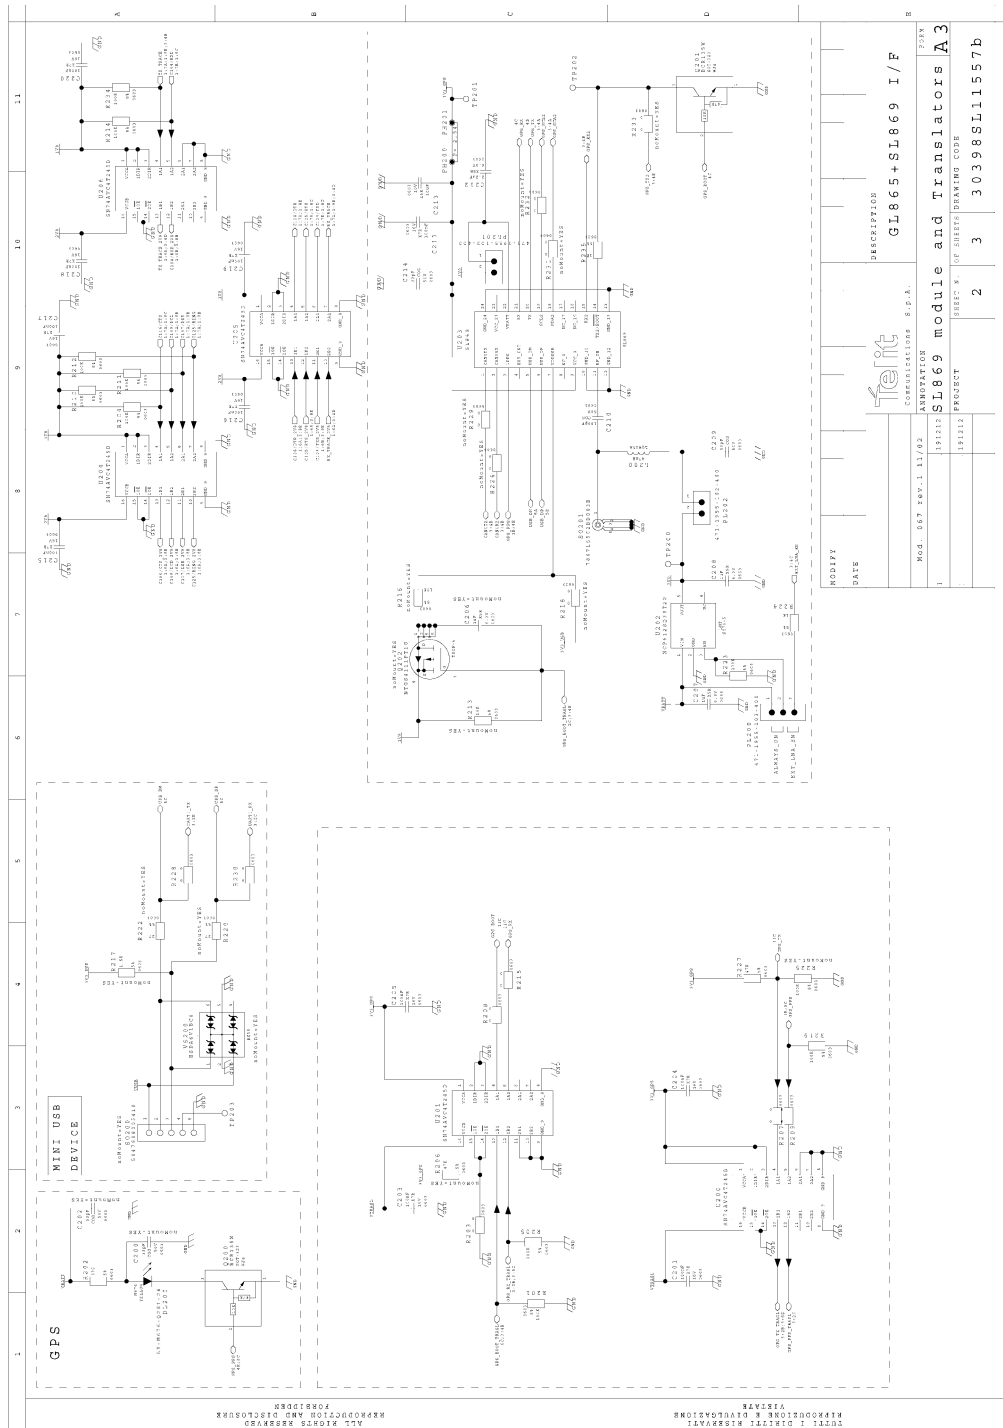


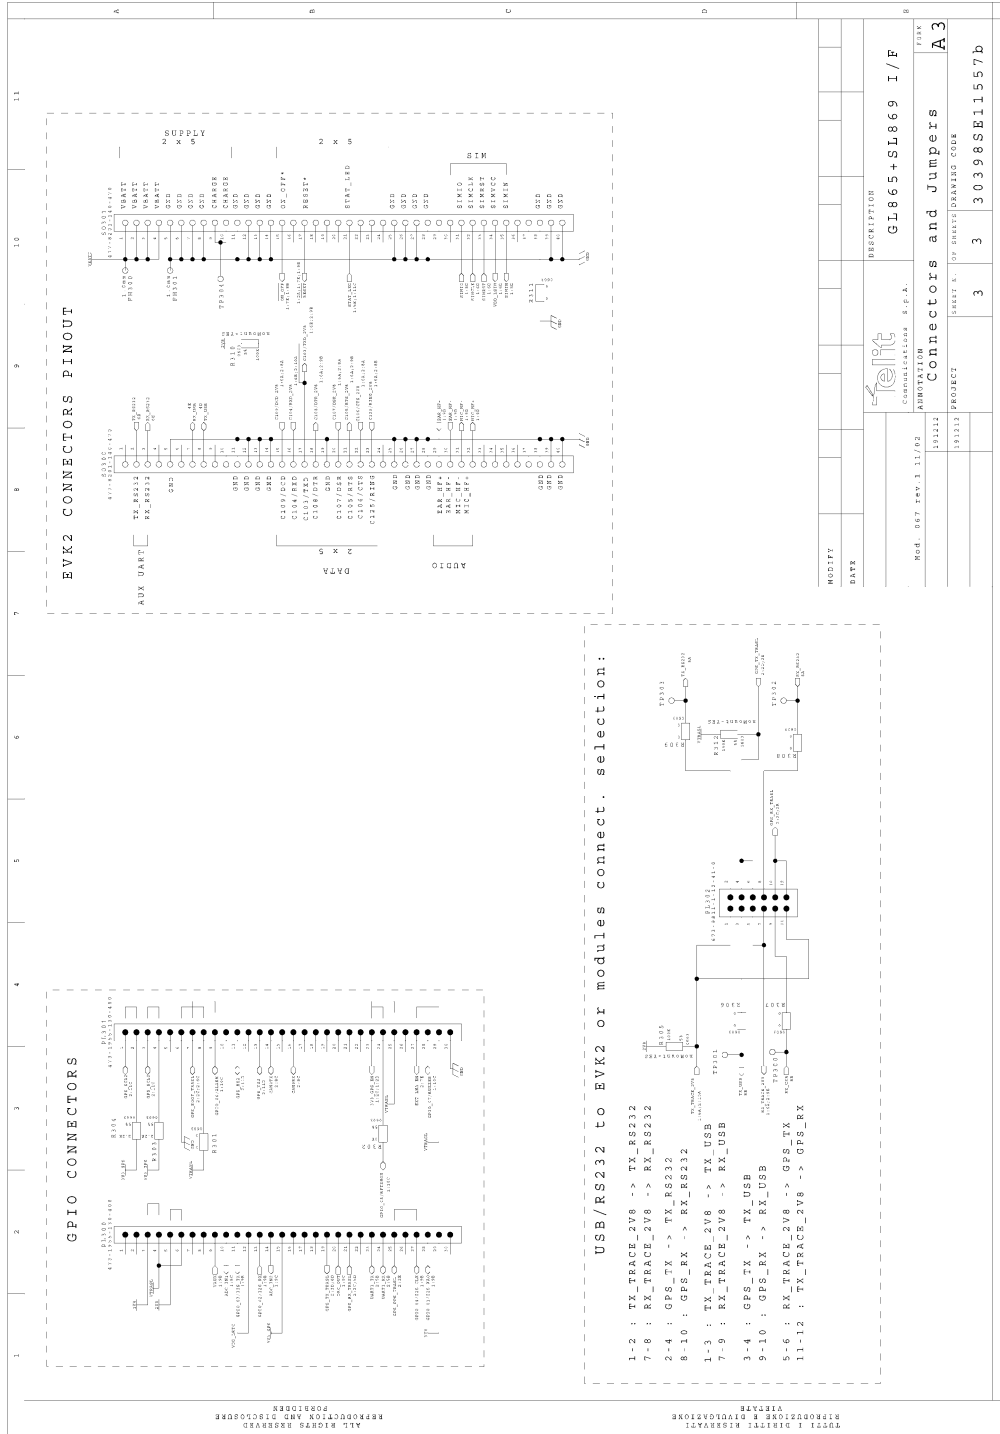


44.20. DE910 Interface board

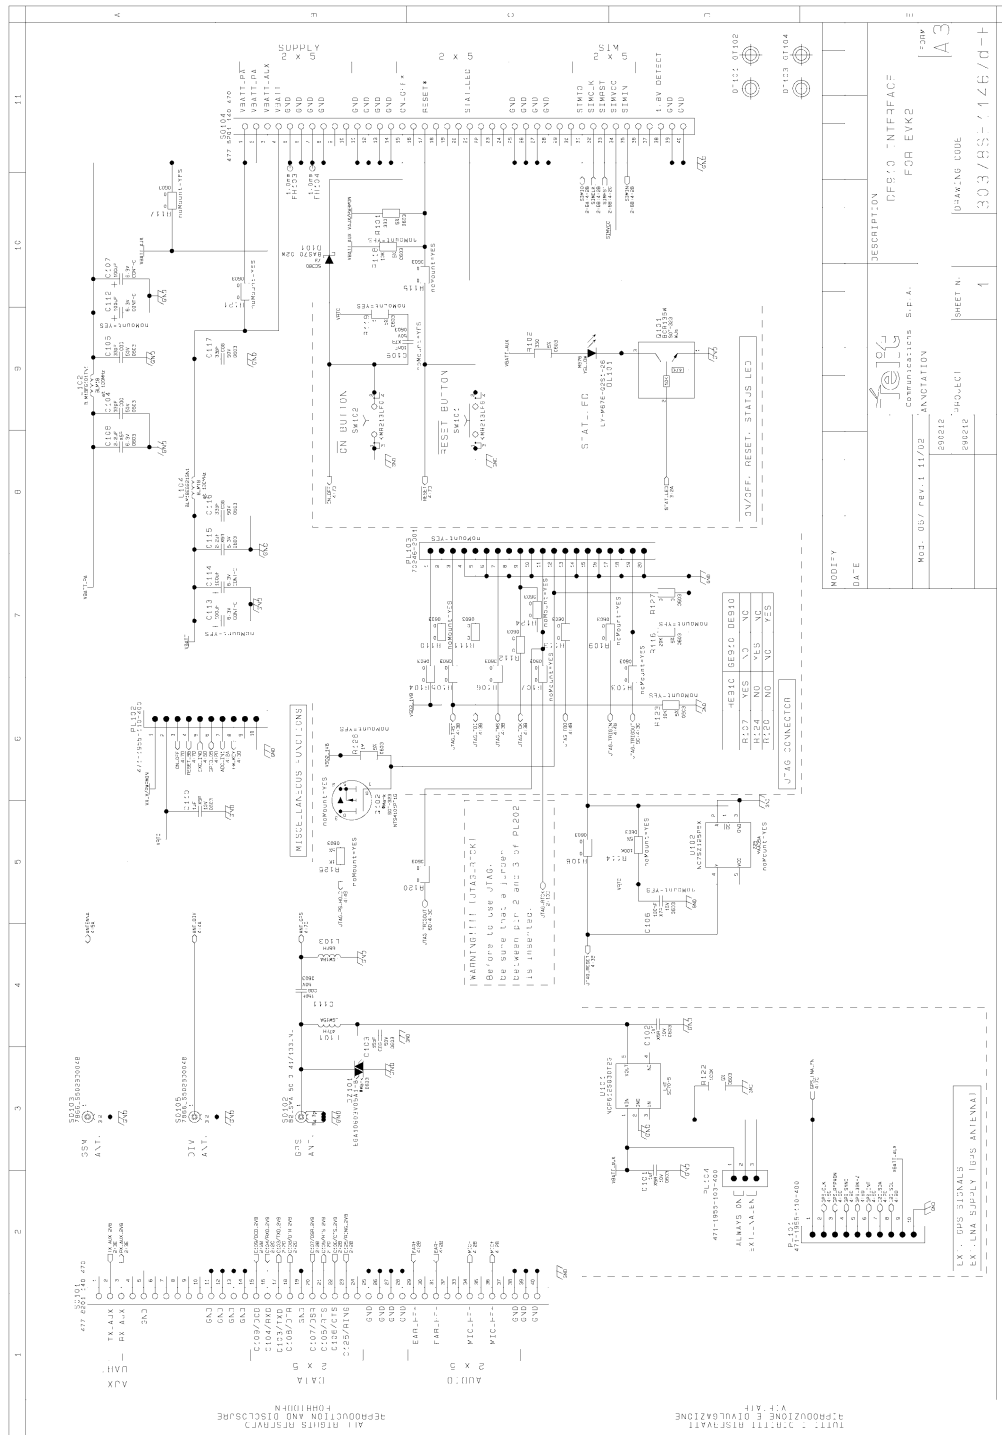


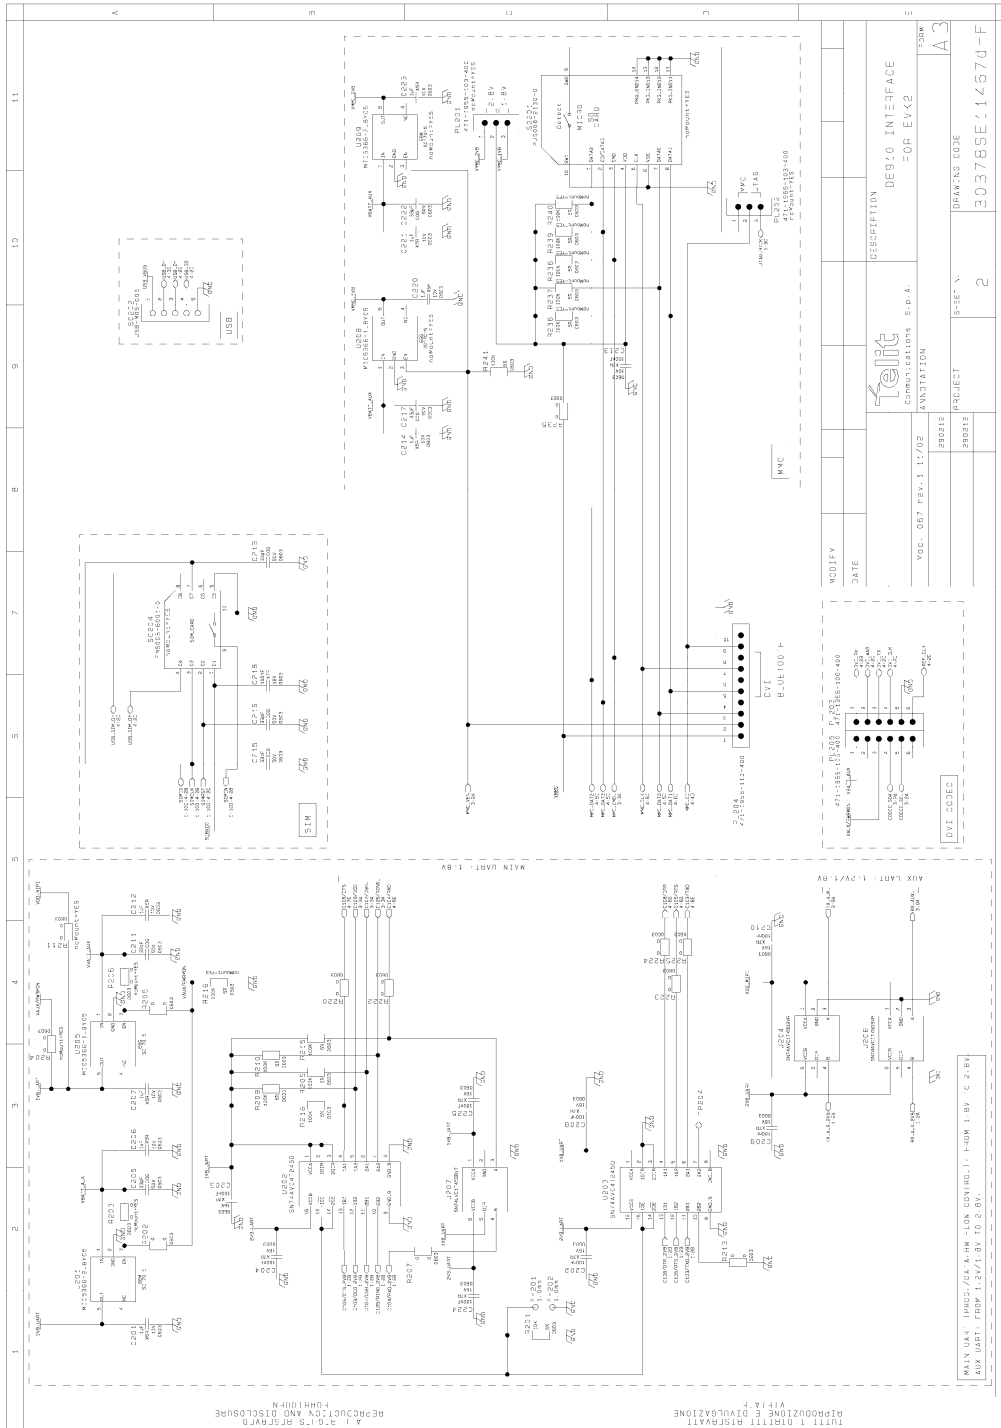


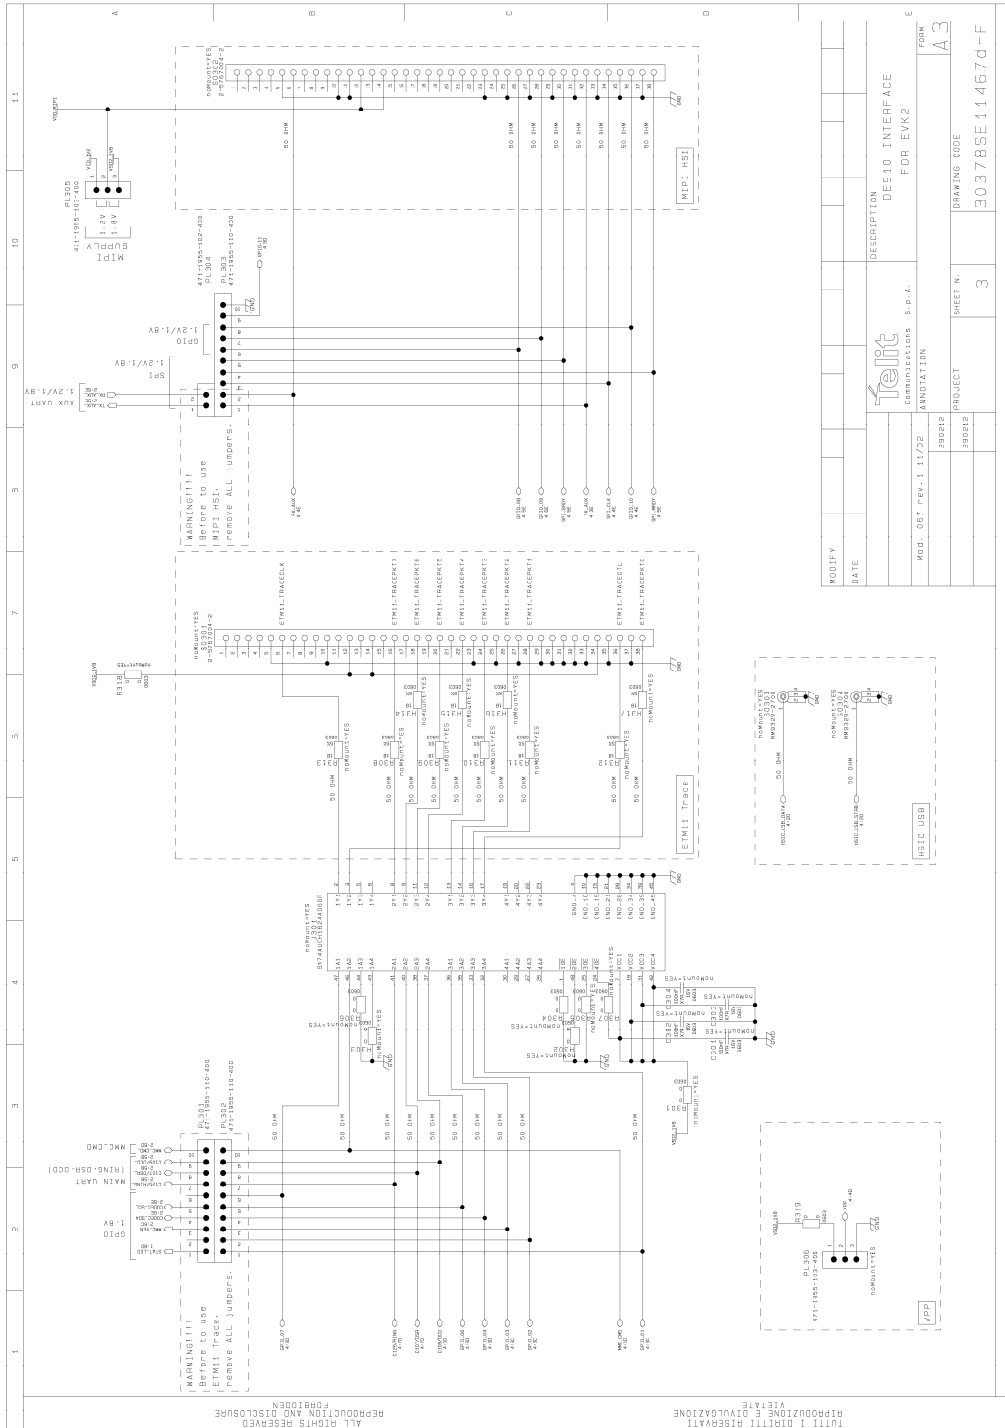


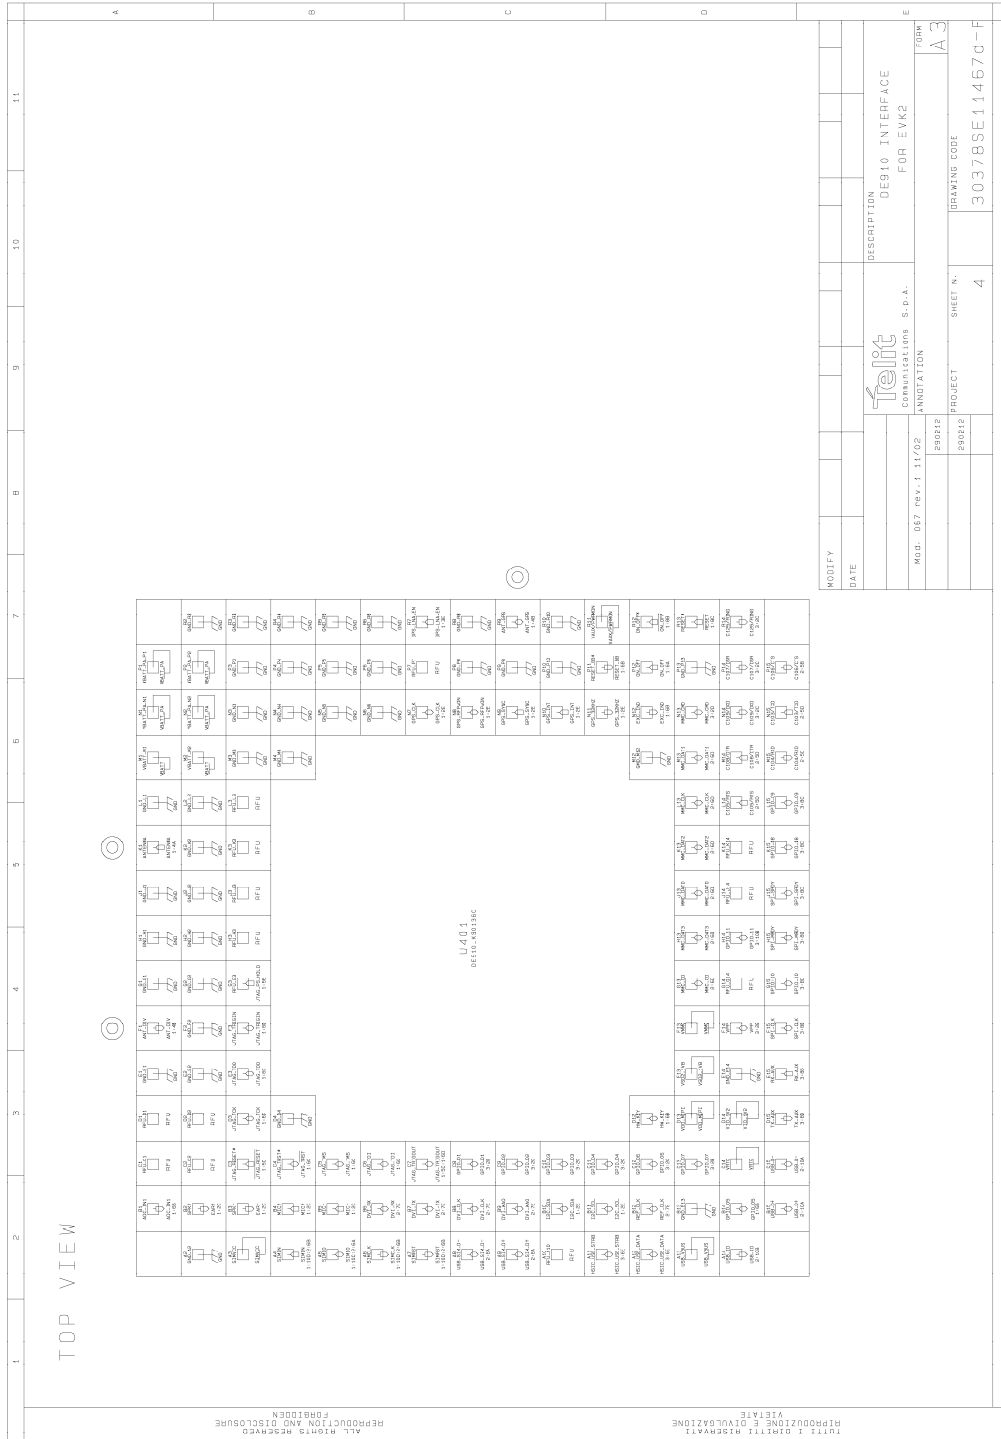

44.21. CE910 Interface board

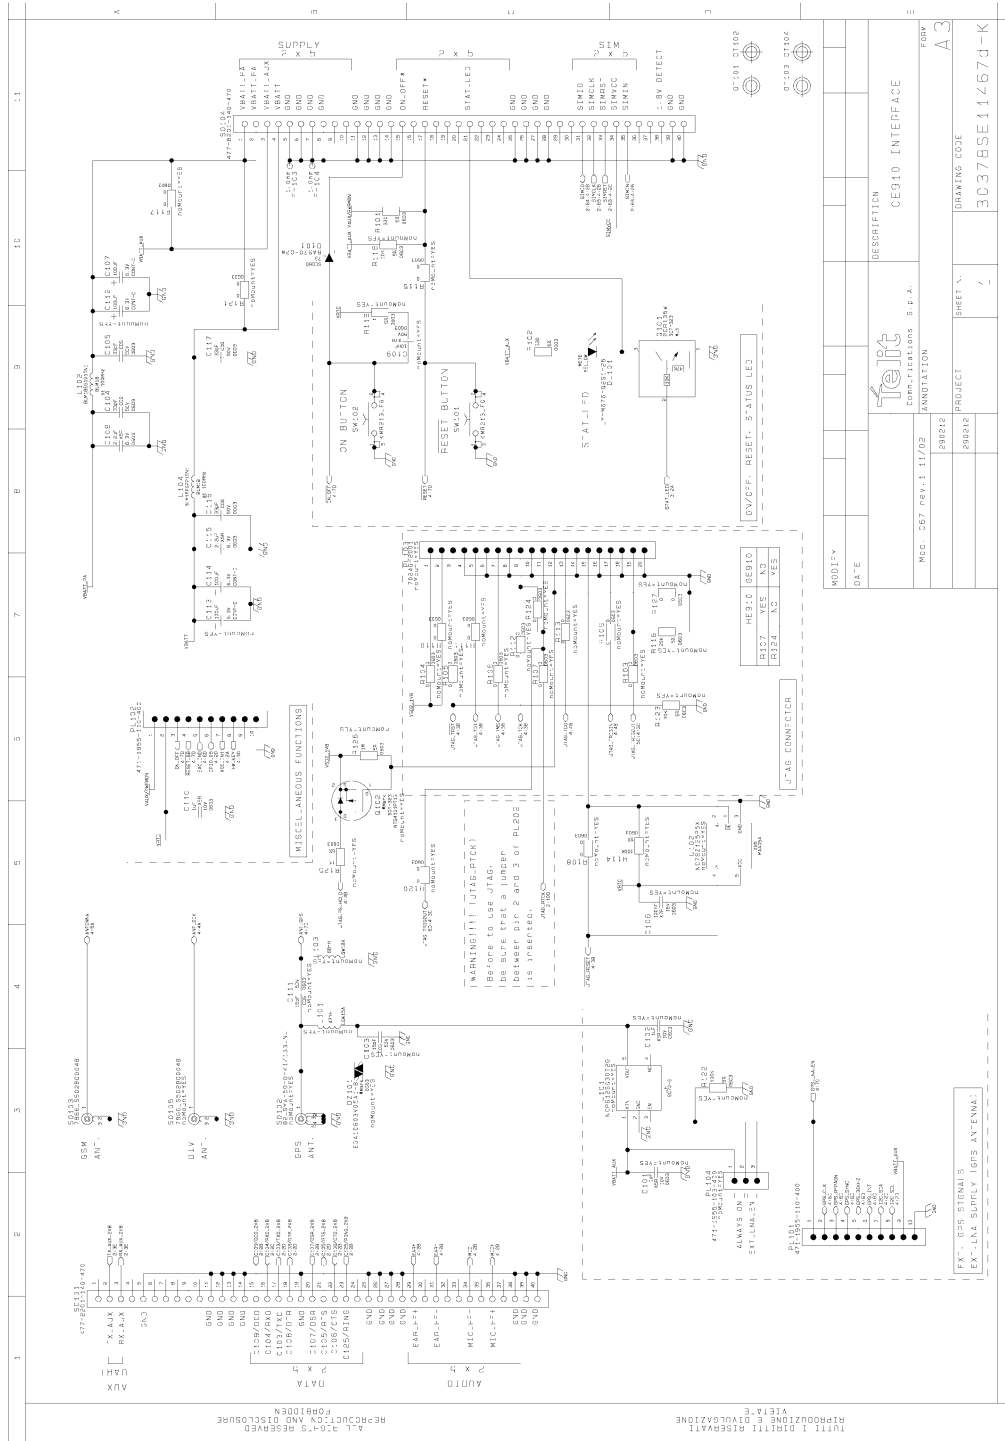

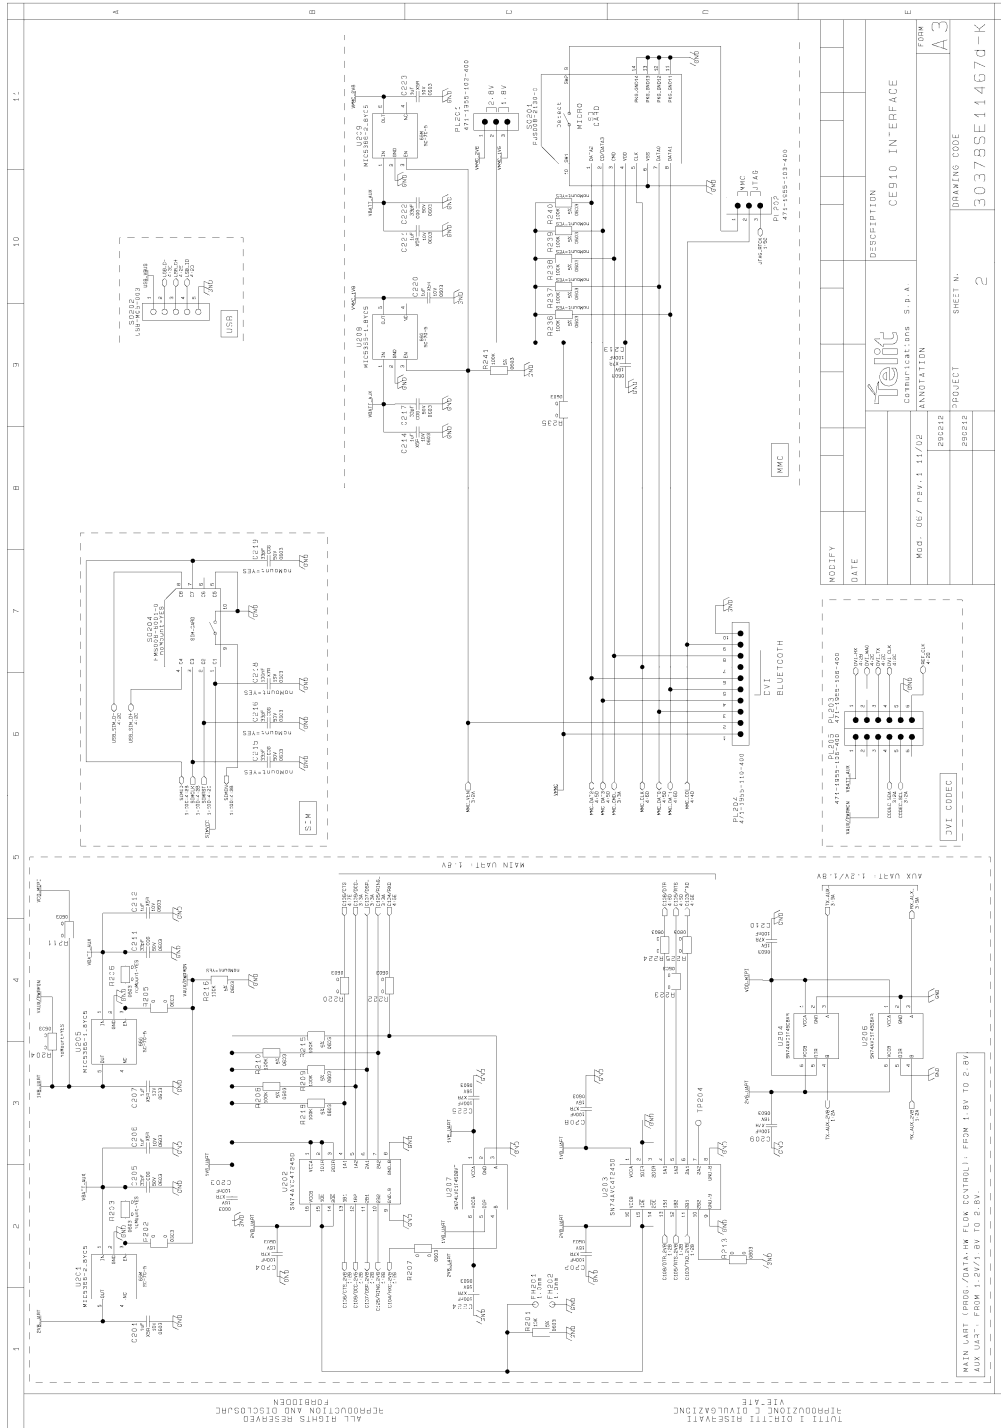

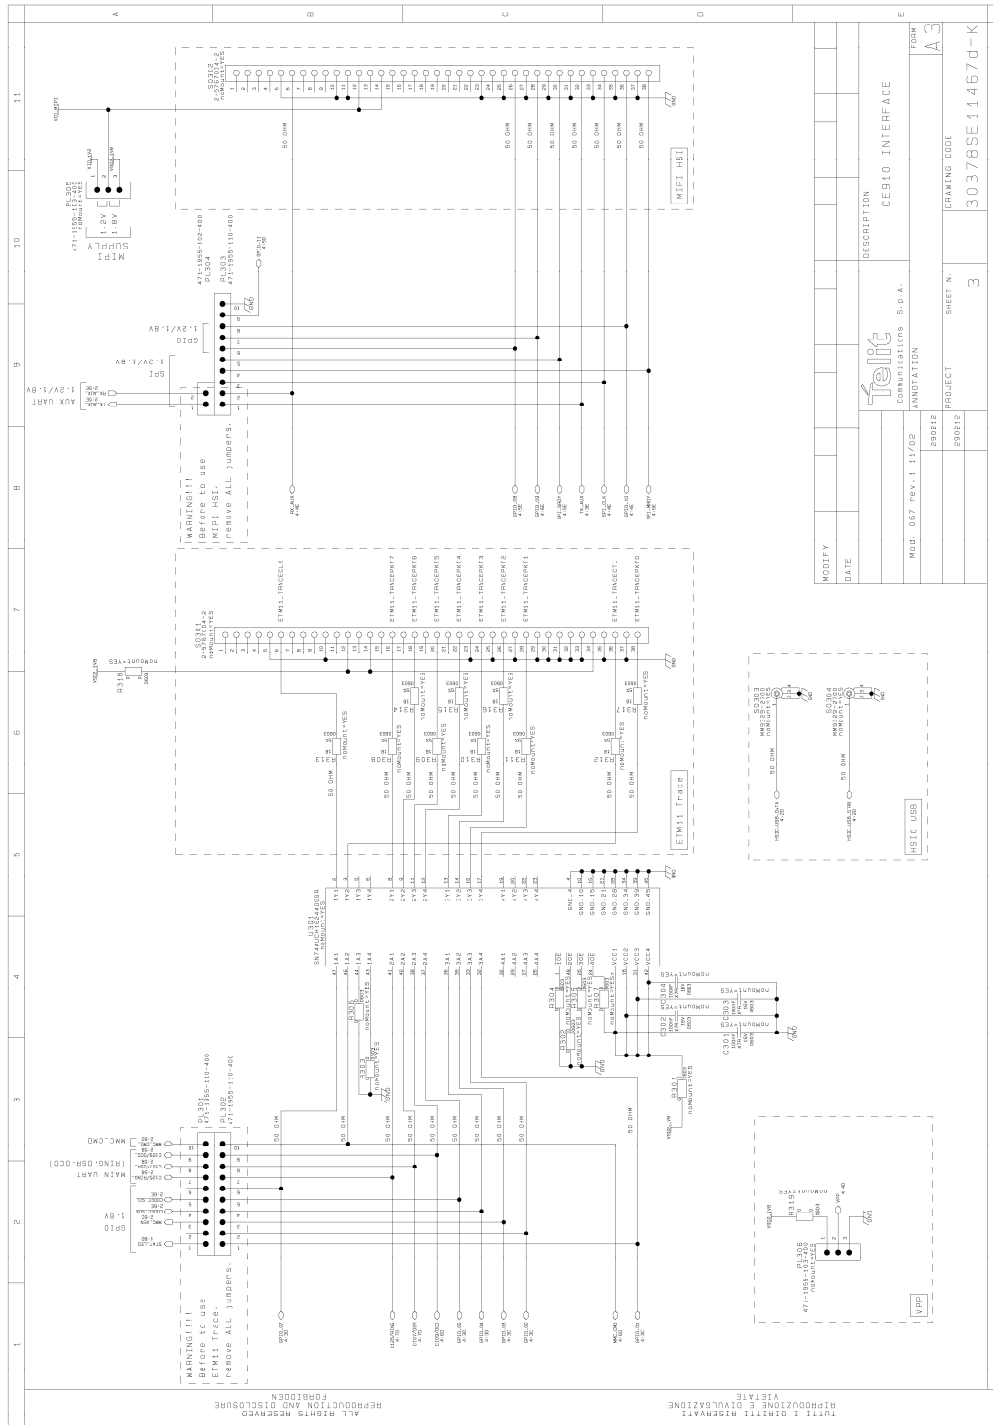


MODIFY		DESCRIPTION	CE910 INTERFACE
DATE		COMMUNICATIONS S.p.A.	
		ANNOUATION	FORK A3
		PROJECT	30378SE11467d-K
		SHEET N.	3
		DRAWING CODE	




Telit EVK2 User Guide


1wv0300704 Rev.19 – 2015/01/26

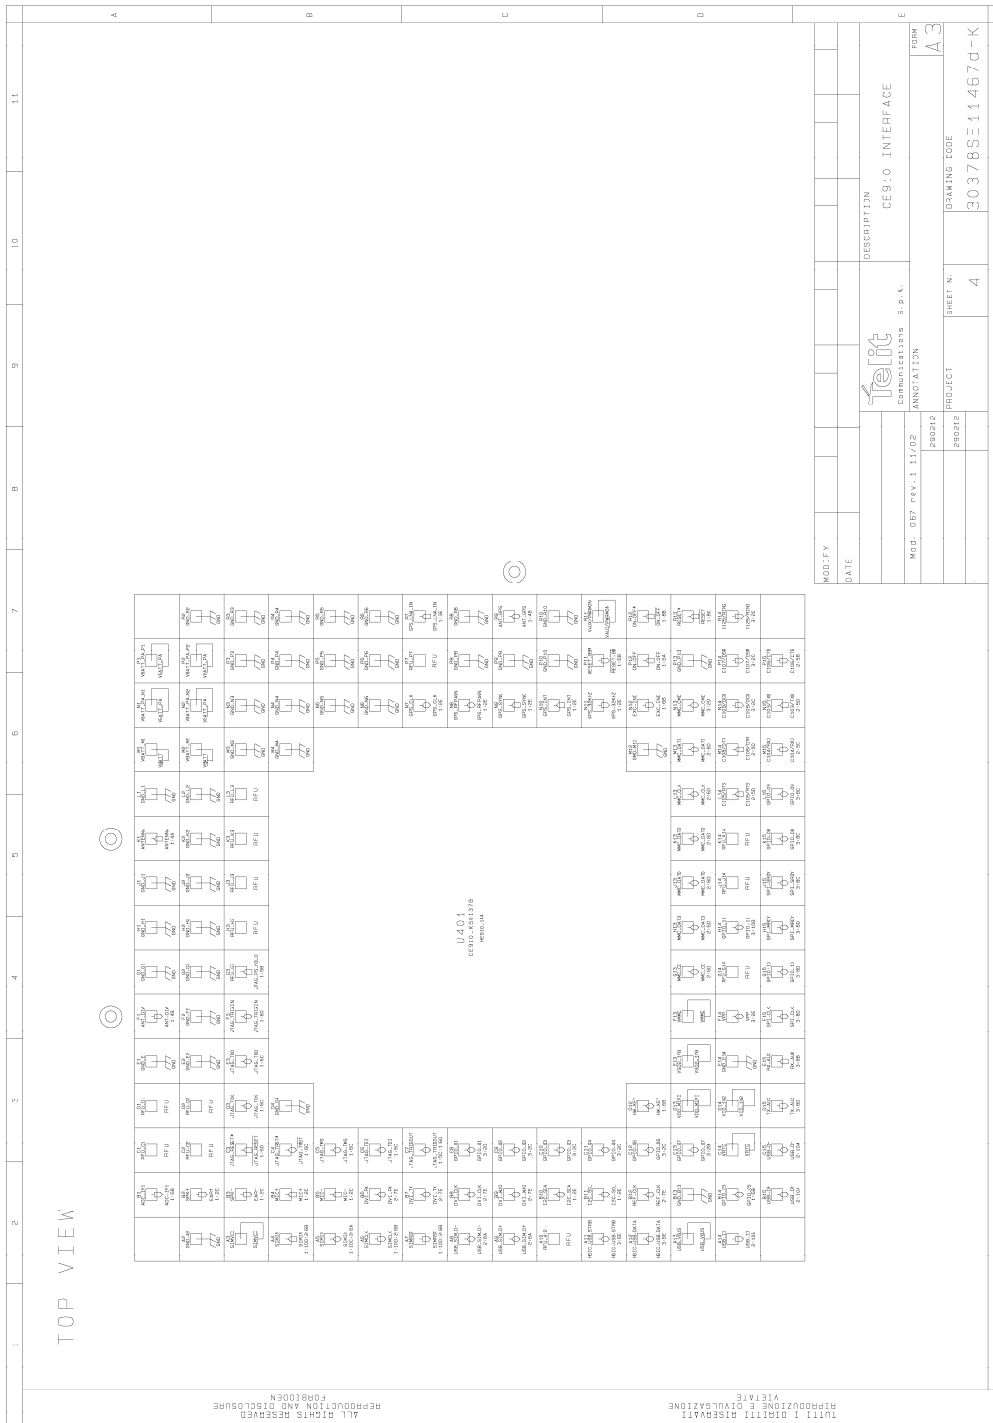


44.22. GL865 V3 Interface board

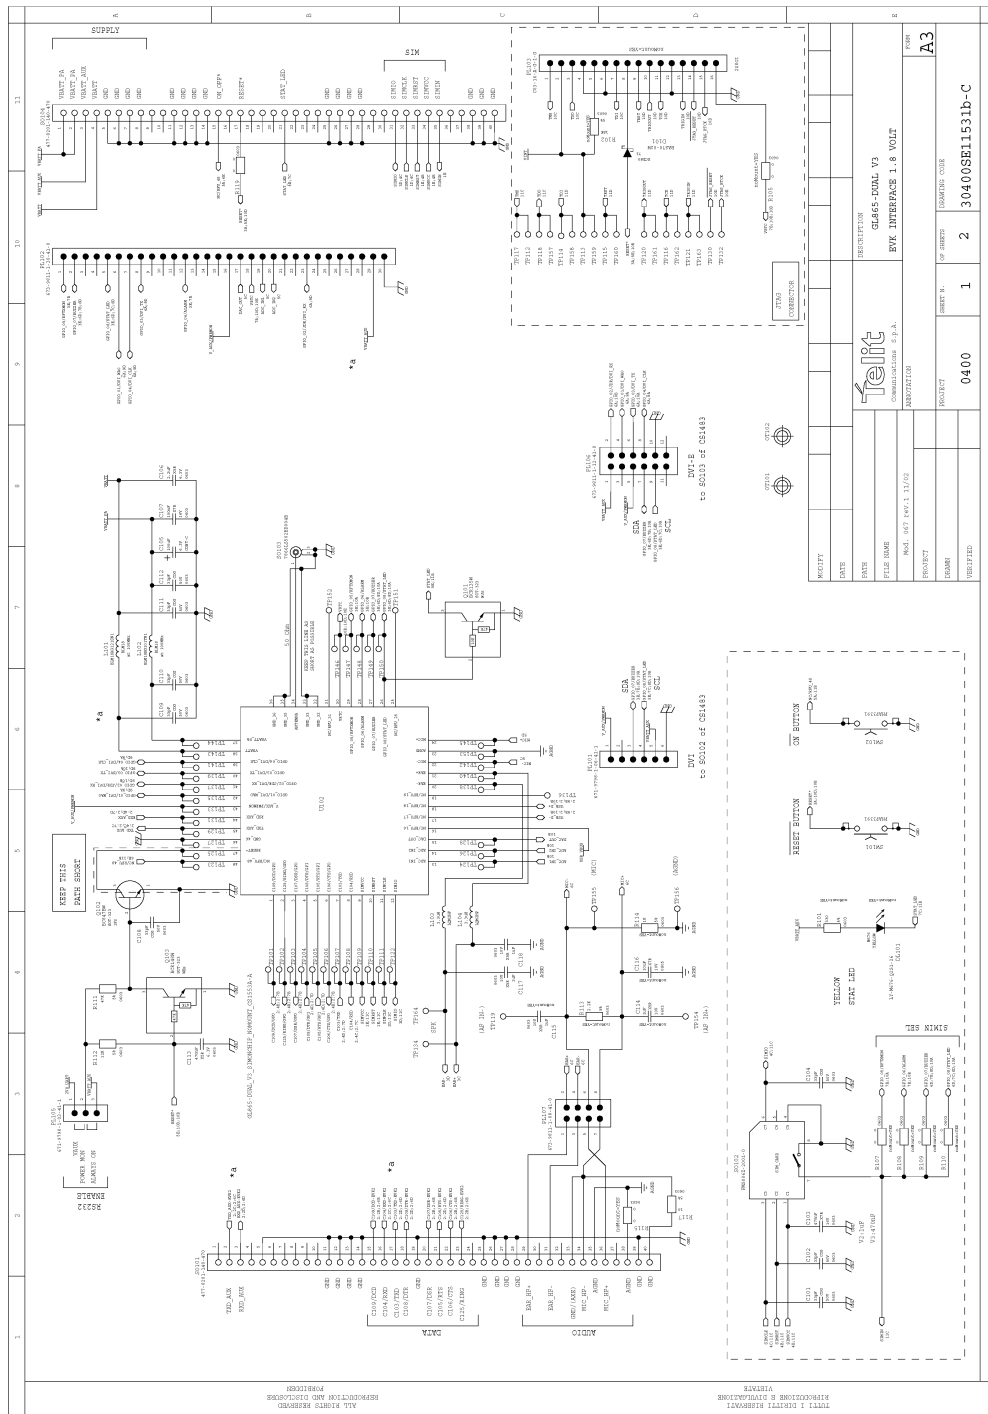


Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

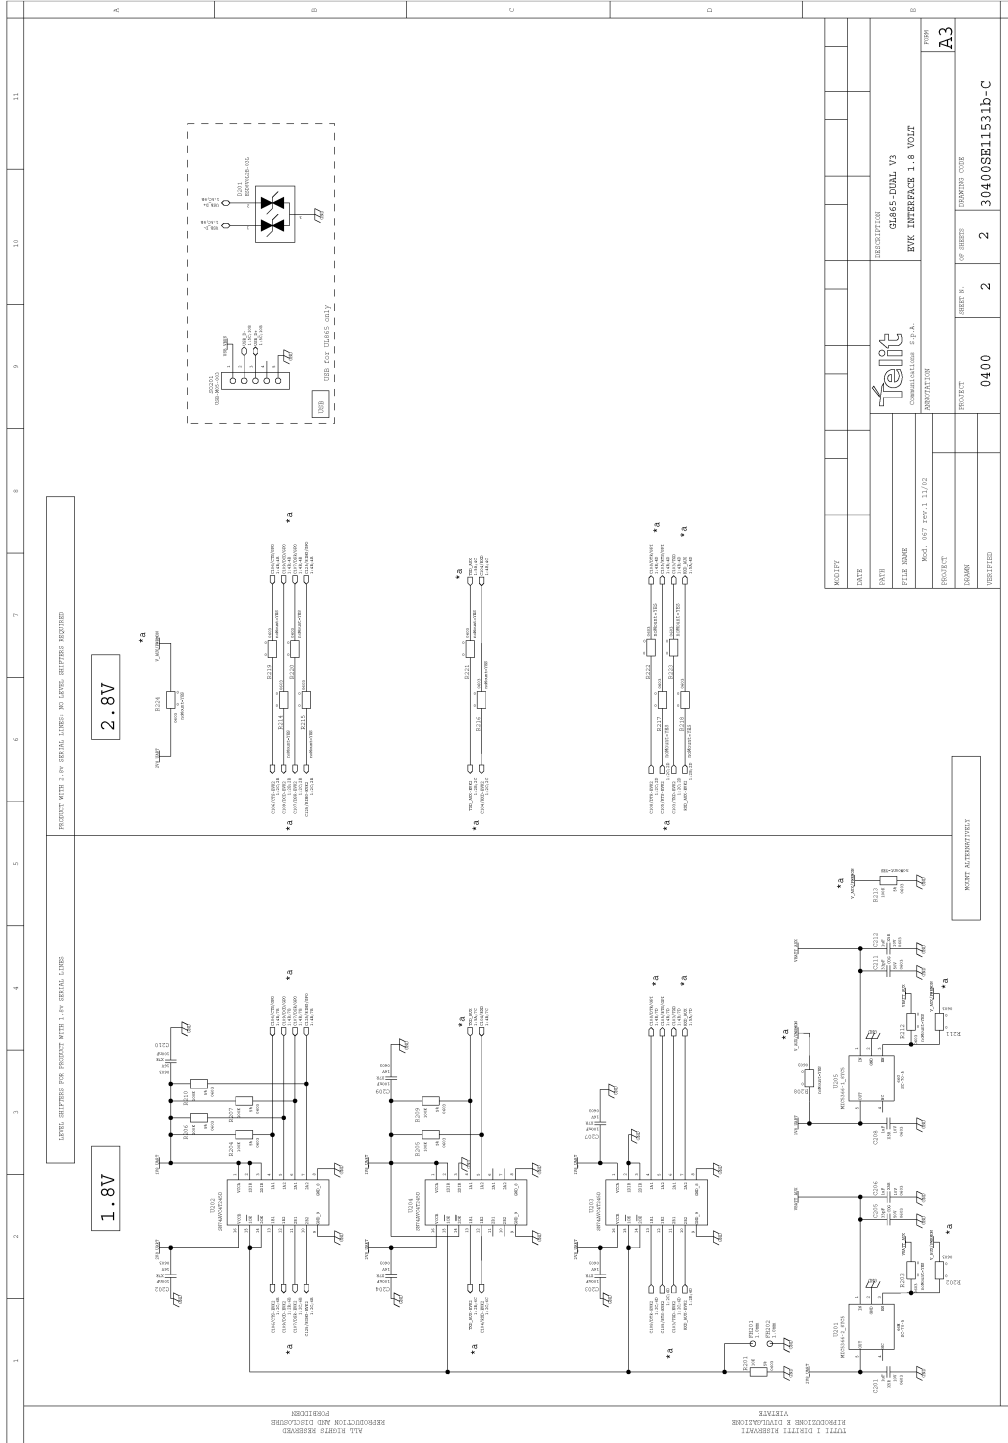


44.23. LE920 Interface board

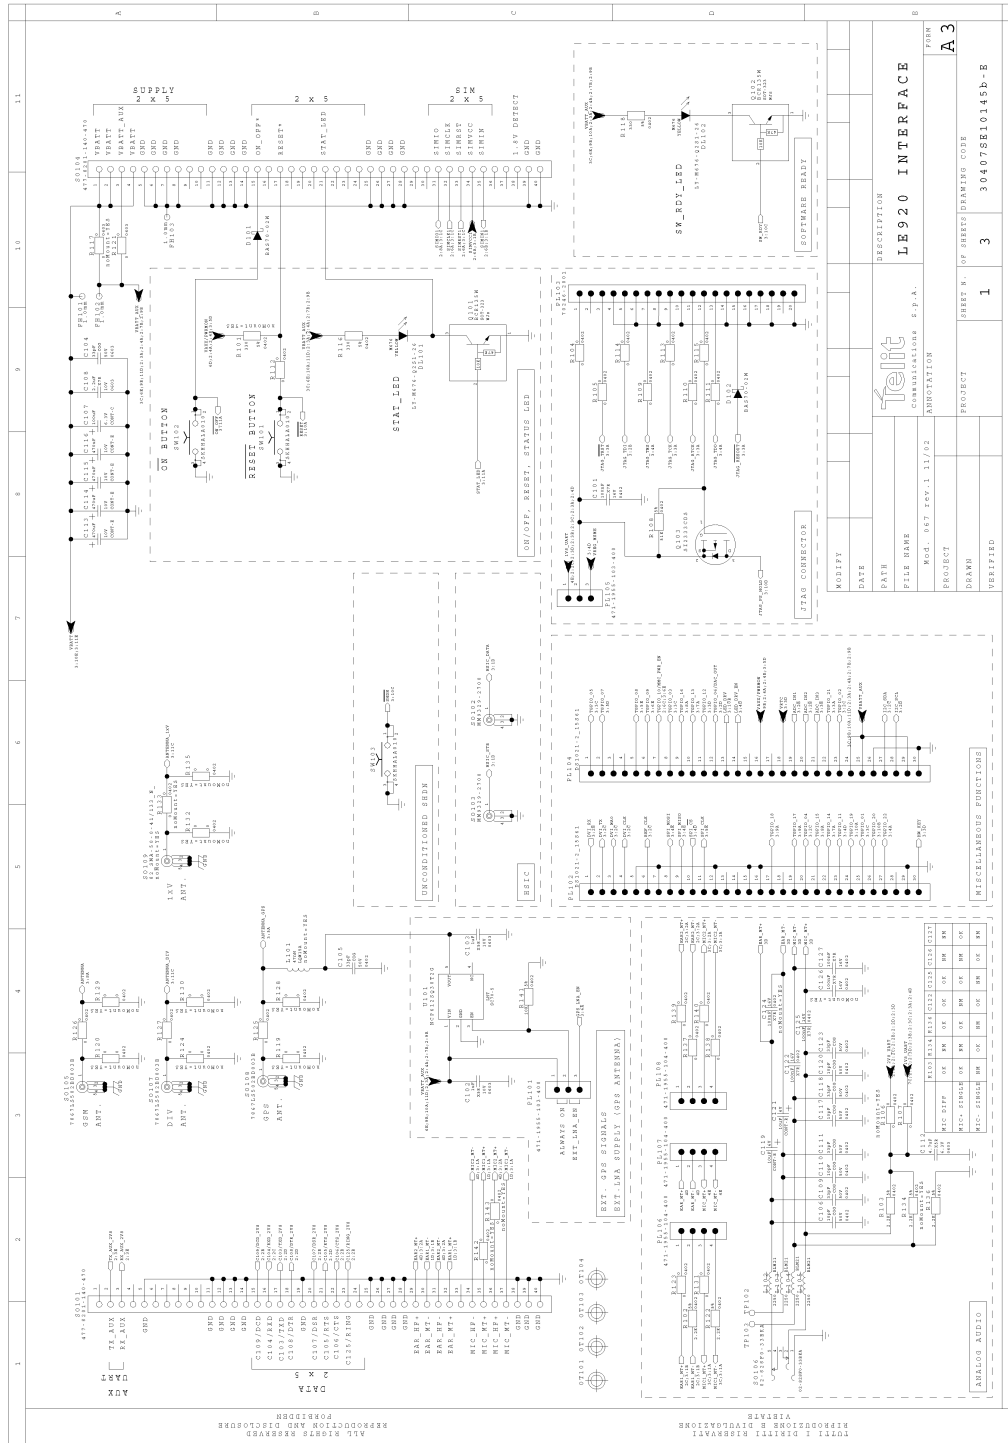



Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

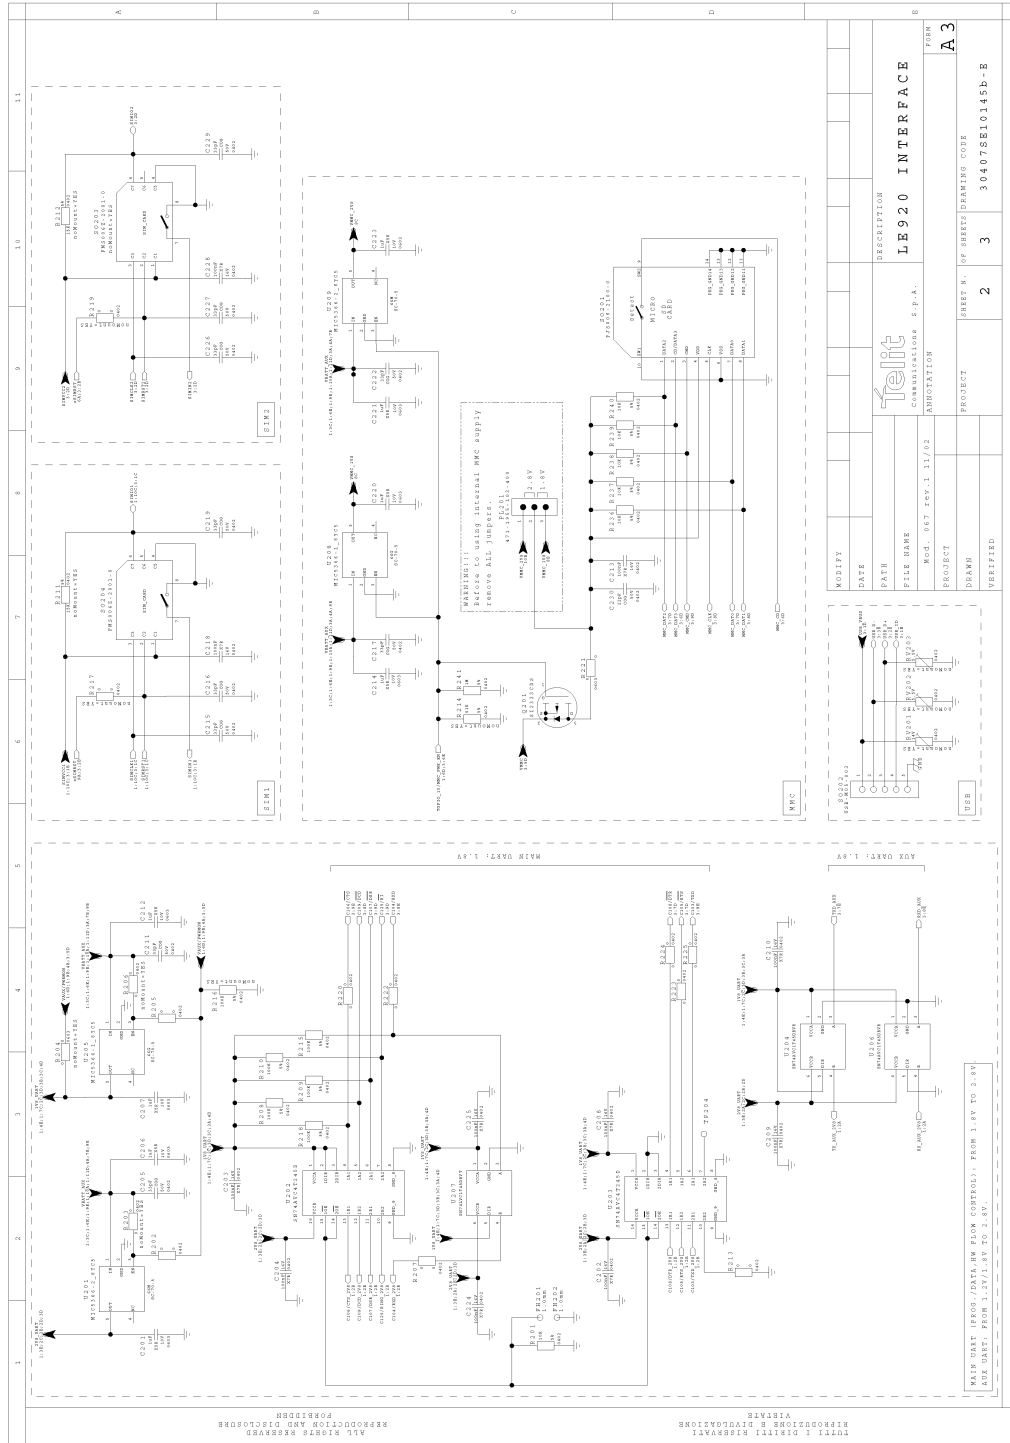

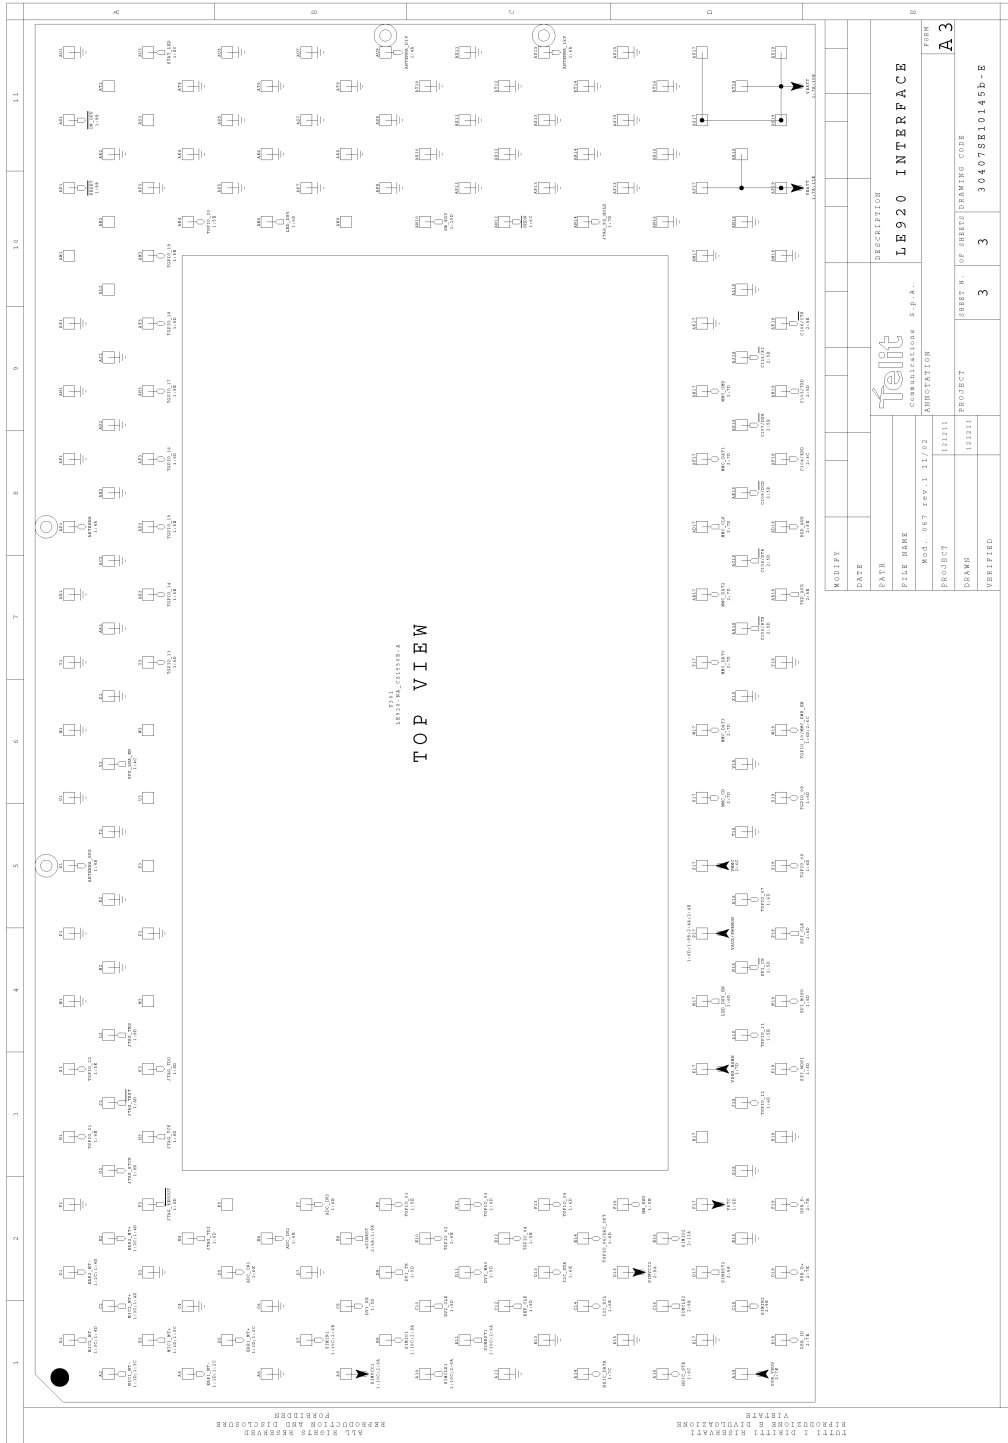


44.24. HE920 family Interface board

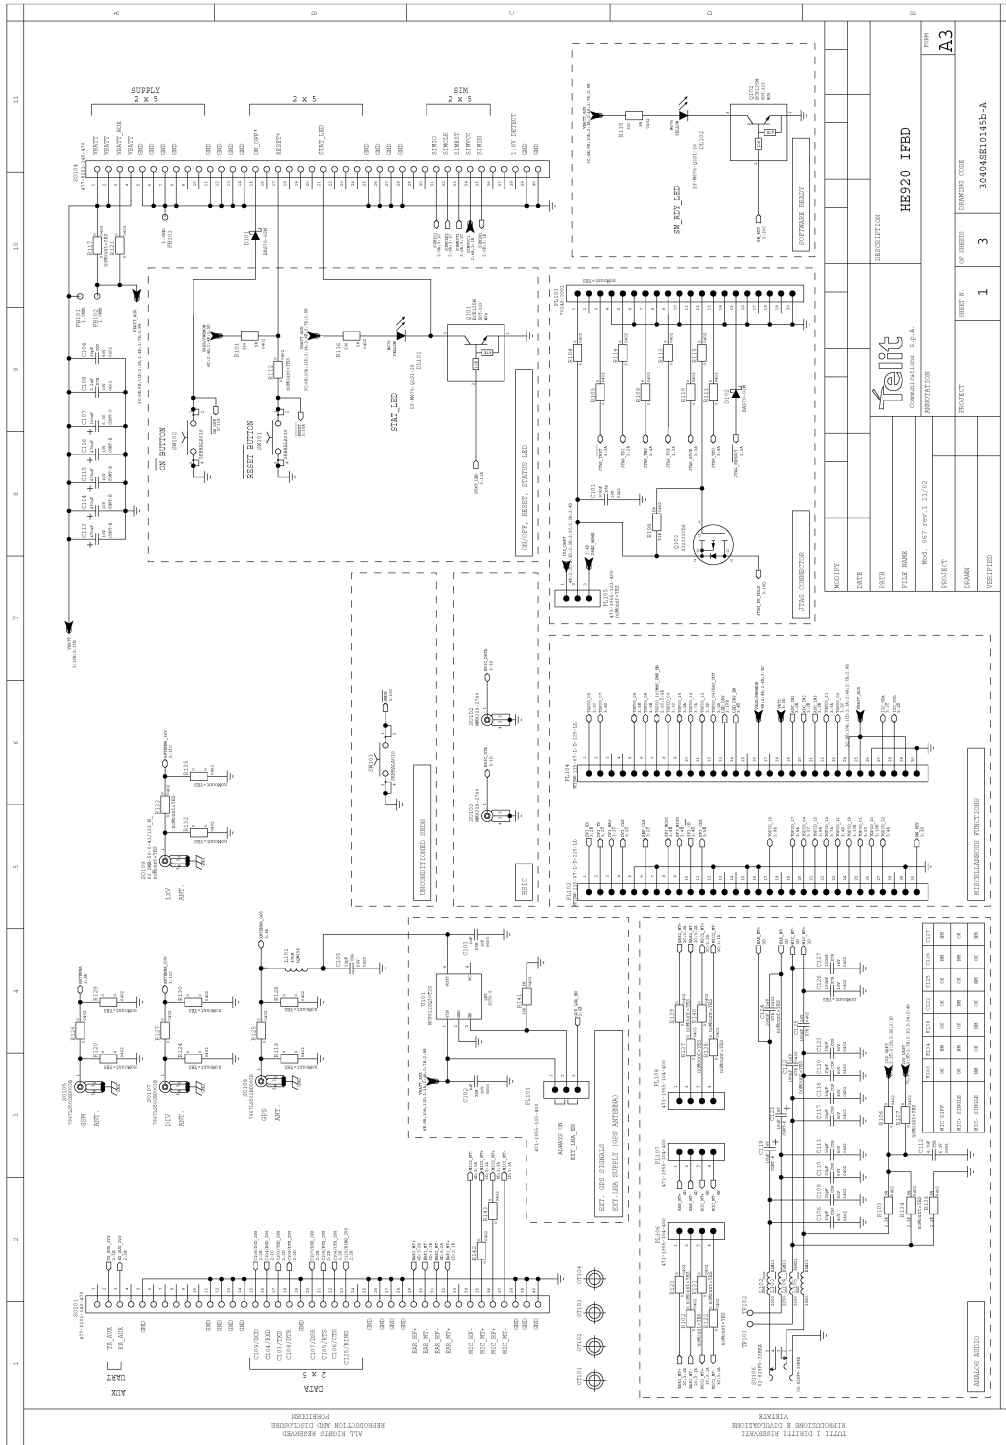


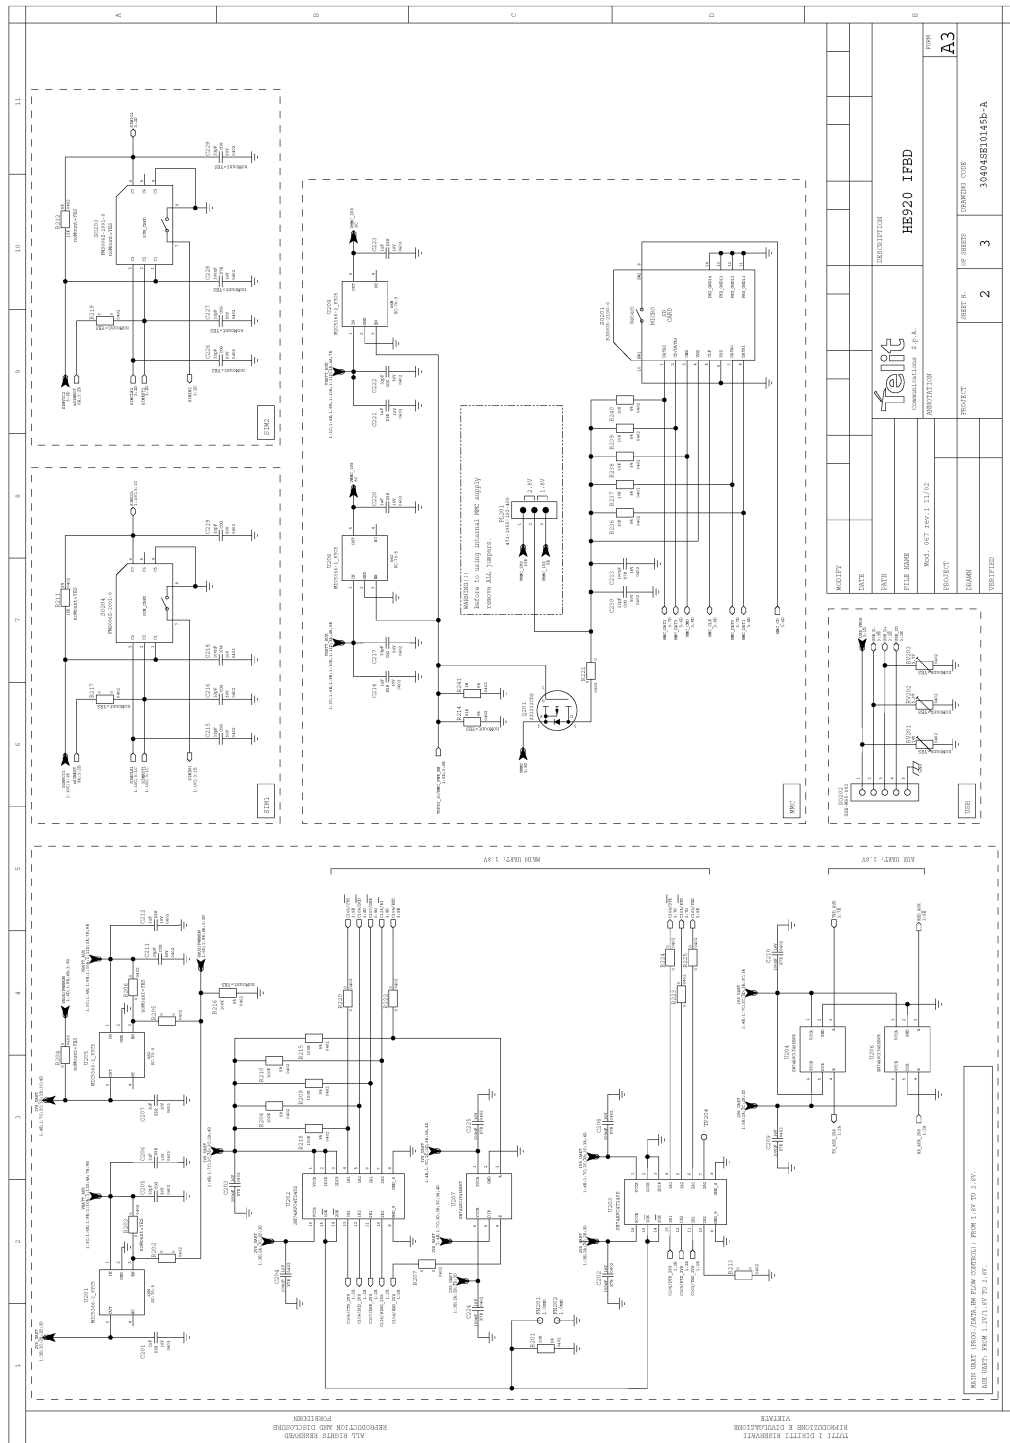

Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

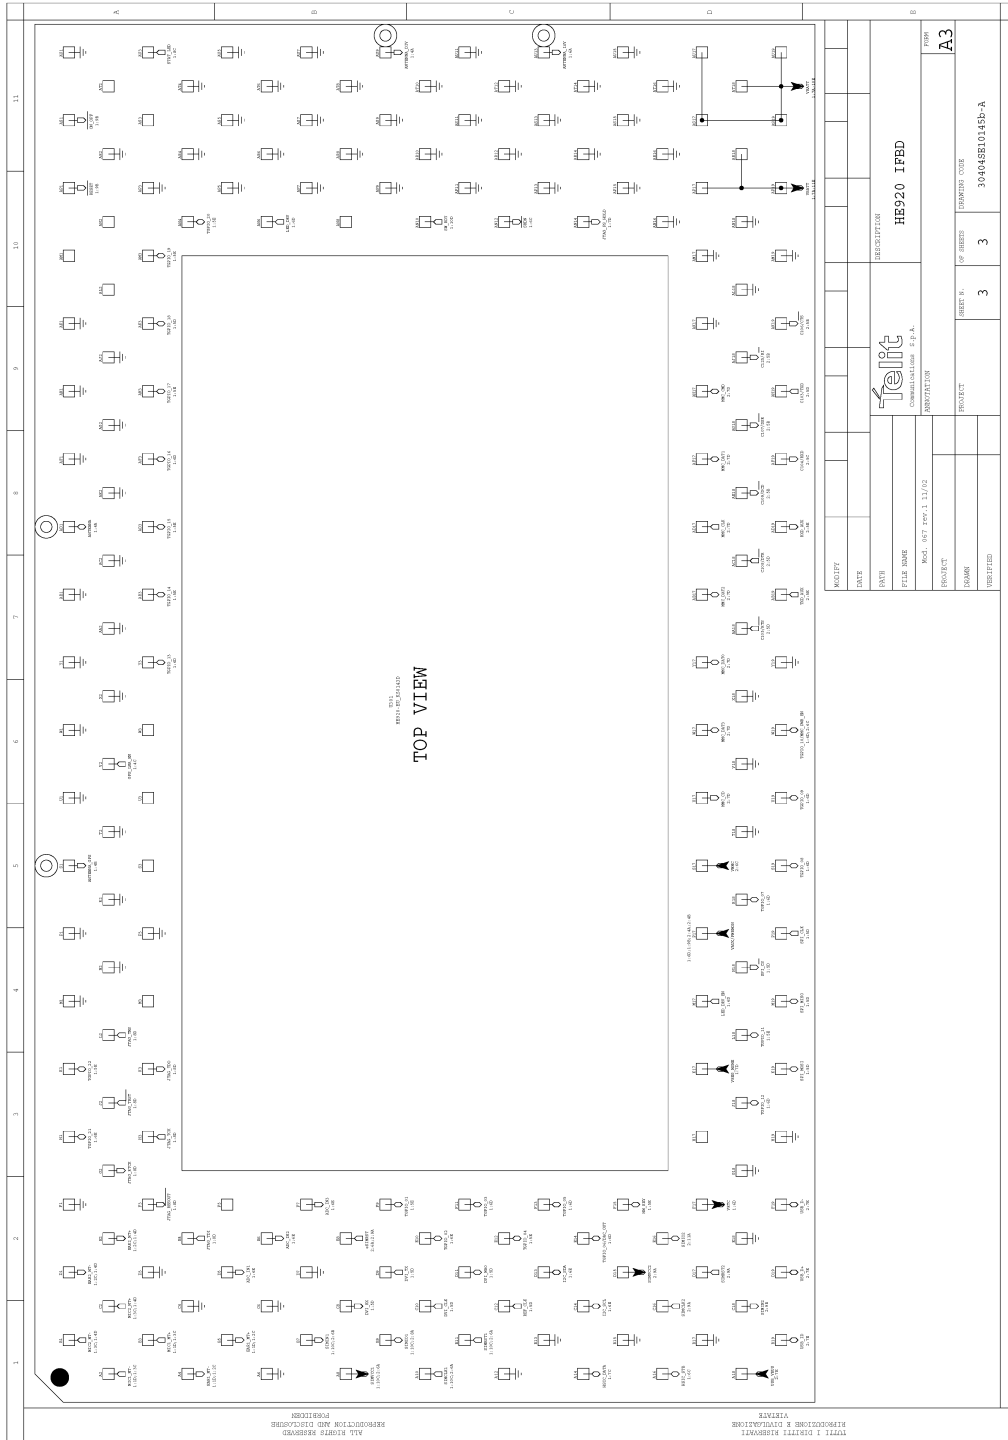


44.25. HE910 V2 Interface board

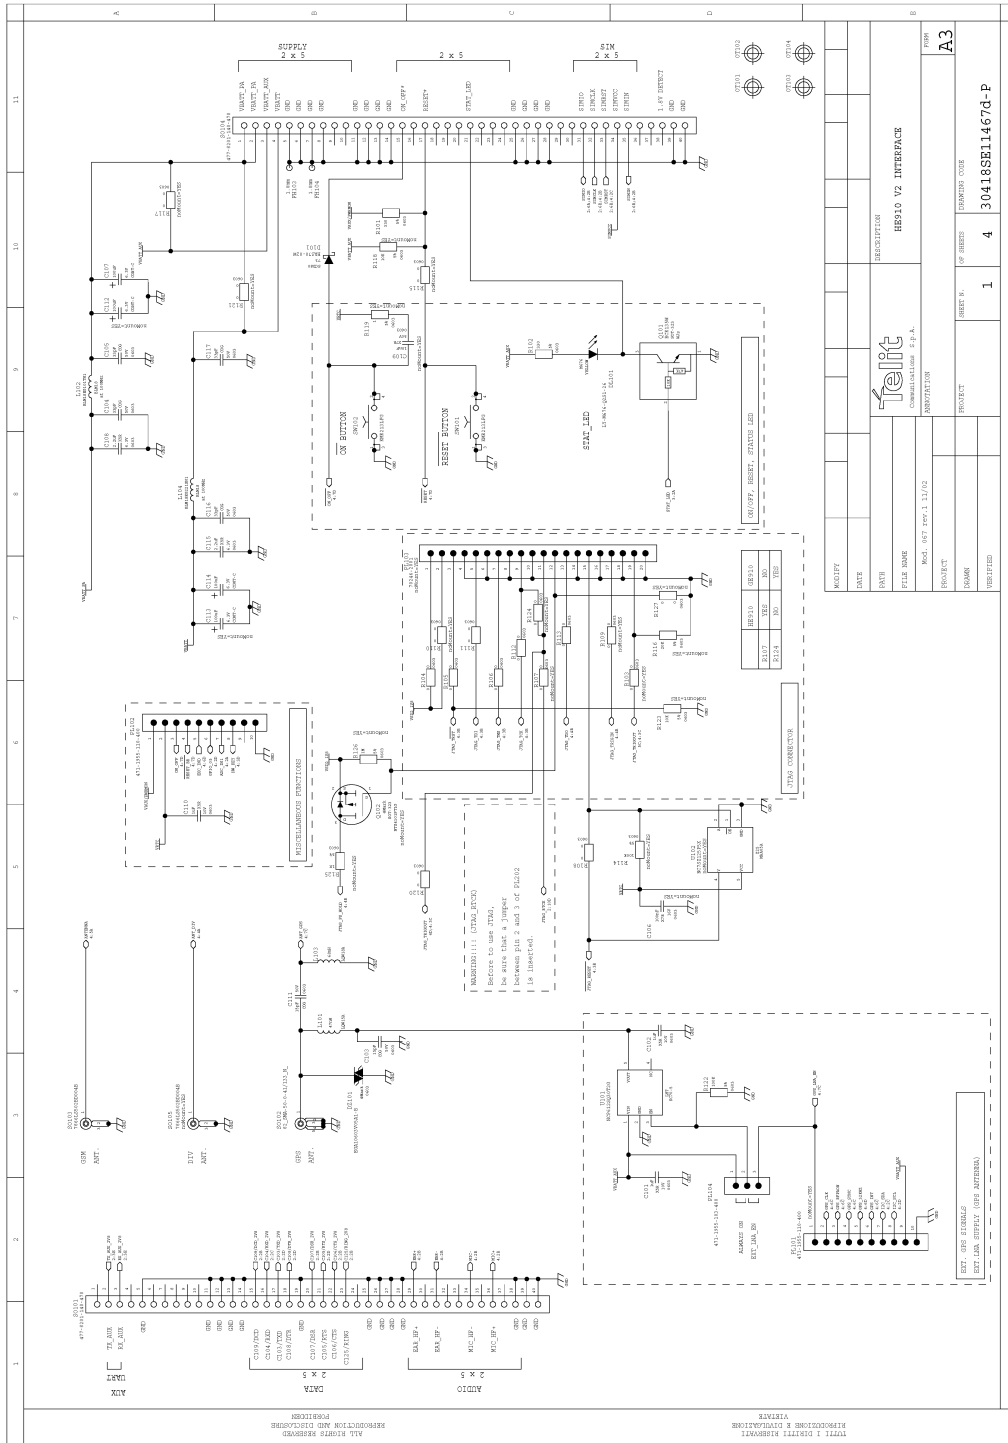



Telit EVK2 User Guide

1w0300704 Rev.19 – 2015/01/26

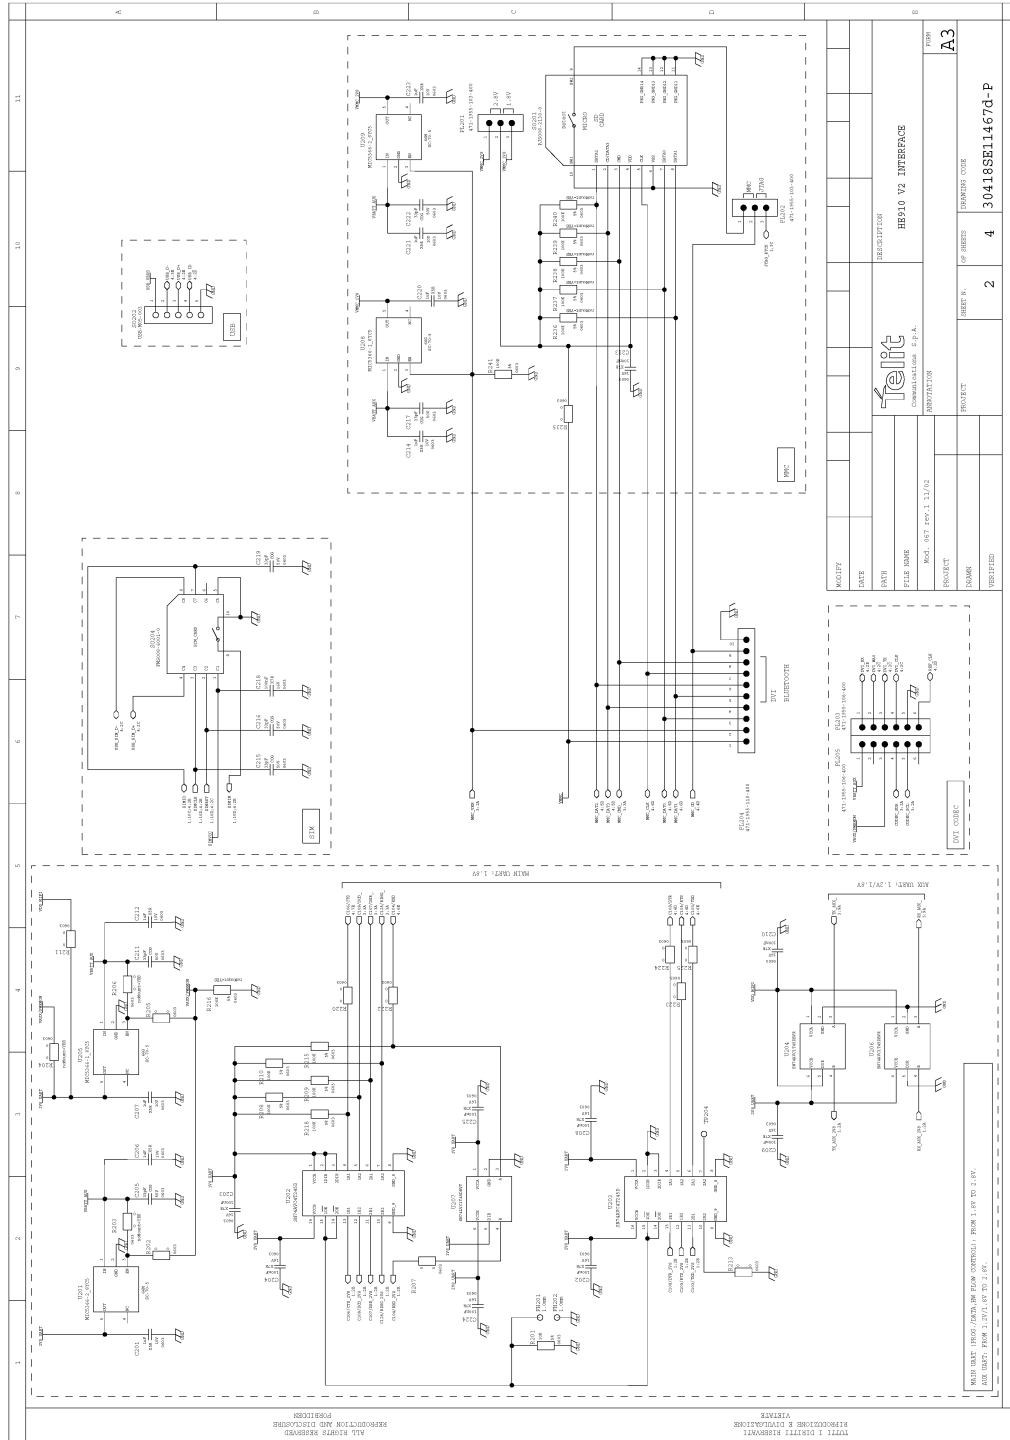


Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

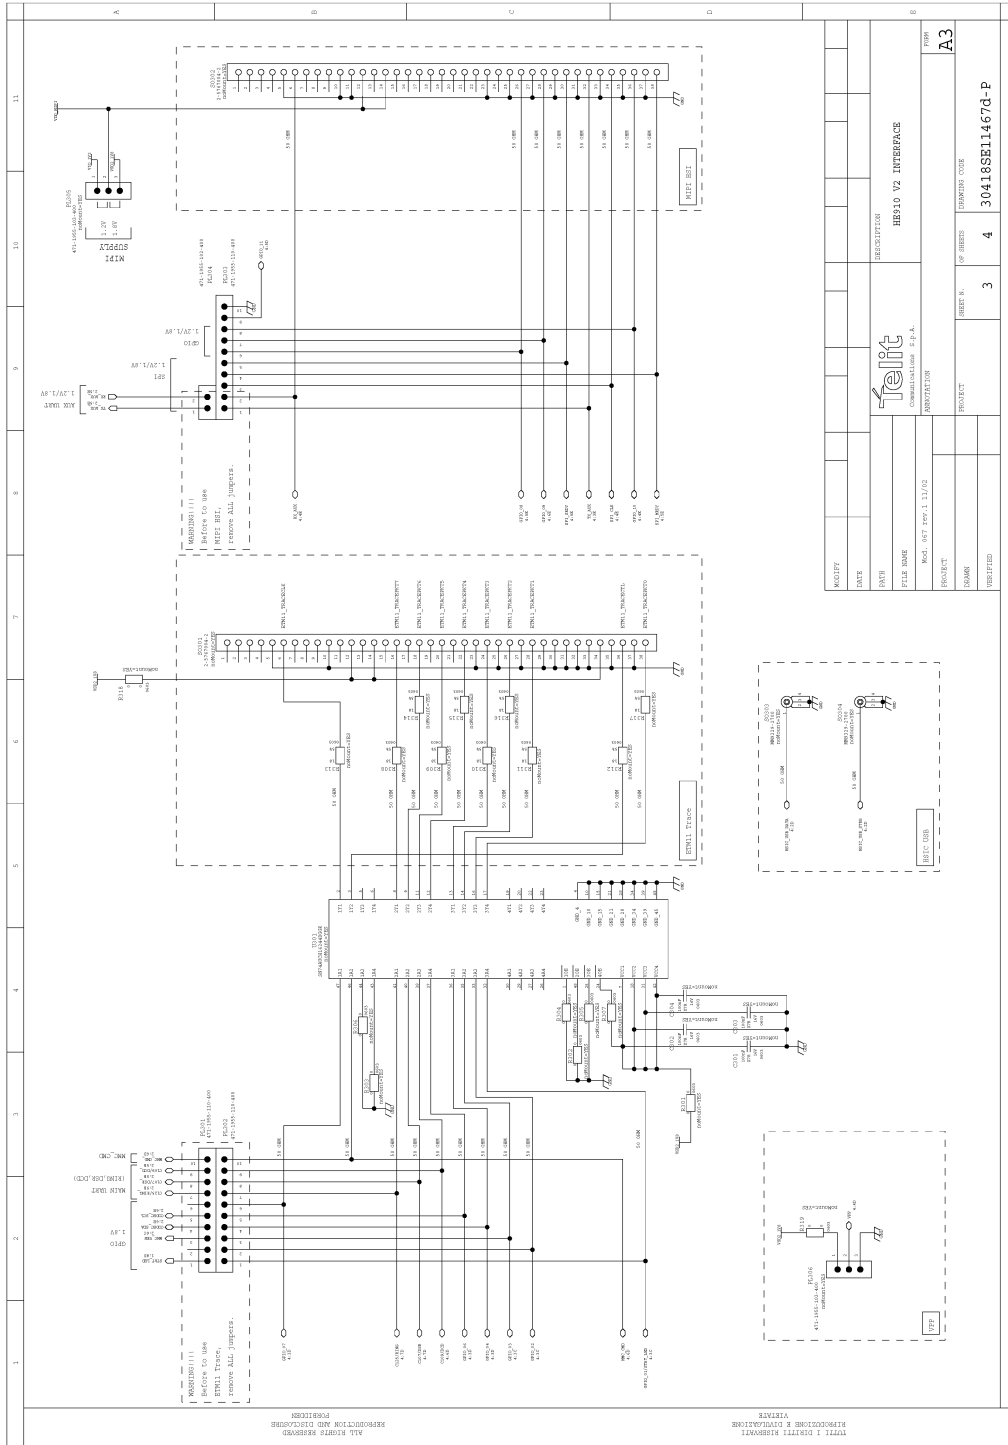


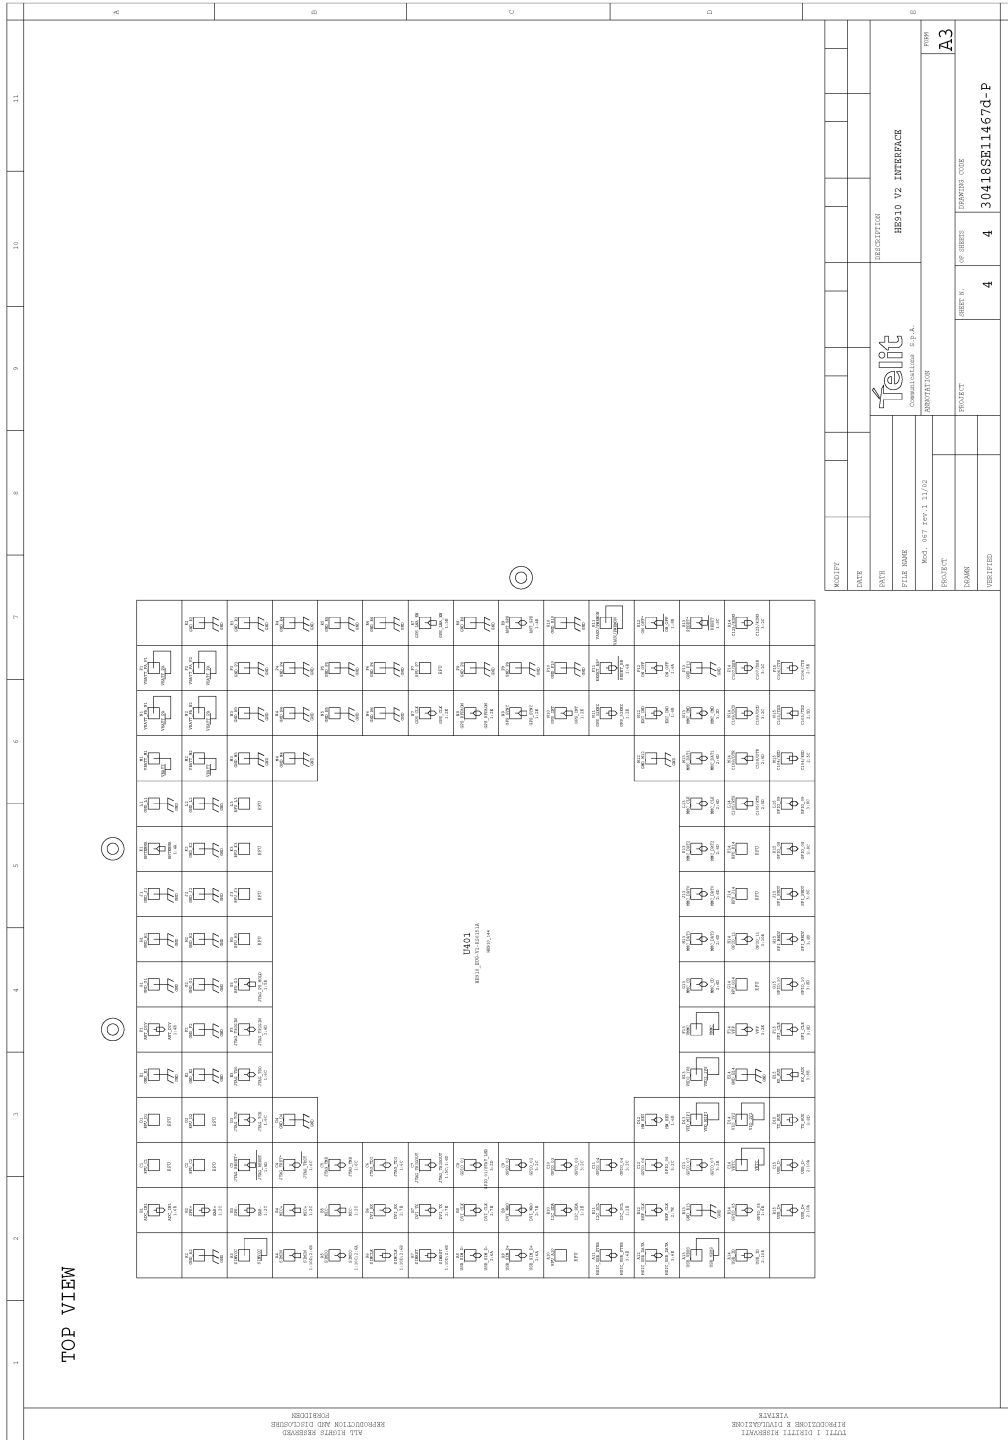


44.26. UE910 V2 Interface board

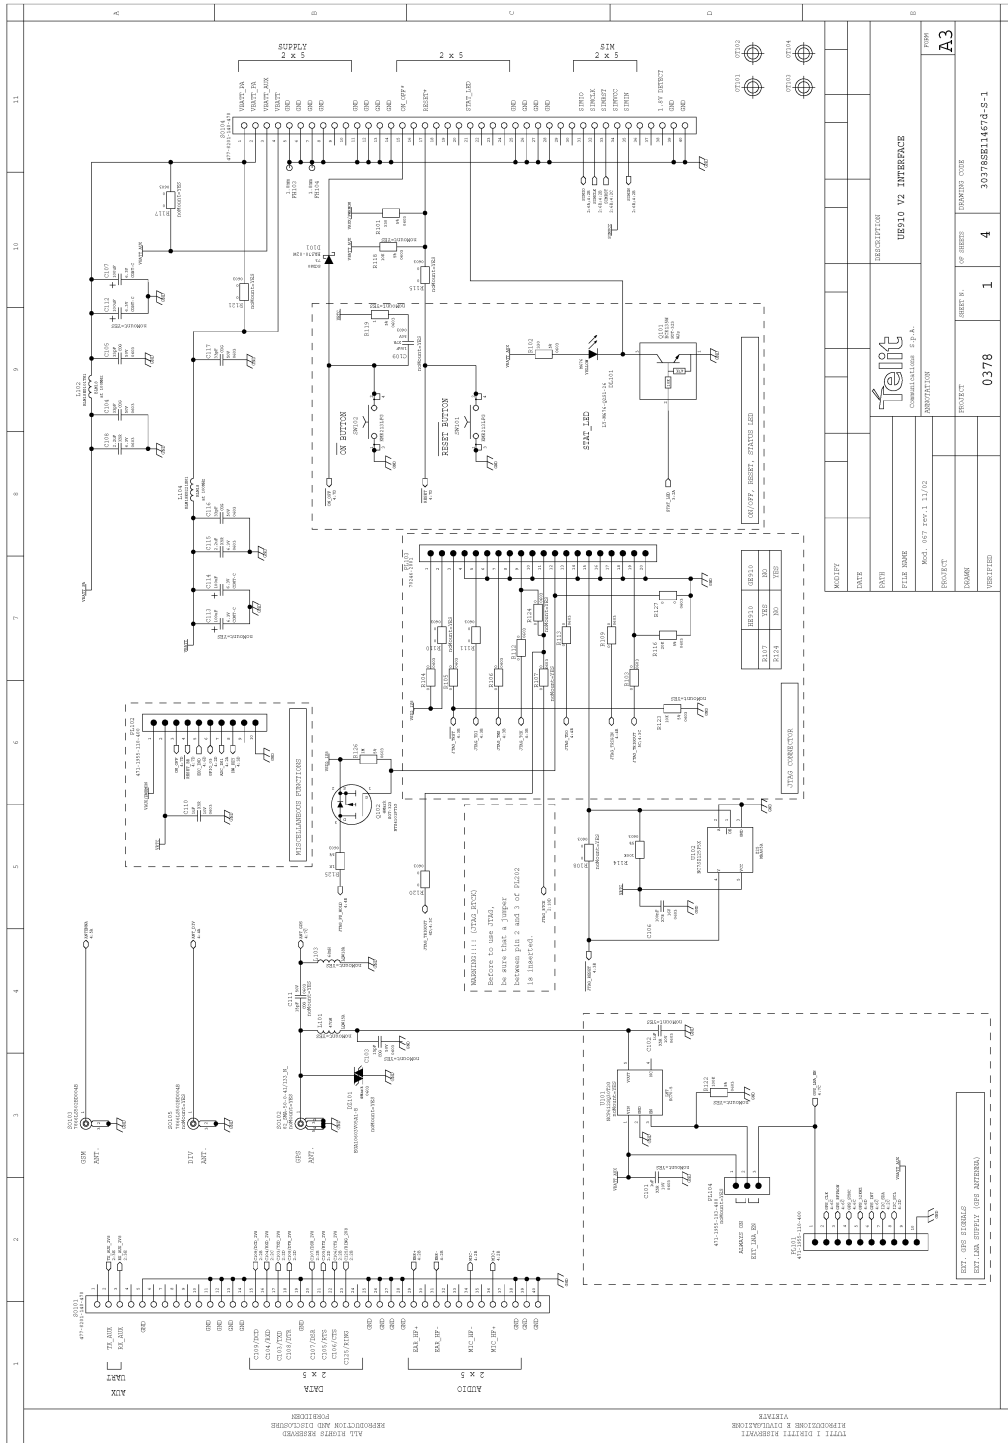

Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

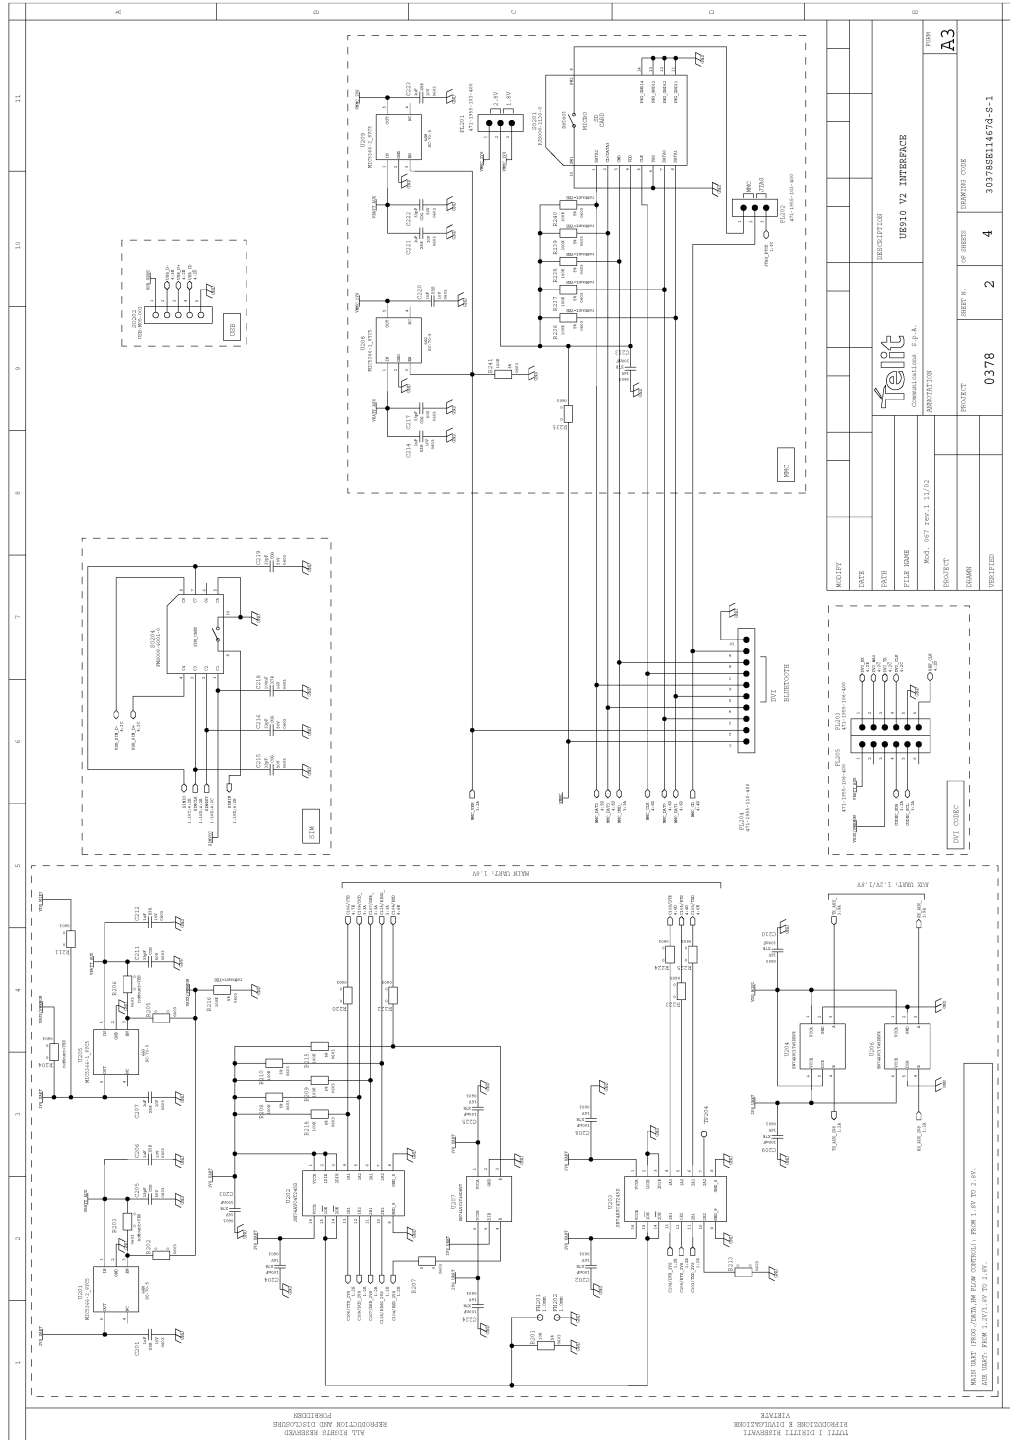


Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

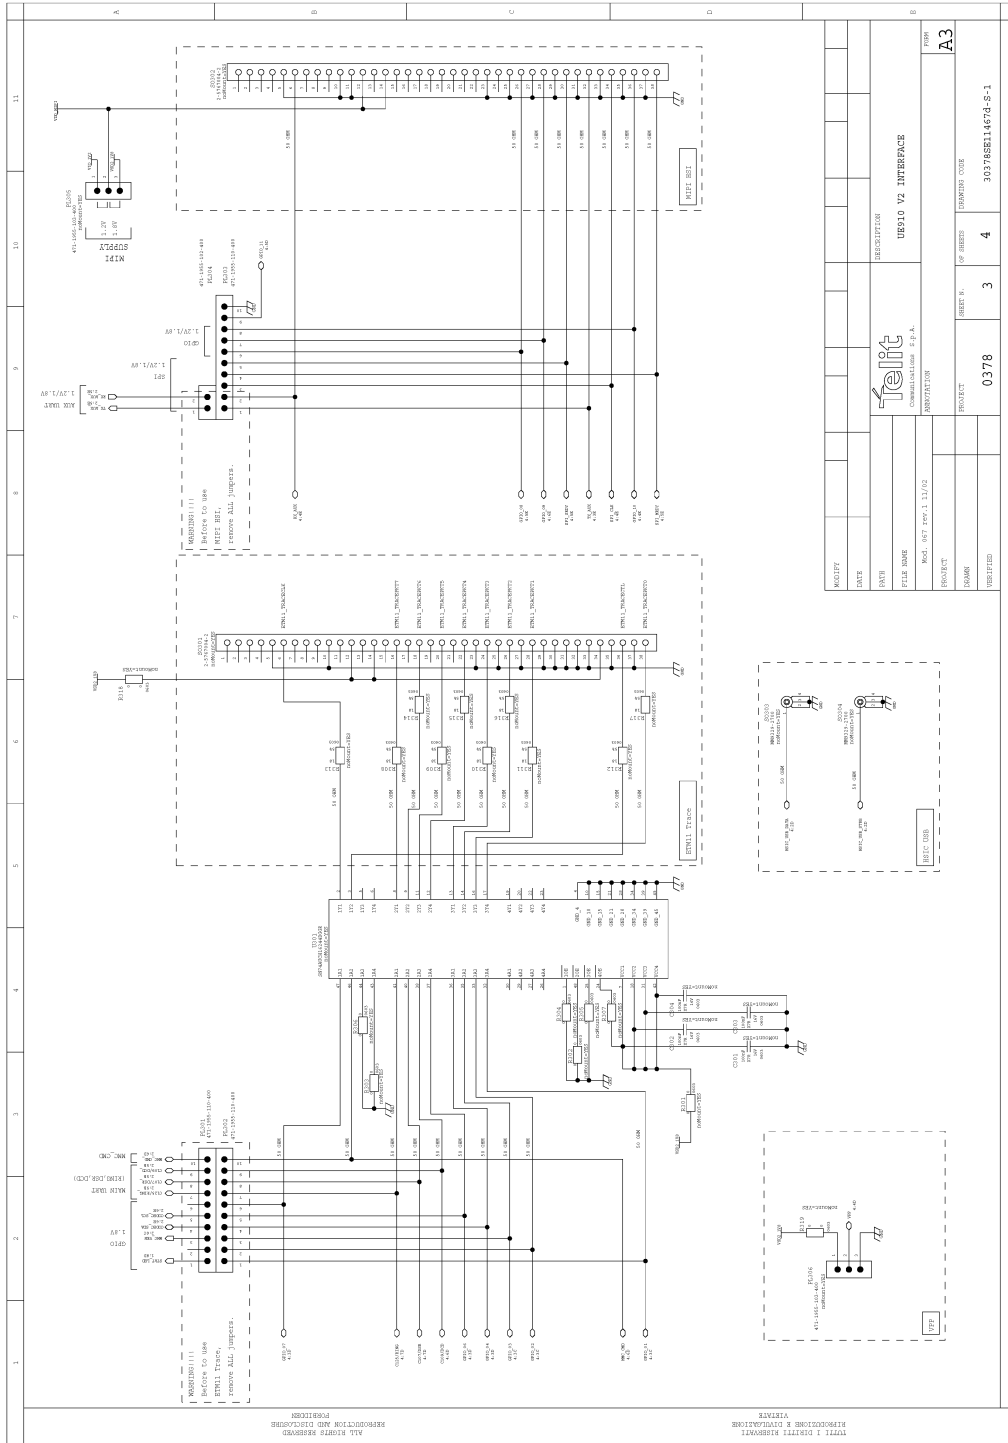


MODIFY					
DATE					
FILE NAME	UR510 V2 INTERFACE				
PROJECT	UR510 V2 INTERFACE				
DESCRIPTION	UR510 V2 INTERFACE				
REVISION	0378	3	4	3037682114674-S-1	
ISSUED					
VERIFIED					




Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

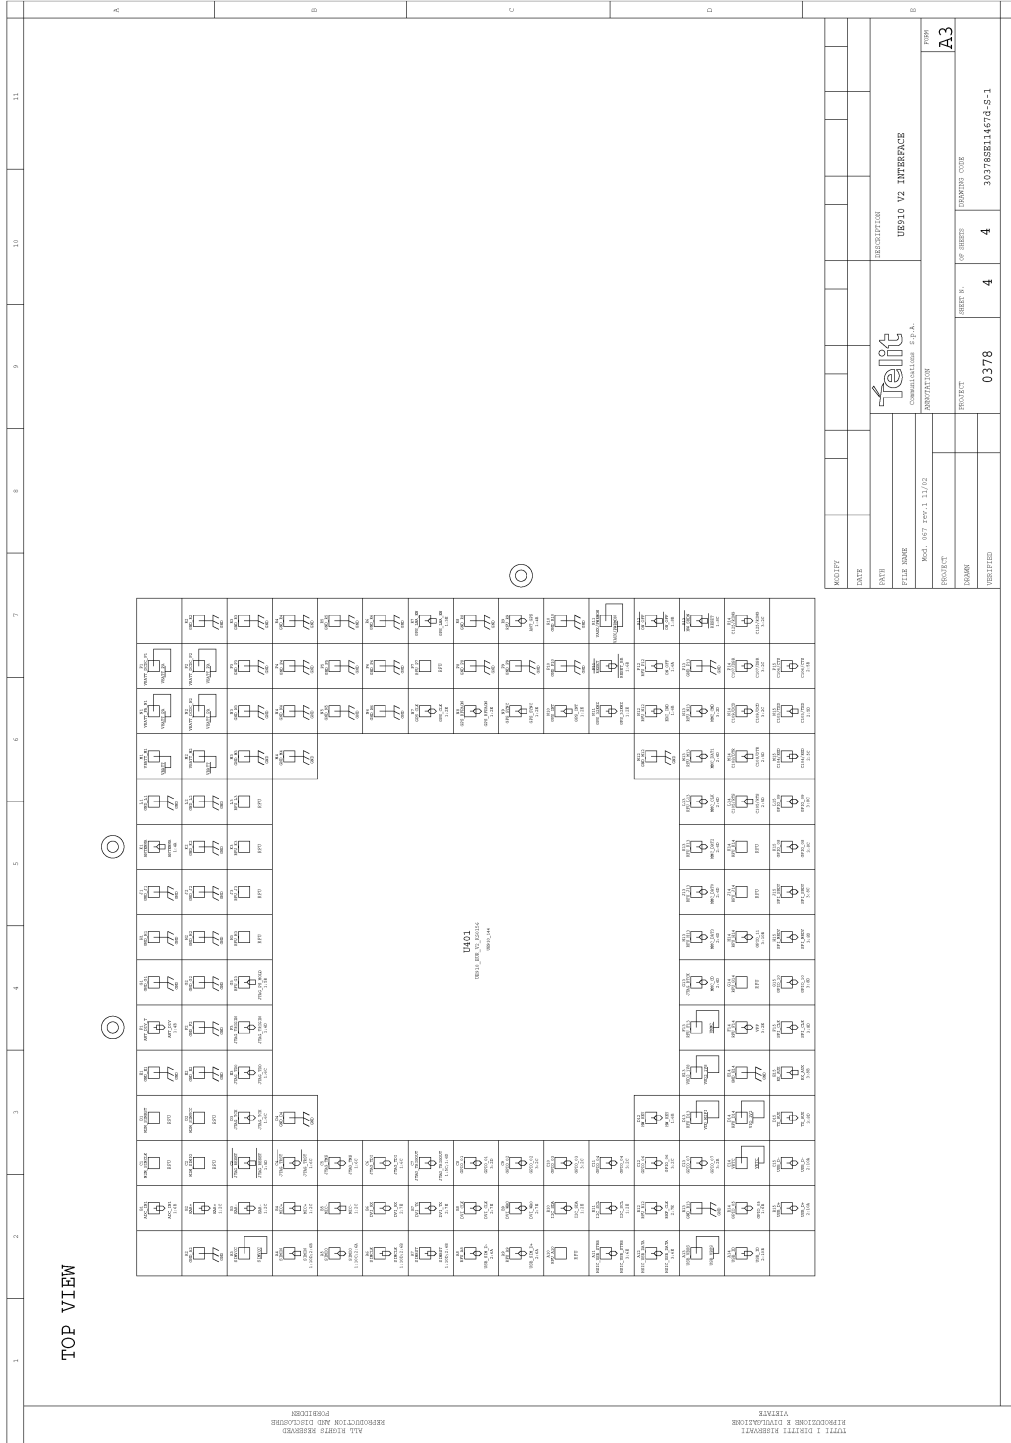

44.27. CL865 Interface board

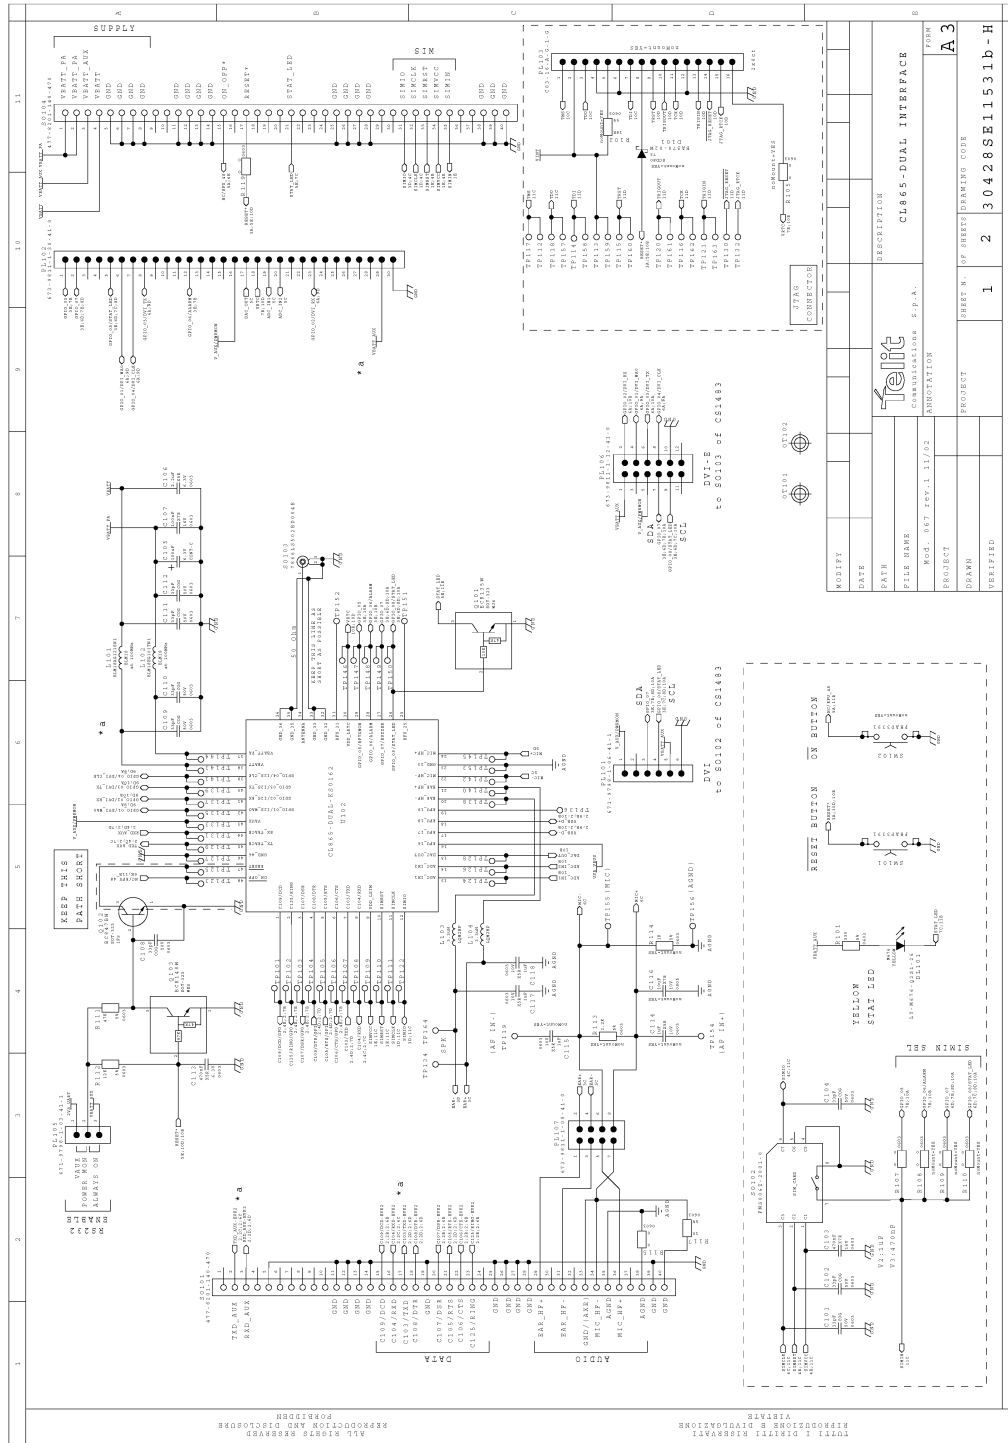

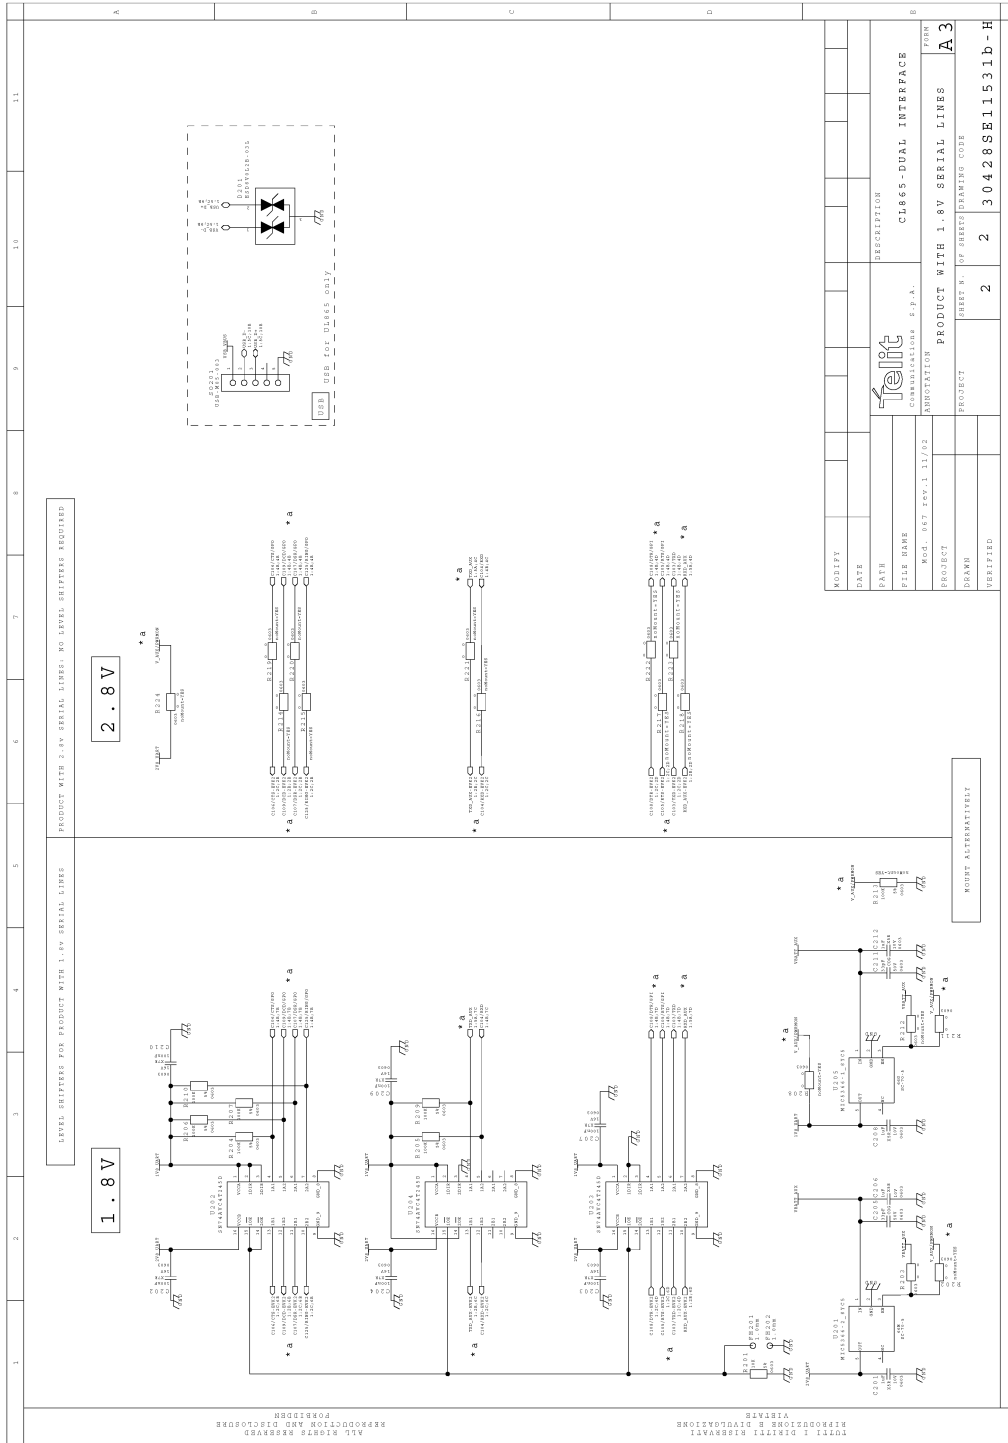

PRODUCT WITH 2.8V SERIAL LINES. NO LEVEL SHIFTERS REQUIRED

LEVEL SHIFTERS FOR PRODUCT WITH 1.8V SERIAL LINES


2.8 V

1.8 V

MODIFY															
DATE															
PAW															
FILE NAME															
Mod. 067 rev. 1.12/02															
PROJECT															
PROJECT ASSOCIATION															
PROJECT															
VERIFIED															
DESCRIPTION										CL665-DUAL INTERFACE		FORM			
COMMUNICATIONS S.p.A.										PRODUCT WITH 1.8V SERIAL LINES		A.3			
ASSOCIATION										SHEET N. OF SHEET DRAWING CODE		2			
PROJECT										30428SB11531b-H					




44.28. GE866-QUAD Interface board

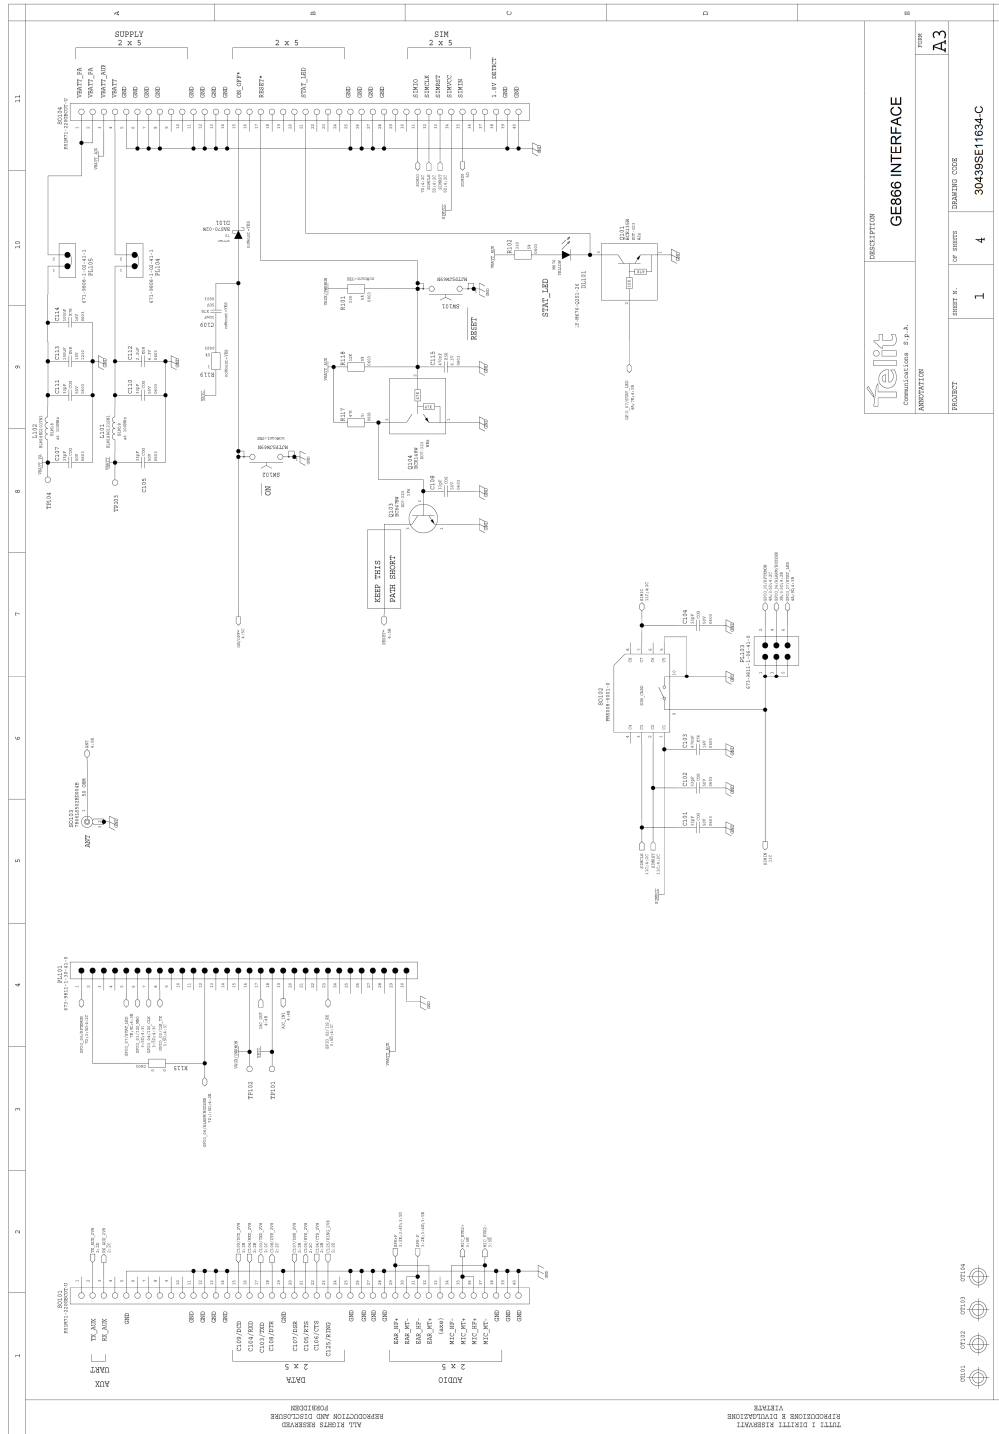



Telit Communications S.p.A. ANNOVERITORE	DESCRIPTION	GE866 INTERFACE		
	FIGURE	A3		
SHEET N.	1	OF SHEETS	4	DISPATCHING CODE
PRODUCT	30439SEI1684-C			




Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

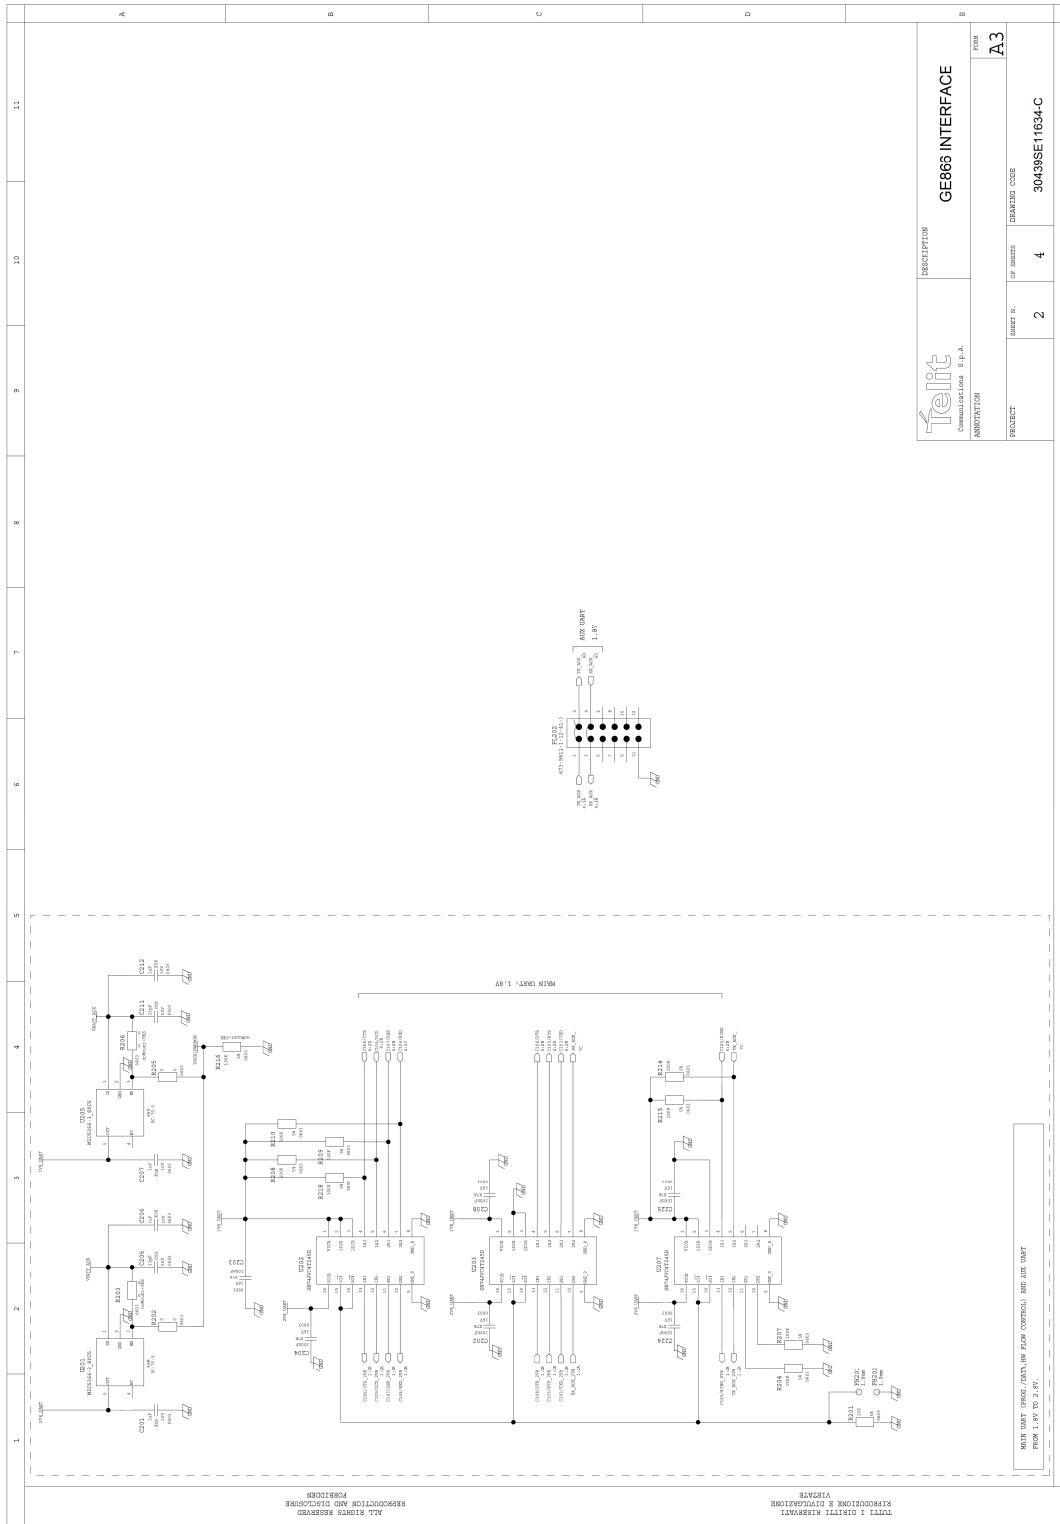

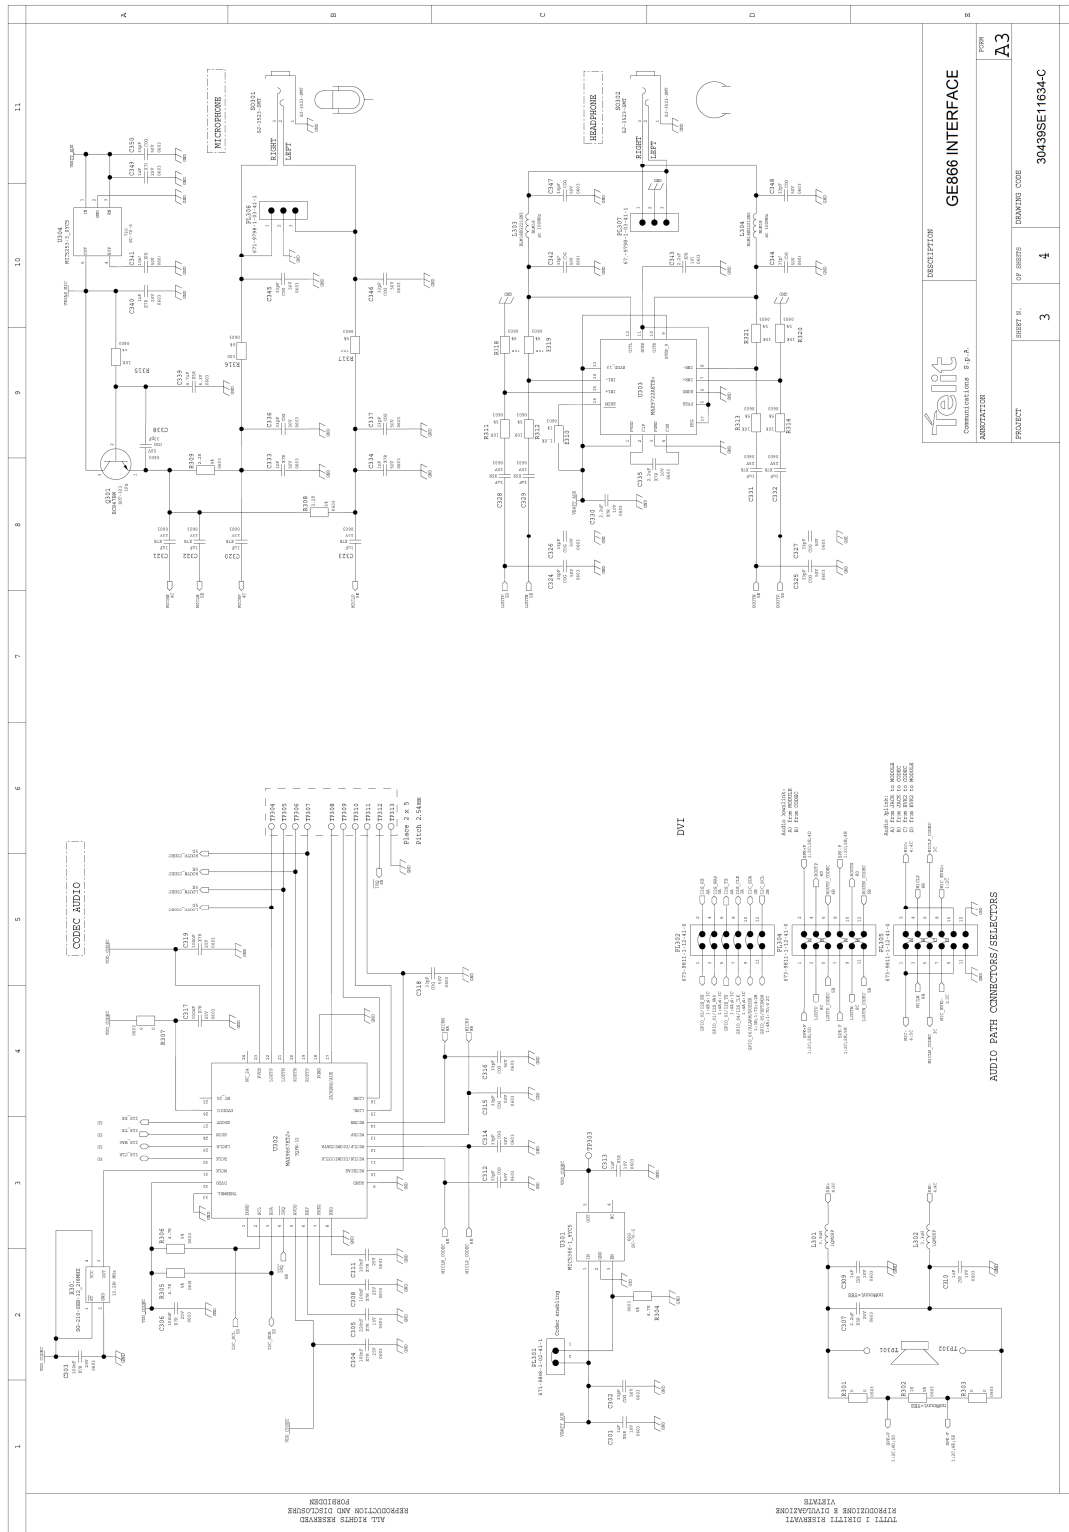


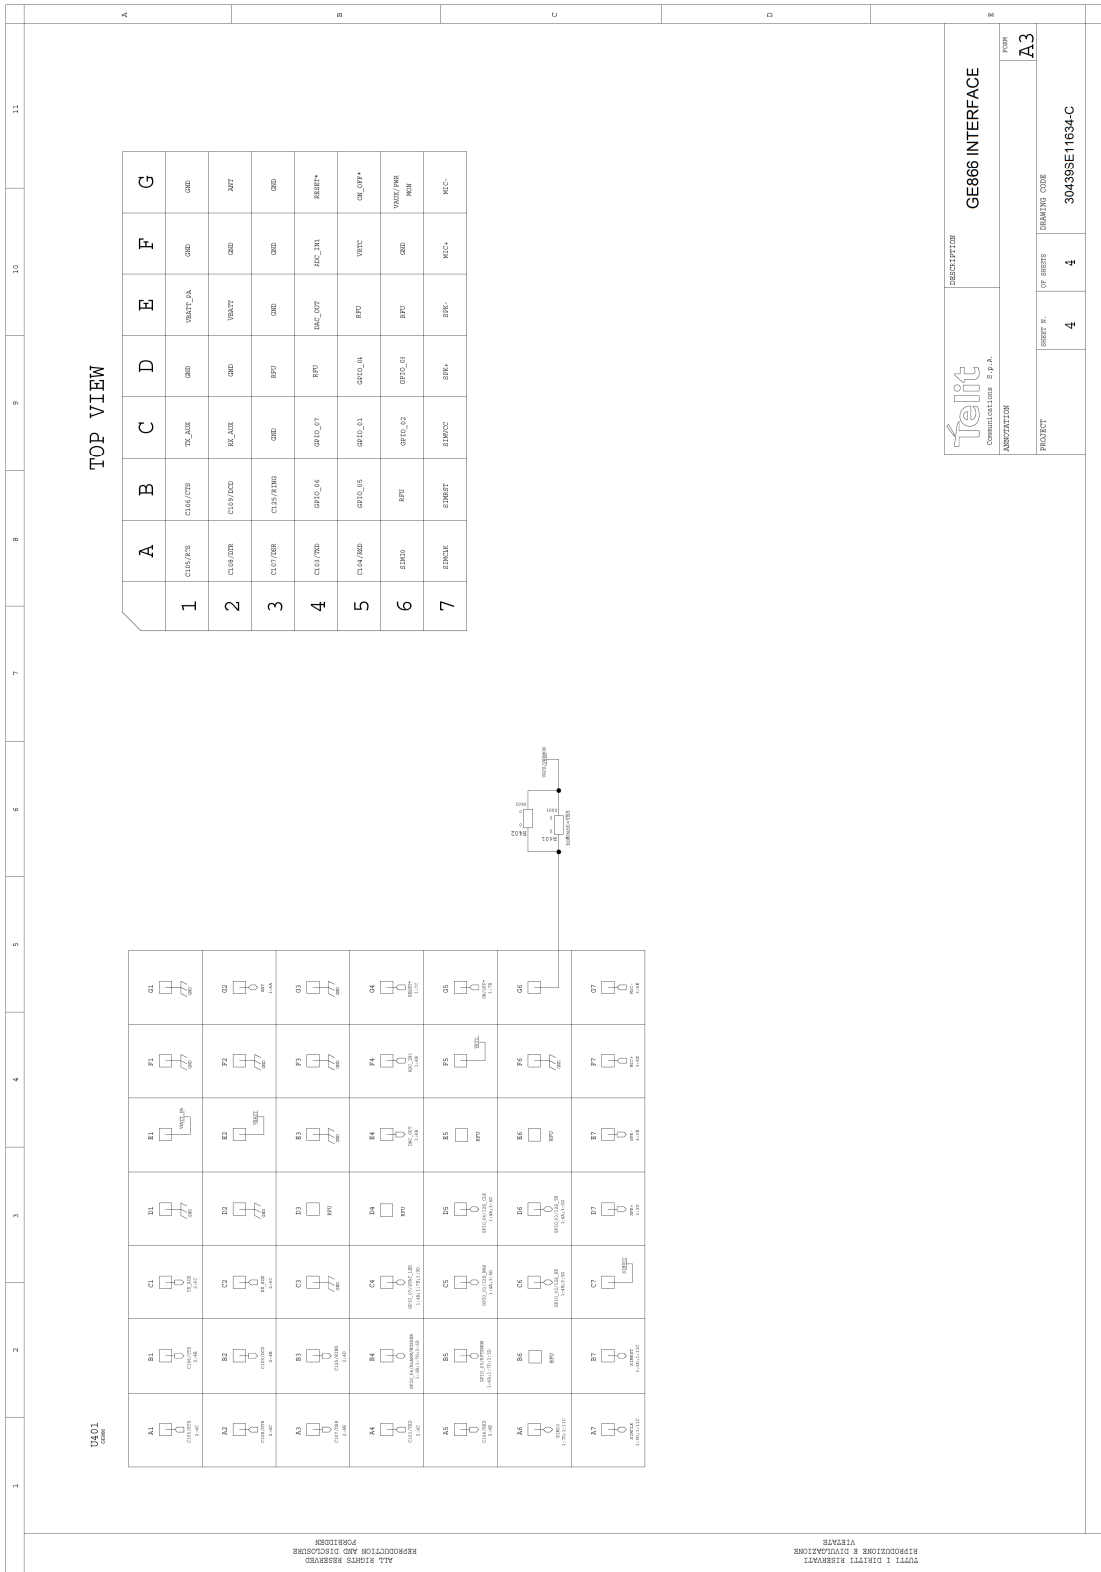


44.29. UE866 Interface Board

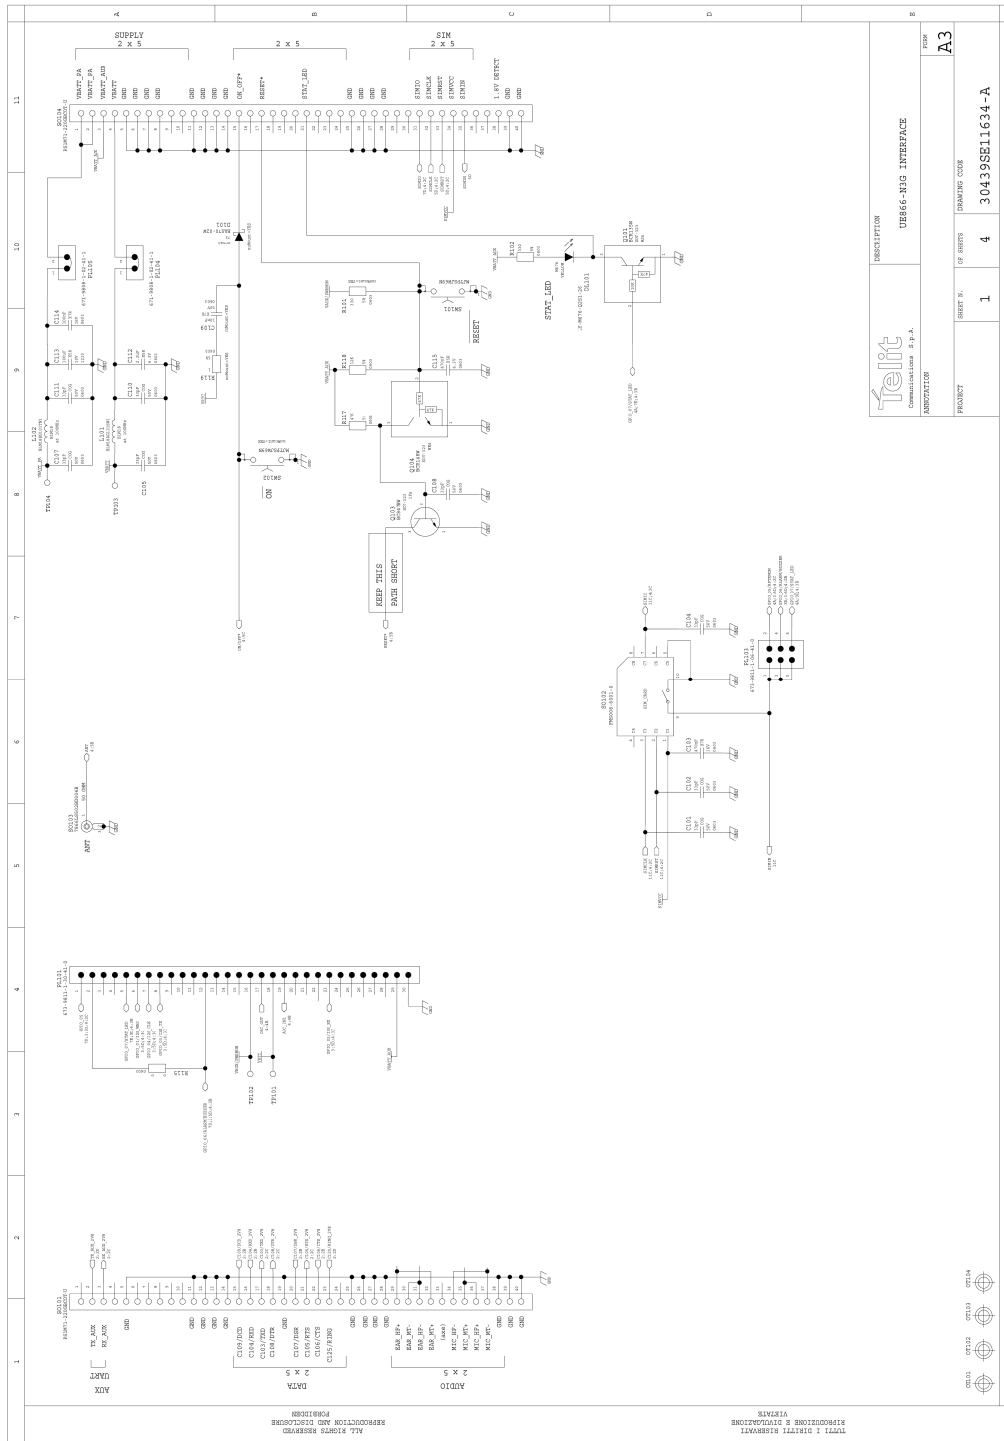


Telit EVK2 User Guide
1wv0300704 Rev.19 – 2015/01/26

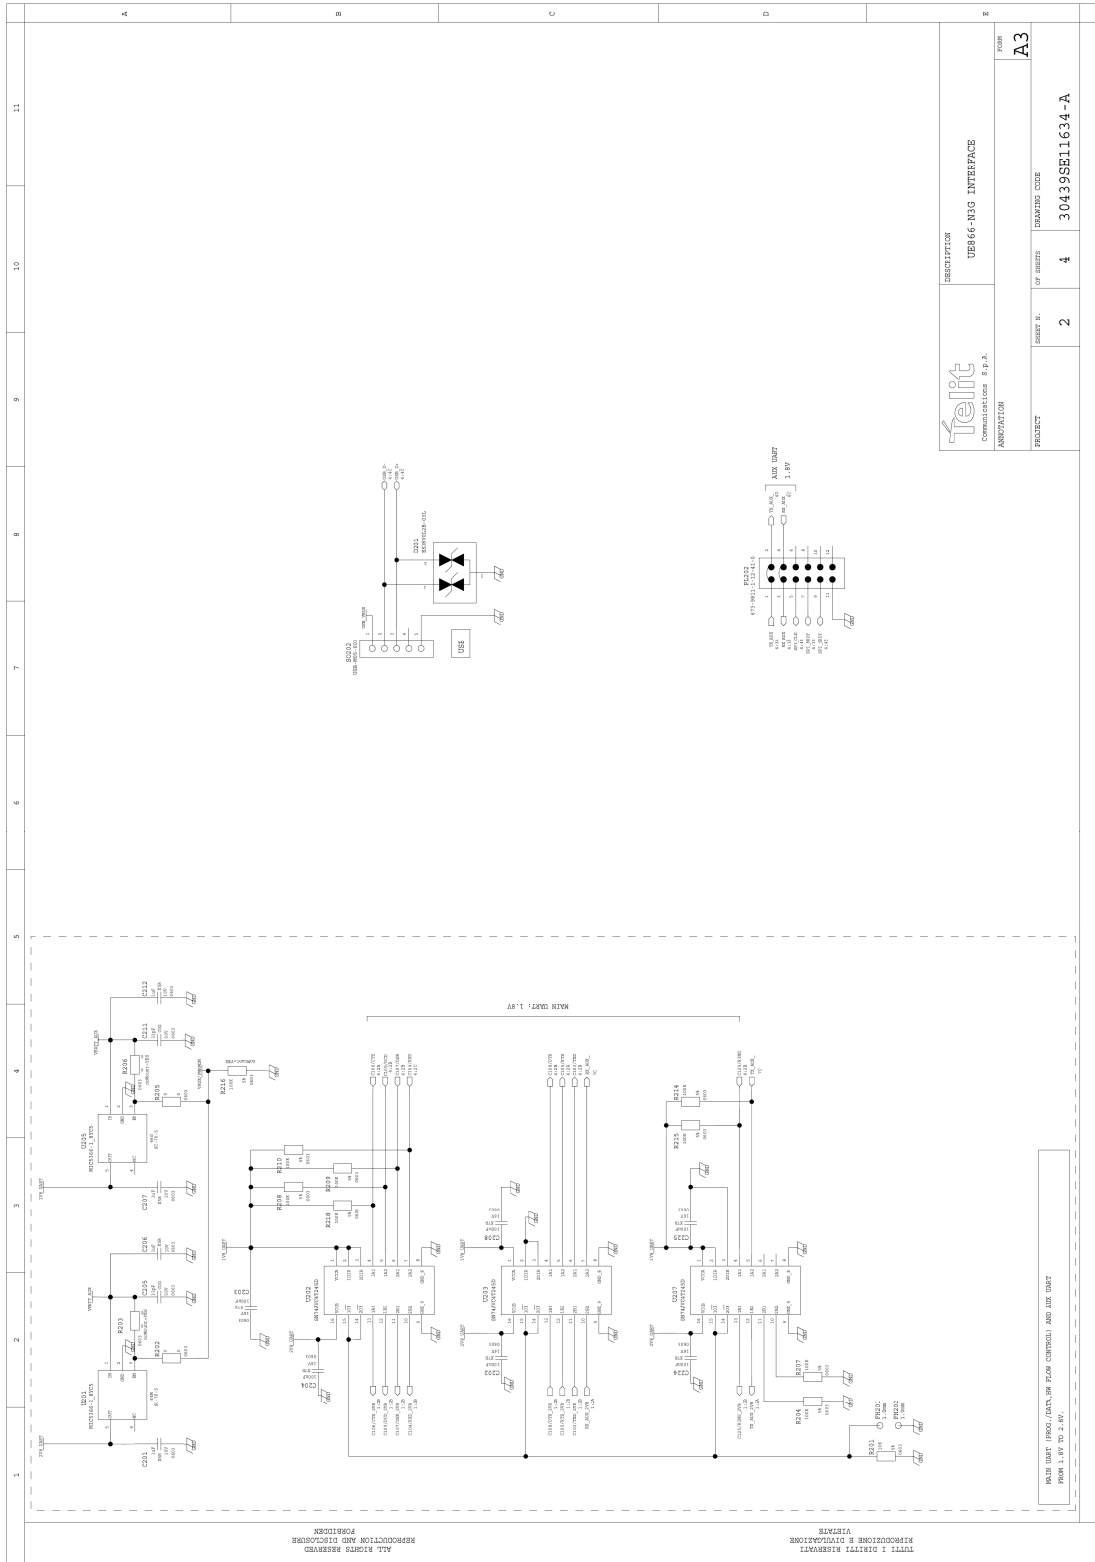

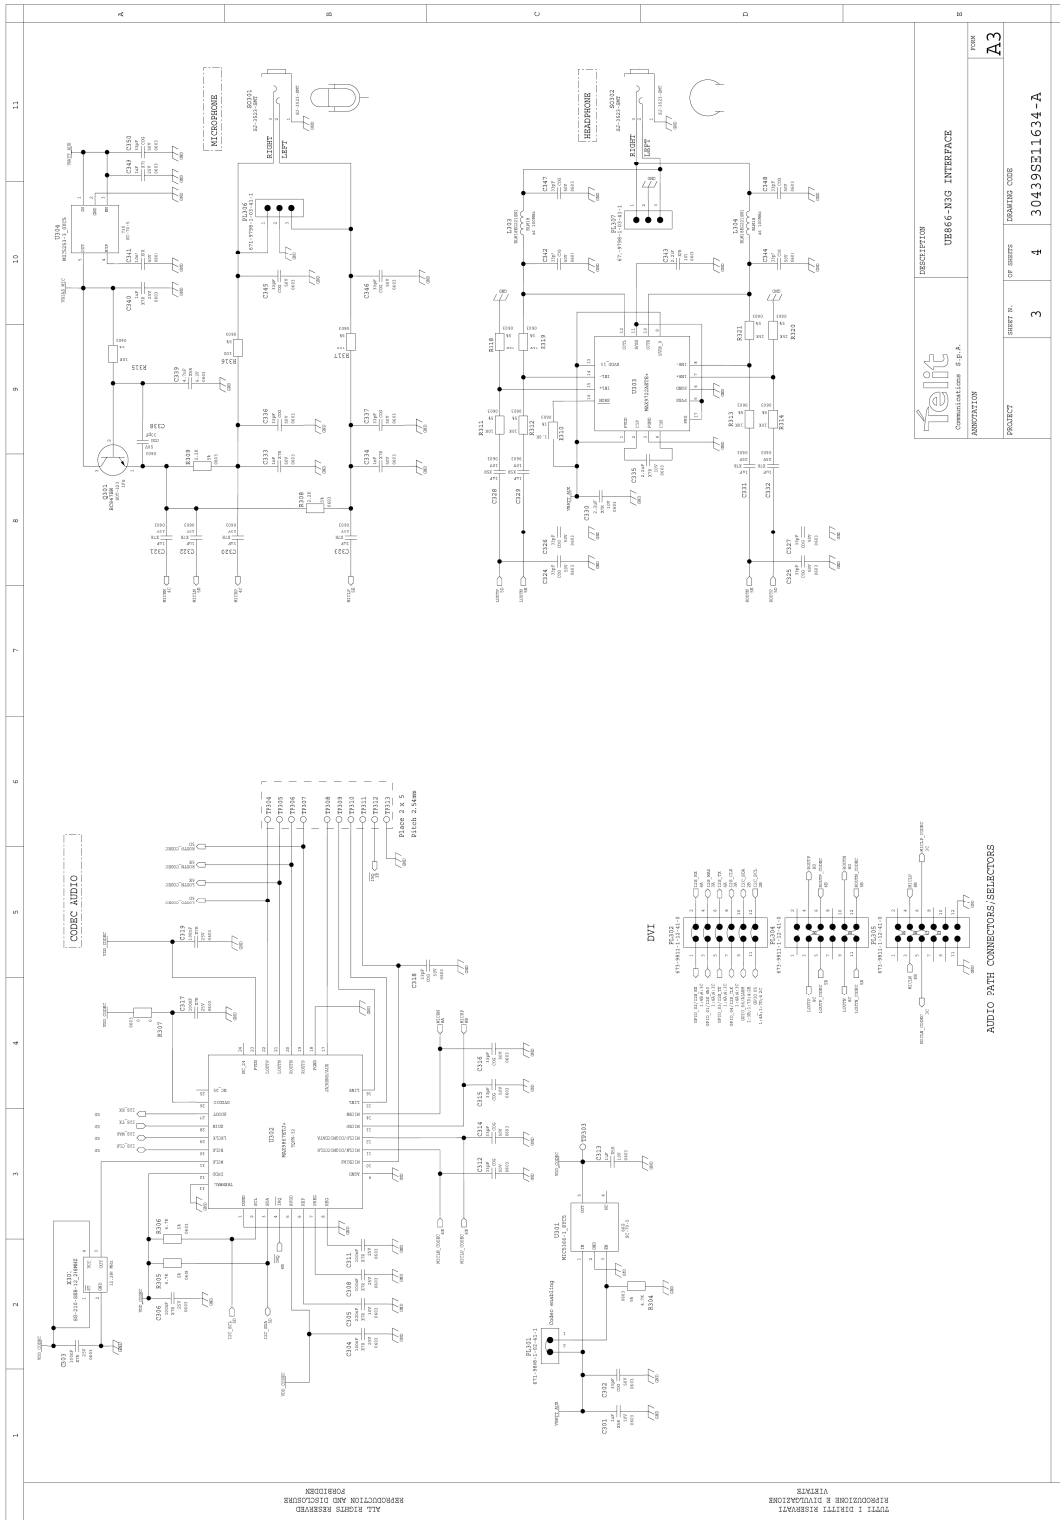


 Telit Communications S.p.A.	DESCRIPTION USB66-ANIC INTERFACE	REV A3
PROJECT	ITEM NO. 3	FORMING CODE 30439S311634-A
MANUFACTURER	QTY 4	UNIT




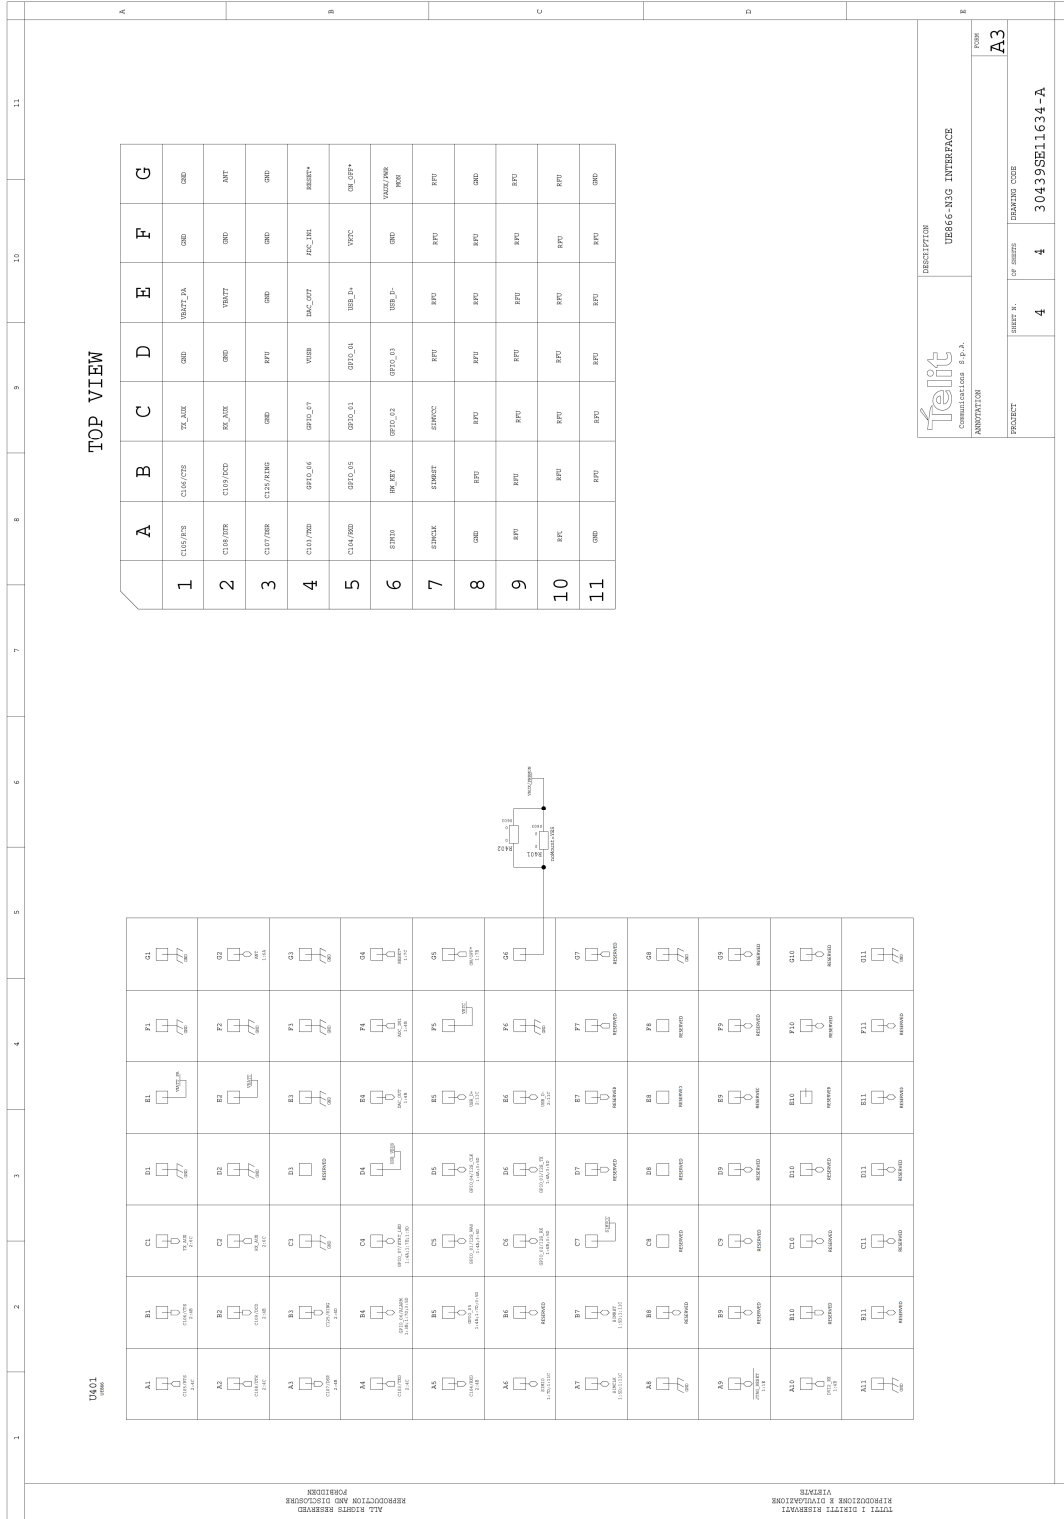


44.30. LE910 Interface board

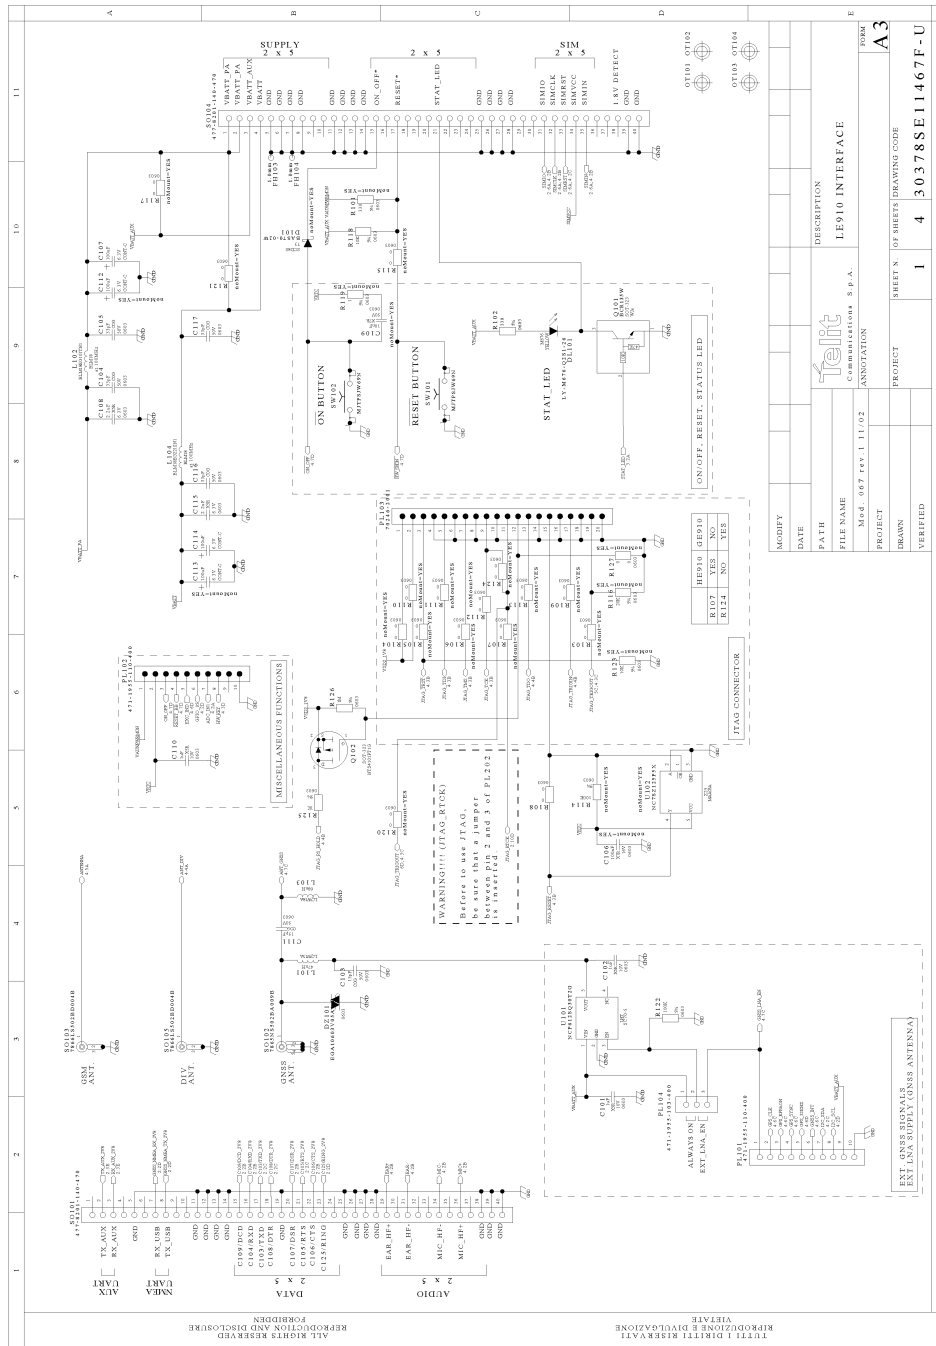

Telit EVK2 User Guide
1w0300704 Rev.19 – 2015/01/26

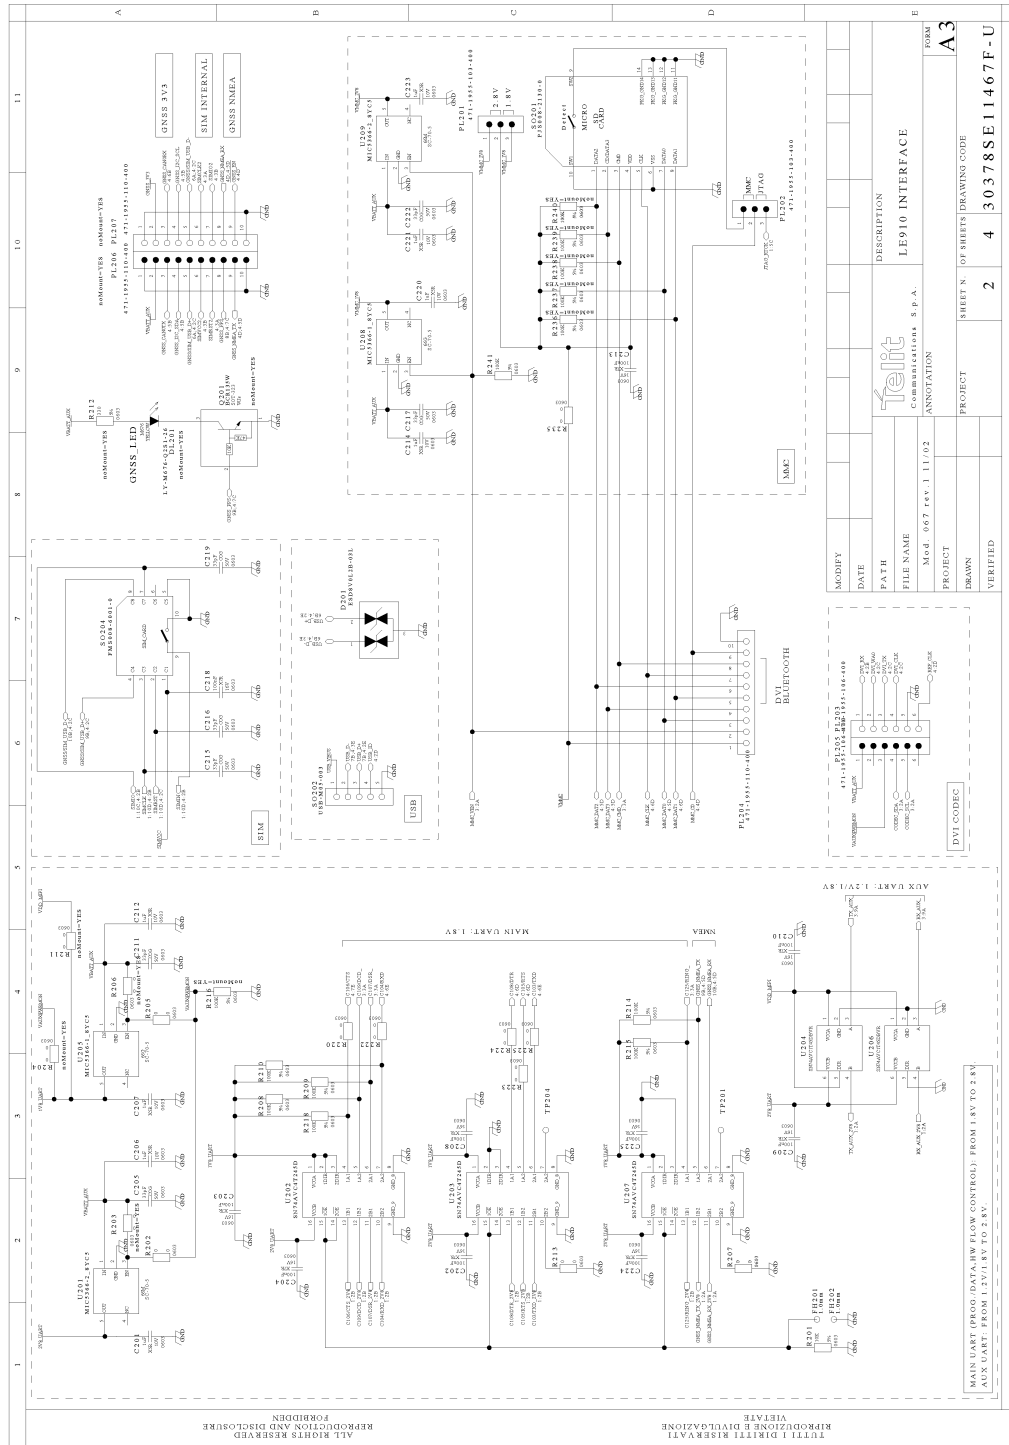

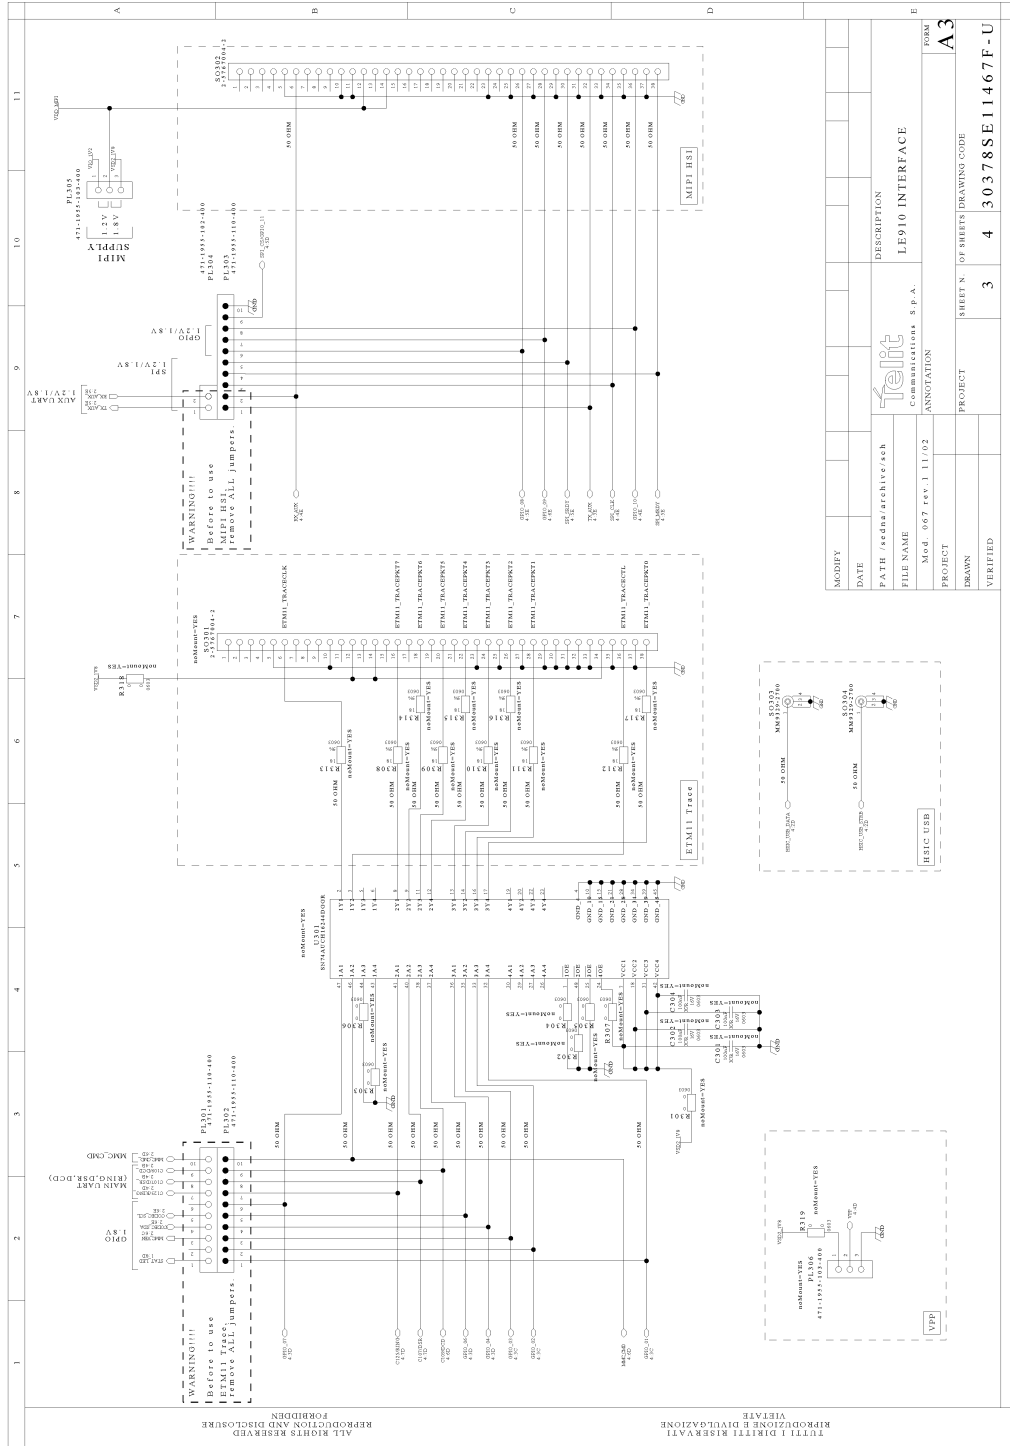



45. Service and firmware update

You can update the Telit Module firmware through the serial cables (RS232 or USB depending on module's characteristics) used for the communication with a PC. The firmware update can be done with a specific software tool provided by Telit that runs on windows based PCs.

All levels are conformed to RS232 and V.24 standard and a PC serial port can be directly connected to this connector.



46. SAFETY RECOMMENDATIONS

READ CAREFULLY

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and has to be avoided in the following areas:

Where it can interfere with other electronic devices in environments such as hospitals, airports, aircrafts, etc

Where there is risk of explosion such as gasoline stations, oil refineries, etc

It is responsibility of the user to enforce the country regulation and the specific environment regulation.

Do not disassemble the product; any mark of tampering will compromise the warranty validity.

We recommend following the instructions of the hardware user guides for a correct wiring of the product. The product has to be supplied with a stabilized voltage source and the wiring has to be conforming to the security and fire prevention regulations.

The product has to be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself. Same cautions have to be taken for the SIM, checking carefully the instruction for its use. Do not insert or remove the SIM when the product is in power saving mode.

The system integrator is responsible of the functioning of the final product; therefore, care has to be taken to the external components of the module, as well as of any project or installation issue, because the risk of disturbing the GSM network or external devices or having impact on the security. Should there be any doubt, please refer to the technical documentation and the regulations in force.

Every module has to be equipped with a proper antenna with specific characteristics. The antenna has to be installed with care in order to avoid any interference with other electronic devices and has to guarantee a minimum distance from the people (20 cm). In case of this requirement cannot be satisfied, the system integrator has to assess the final product against the SAR regulation.

The European Community provides some Directives for the electronic equipment introduced on the market. All the relevant information's are available on the European Community website: <http://europa.eu.int/comm/enterprise/rtte/dir99-5.htm>

The text of the Directive 99/05 regarding telecommunication equipments is available, while the applicable Directives (Low Voltage and EMC) are available at: http://europa.eu.int/comm/enterprise/electr_equipment/index_en.htm



46.1. Disposal of this product in the European Union

According to the WEEE Directive 2012/19/EU, the crossed-out wheeled bin symbol on the product or on its packaging indicates that the product must not be disposed of with your other household waste.



For equipment in private household, it's user's responsibility to dispose of his waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where you can drop off your waste equipment from private household for recycling, please contact your local city office, your household waste disposal service or the retailer where you purchased the product. As a producer of electronic devices, TELIT provides for the financing of the treatment and recycling of waste returned through the designated collection points in accordance with local requirements. If you have professional electronic equipment that you purchased directly from TELIT that you wish to have picked up for recycling, please contact us to receive necessary information and instructions. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Reference Directives:

2012/19/EU	Directive of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE).
------------	---

46.2. Disposal of this product in other countries outside the European Union

Please dispose of this product in accordance with local requirements; contact your local authorities or dealer and ask for the correct method of disposal.



47. Document History

Revision	Date	Changes
Rev 0	05/01/2006	First issue
Rev 1	23/01/2006	Added PCB weight and dimensions pag.9 Added default setup pag.8 Correct mA/h with mAh pag.16 Unified the scripting “impedance coil” pag.19 and pag.20 Insert the power supply pag.7 Correct the serial lines scripting on block diagrams Insert the pin number of CS1150 connector. Correct the serial interfaces descriptions pag.7
Rev 2	31/01/2006	Modified in chapter 11.1 description of CS1170 pag. 29
Rev.3	14/04/2006	Moved par.2.2 to par.4 and extended the STARTUP PROCEDURE to pag.11 Par.3 pag.9: Added mother boards block diagrams Pag.11: Correct GE863 Interface physical dimensions and added Dual Camera Interface physical dimensions. Moved par.4.4 and 4.5 to par.6.5 as Application Notes Moved par.7.3, 7.4 and 7.5 to par.9.3 as Warning Pag.26: Correct the Reset Button function description. Pag.20: Updated the Cross List Table From par.14 to par.18: Added interfaces description Removed all “Interface Board” “Printed Circuits Name” cross references Par.20: Added all electric diagrams.
Rev.4	14/07/2006	Replaced GC864 interface photo pag.46

Rev.5	13/10/2006	<p>Renamed figure from 38 to 42 Pag.2 Added products name and P/N for GE863-PY/QUAD interface and GC864-C2 interface 3.2.6 Added mechanical characteristics GC864-C2 interface 5.0 Correct Optically Positioning Guide system description 7.1 Correct the line selection description 6.5.2 Updated Current Charger footnote Generality: added note for the VGA camera Added in the Cross List GE864-PY/QUAD interface and GC864-C2 interface 15.2.1 Inserted P/N of GE863-GPS version Added GC864-C2 interface description 20.1 Corrected GPIO location and added p/n of GM862 interface 20.2 Corrected GPIO location and added p/n of GE863-GPS interface Corrected GPIO location and added p/n of GE863 interface Corrected GPIO location and added p/n of GE864 interface Corrected GPIO location and added p/n of GC864 interface Corrected GPIO location and added p/n of GC864-C2 interface Added GC864-C2 interface Schematic GM862 Interface p/n 3990250670: added RoHS certification GE863-PY Interface p/n 3990250669: added RoHS certification GE863-GPS Interface p/n 3990250671: added RoHS certification GE863-PY Interface p/n 3990250684: added RoHS certification GC864-QUAD Interface p/n 3990250685: added RoHS certification GE864-PY Interface p/n 3990250672: added RoHS certification GC864-PY Interface p/n 3990250680: added RoHS certification</p>
Rev.6	24/05/2007	<p>Pag.2 Product Table updated Pag.10 Table 1 updated Pag.24 Modified the formula Pag.22 Inserted the Audio Section chapter Pag.39 Table 10 modified PCB release updating Erased all Dual Camera paragraph Figures and table updated Paragraph 15.3 16.2 17.3 18.3 19.3 inserted 24.1 EVK2 SYS p/n 3990150463: added RoHS certification 24.9 GE864-QUAD Interface p/n 3990250688: added RoHS certification 24.11 GE864-QUAD-C2 Interface p/n 3990250683: added RoHS certification</p>



Telit EVK2 User Guide

1wv0300704 Rev.19 – 2015/01/26

Rev.7	22/01/2008	<p>Pag.2 Product Table updated with UC864-E and GE863-SIM</p> <p>Pag.7 Disclaimer Date modified</p> <p>Pag.13 Inserted UC864 Interface dimensions</p> <p>Pag.36 Inserted refer to GE863-SIM</p> <p>Pag.38 Table 10 Inserted UC864 and GE863-SIM Interface Code</p> <p>Pag.38 Order Code Table updated</p> <p>Pag.42 Added figure 24 with GE863-SIM photo</p> <p>Pag.43 Added GE863-SIM version kit list</p> <p>Pag.54 Inserted UC864 Interface photo</p> <p>Pag.64 Inserted figure 40 and Table 17 of UC864 GPIO positioning</p> <p>Pag.77-78 Inserted UC864 Interface Schematic diagrams</p> <p>Removed notes regarding interface board of phased out models from the GE863 family (Please refer to the previous version of this document if you need information for the interfaces with the following P/N: 3990250669 & 3990250677)</p>
Rev.8	20/03/2008	<p>Pag.64 Updated 40 and Table 19 of UC864 GPIO positioning</p> <p>Pag.66-70 Updated EVK mother board schematics</p> <p>Pag.81 Added new European WEEE directive</p>
Rev. 9	28/05/2008	<p>Pag.77-78 Replaced UC864 Interface board schematics with more readable drawings.</p>
Rev. 10	20/06/2011	<p>Pag.02 Replaced the applicability list – Pag.123 replaced the RoHS certifications</p>
Rev. 11	18/07/2011	<p>HE910 added to the document</p> <p>GE864-GPS section update to align with latest PCB development</p>
Rev. 12	2012/05/21	<p>Added GE865-JF2 sections</p>
Rev. 13	2012/06/25	<p>Updated fig.48</p> <p>Updated HE910 interface board P/N in applicability Table.</p> <p>Update GE865+JF2 drawings §27.1</p>
Rev. 14	2012/12/11	<p>Updated with GE910 interface board; P/N in applicability Table.</p> <p>Updated Startup procedure chapter with XX910 products and timings;</p> <p>Updated Power ON Switch chapter with XX910 products and timings;</p> <p>Updated Figure 22 Switches position</p> <p>Added info for DE910 and CE910</p> <p>20 2.2.15 DE910 Interface CS1467D</p> <p>20 2.2.16 CE910 Interface CS1467D</p> <p>27 DE910 family Interface</p> <p>28 CE910 family Interface</p> <p>29.1.12 DE910 Interface</p> <p>29.1.13 CE910 Interface</p> <p>30.17 DE910 Interface board schematic</p> <p>30.18 CE910 Interface board schematic</p>
Rev. 15	2013-02-19	<p>Added §20 about JN3+GL865 Interface board.</p>
Rev. 16	2013/03/15	<p>Added GL865 V3 interface board</p>
Rev. 17	2013/05/30	<p>Added GE910-GNSS; GE910-QUAD V3, UE910, LE920 interface board</p>
Rev. 18	2014/06/30	<p>Added HE920, HE910 V2, UE910 V2, CL865, UL865 and LE910 interface boards</p> <p>Updated 45.1 Disposal of product in the European Union</p> <p>Added 45.2 Disposal of product outside the European Union</p>
Rev. 19	2015/01/26	<p>Updated chapters 39 and 44.28: GE866-QUAD Interface</p> <p>42.1.20 GPIO Table</p> <p>Added UE866 and UE910 3G</p>



