

BlueMod+S/Central Software User Guide

1VV0301279 Rev. 03 – 2016-11-18



APPLICABILITY TABLE

PRODUCT
BlueMod+S/Central



SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit.

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Third Party Rights

The software may include Third Party Right software. In this case you agree to comply with all terms and conditions imposed on you in respect of such separate software. In addition to Third Party Terms, the disclaimer of warranty and limitation of liability provisions in this License shall apply to the Third Party Right software.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESS OR IMPLIED FROM ANY THIRD PARTIES REGARDING ANY SEPARATE FILES, ANY THIRD PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY THIRD PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODE"), AND THE USE OF ANY OR ALL THE OTHER CODE IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO THIRD PARTY LICENSORS OF OTHER CODE SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODE OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Copyright © Telit Communications S.p.A. 2016.



Contents

1. Introduction.....	7
1.1. Scope.....	7
1.2. Audience	7
1.3. Contact Information, Support	7
1.4. Text Conventions	7
1.5. Related Documents.....	8
2. Introduction.....	9
2.1. Overview	9
2.2. Feature Set	9
3. Modes and Connections	10
3.1. AT Command Mode	10
3.1.1. Central Role as GATT Client.....	10
3.1.2. Central Role as Terminal I/O Client.....	18
3.1.3. Peripheral Role as Terminal I/O Server.....	21
3.1.4. Multiple GATT Connections	24
3.2. MUX Mode	26
3.2.1. Central Role as GATT Client.....	27
3.2.2. Central Role as Terminal I/O Client.....	35
3.2.3. Central Role as GATT Client and Terminal I/O Client	38
4. Startup Timing	42
4.1. Firmware Version 2.104	42
5. Security	43
5.1. Pairable and Bondable Mode	43
5.2. Security Levels for Terminal I/O	43
5.3. Connection Example Terminal I/O “Just Works”	48
5.4. Connection Example Terminal I/O “Passkey Entry”	49
6. UART Interface Control Protocol (UICP).....	50
6.1. General Protocol Description	50
6.2. Requirements of Using UICP on BlueMod+S/Central	50
6.3. Connection Example between BlueMod+S/Central and Host Controller.....	50



- 6.4. UICP Protocol States 51
 - 6.4.1. Drive from "interface up" to "interface down" State.....52
 - 6.4.2. Drive from "interface down" to "interface up" State.....53
- 6.5. Example of UICP Usage 54
 - 6.5.1. State Change from "interface up" to "interface down"54
 - 6.5.2. State Change from "interface down" to "interface up"55
- 7. Firmware Upgrade 56**
 - 7.1. Serial Firmware Upgrade 56
 - 7.1.1. Prerequisites for Serial Firmware Upgrade56
 - 7.1.2. Telit BlueMod+S Updater.....56
 - 7.1.3. Firmware Update Protocol on the Host System.....58
 - 7.2. Firmware Update over The Air (OTA) 61
 - 7.2.1. Firmware Update Over The Air using Nordic nRF Toolbox on Android62
- 8. System OFF Mode 65**
 - 8.1. Using System OFF Mode for Terminal I/O 65
- 9. LE Connection Parameters 67**
 - 9.1. Create a Bluetooth Low Energy Connection 67
 - 9.2. Optimize the Connection Interval from Slave by using the Slave Latency 68
 - 9.3. Identify the Required Connection Interval 69
 - 9.4. Update the Connection Parameters 70
 - 9.5. Connection Examples of Different Use Cases 70
 - 9.5.1. Central Side Initiates a GATT Connection.....71
 - 9.5.2. Central Side Changed Initial Connection Parameter 72
 - 9.5.3. Peripheral Side Create a Connection Parameter Update Request73
- 10. Document History 74**



1. Introduction

1.1. Scope

This document describes the usage of the development kit for the Bluetooth module BlueMod+S/Central.

1.2. Audience

This document is intended for Telit customers, especially system integrators, about to implement Bluetooth modules in their application.

1.3. Contact Information, Support

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-SRD@telit.com

Alternatively, use:

<http://www.telit.com/support>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

1.4. Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.



All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.5. Related Documents

- [1] BlueMod+S Hardware User Guide, 1VV0301275
- [2] BlueMod+S/Central AT Command Reference, 80507ST10754A
- [3] Bluetooth 4.0 Core Specification
- [4] UICP+ UART Interface Control Protocol, 30507ST10756A
- [5] nRf51 SDK Documentation
<http://infocenter.nordicsemi.com>



2. Introduction

2.1. Overview

This document describes the usage of the BlueMod+S/Central Bluetooth module featuring firmware version V2.104 or later.

Firmware version V2.xxx is based on SoftDevice S130 V1.0.0 and bootloader SBS1303 V2.102.

In the meantime there exists a new firmware generation V3.xxx. Firmware version V3.xxx is based on SoftDevice S130 V2.0.1 and bootloader SBS1503 V3.000.

Firmware version V3.xxx includes advanced functionality which is marked separately within this document.



Firmware version V3.xxx is not compatible with firmware version V2.xxx series. It is not possible to update devices using firmware version V2.xxx to firmware version V3.xxx and vice versa.

For a detailed description of the commands refer to the *BlueMod+S/Central AT Command Reference*.

All referenced documents can be downloaded from:

<http://www.telit.com/bluetooth/bluemo-d-s/>

2.2. Feature Set

The combined central and peripheral BlueMod+S/Central firmware includes the following feature set:

- Handling for 4 parallel links (3 in central role and 1 in peripheral role)
- Generic GATT client support in central role
- Terminal I/O client support in central role ^{*)}
- Terminal I/O server support in peripheral role
- Up to 60 characteristics shared by all GATT clients
- 10 configurable 128 bit UUIDs
- Fix pin for easy security
- AT command mode and multiplexing mode
- Easy control over all connection parameters
- Advanced power saving features like UICP and SYSTEMOFF
- Firmware over the air update

This document shows the practical use of some commands listed in the AT command reference. For command details it is referred to the *BlueMod+S/Central AT Command Reference*.

^{*) Supported since firmware version 3.004}



3. Modes and Connections

In AT command mode the BlueMod+S/Central supports 3 parallel central connections or one peripheral Terminal I/O server connection. This means that the BlueMod+S/Central stops advertising (being connectable) as peripheral as soon a central connection is established.

When a peripheral Terminal I/O server connection is active, it is not possible to establish a central connection to be used as GATT client.

The reason for this behavior is that a Terminal I/O connection in AT mode puts the serial interface in data mode, where it is not possible to handle AT commands or events for an additional central connection. Therefore it is not possible to use the ATD command for connection establishment during a Terminal I/O connection.

To use peripheral and central connections in parallel the BlueMod+S/Central supports the multiplexing (MUX) mode. In this mode there is an always accessible AT command channel. This makes it possible to handle all 4 links in parallel (3 central connections and one peripheral Terminal I/O server connection). The host has to implement the simple to use multiplexing protocol.

3.1. AT Command Mode

This chapter describes connection examples for different roles:

- Central role: GATT client connections to BLE peripheral devices in AT command mode
- Central role: Terminal I/O client connection to BLE peripheral device (supporting Terminal I/O service) in AT command mode
- Peripheral role as Terminal I/O server

3.1.1. Central Role as GATT Client

In central role the BlueMod+S/Central supports the possibility to connect to any Bluetooth low energy peripheral devices.

The following example lists the GATT connection in multiple steps include an explanation of the different result messages.



3.1.1.1. Searching for Available Peripheral Devices

If the Bluetooth address of the peripheral device is unknown the BlueMod+S/Central needs to scan for available peripheral devices first.

<pre>AT+LESCAN=GATT</pre>	<pre>D0A4E9658F65,t3 RSSI:-60 TYPE:CONN NAME:BM+S 8F65 MNF:8F0009B0011000 UUID:FEFB DE338F0D1A22,t3 RSSI:-68 TYPE:CONN NAME:BM+S 1A22 MNF:8F0009B0011000 UUID:FEFB 0080254978B3,t2 RSSI:-62 TYPE:CONN NAME:BM+SR 7 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB F1B9EB41D81E,t3 RSSI:-57 TYPE:CONN NAME:TESTDEVICE UUID:FF00 008025001162,t2 RSSI:-68 TYPE:CONN NAME:BM+SR 1 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB OK</pre>
---------------------------	--

This output lists 5 different peripheral devices with different services.

To list peripheral devices with a specific UUID it is possible to add this UUID value in the AT+LESCAN command.

<pre>AT+LESCAN=uFF00</pre>	<pre>F1B9EB41D81E,t3 RSSI:-57 TYPE:CONN NAME:TESTDEVICE UUID:FF00 OK</pre>
----------------------------	--

The found peripheral device includes the following information:

Bluetooth address and type:	F1B9EB41D81E,t3
Signal strength in dbm:	RSSI:-57
Advertisement type:	TYPE:CONN
Device name:	NAME:TESTDEVICE
Service UUID:	UUID:FF00



3.1.1.2. Create GATT Connection

To establish a GATT connection to a peripheral device it is required to initiate a call request to the unique Bluetooth address.

ATDF1B9EB41D81E,t3,GATT	CONNECT GATT 0x10
-------------------------	-------------------

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x10”.

This connection handle is not set to a fixed value and will be different for each connection.

The given connection handle is required for further activities onto this peripheral device.

3.1.1.3. Discovering Services and Characteristics

After the GATT connection was established the BlueMod+S/Central should search for available services and their characteristics using the AT+LESRVD command.

AT+LESRVD=0x10	UUID:1800 UUID:1801 UUID:180A UUID:FF00 OK
----------------	--

The BlueMod+S/Central reports a list of GATT services from the peripheral device. This list of available services also includes the UUID: “FF00”. This UUID was listed during the LESCAN result of this peripheral device as well. If the required service UUID is already known, the service search function could be skipped.

In addition to the service UUID value it is required to get the characteristic values of the required service UUID.



<pre>AT+LESRVD=0x10,uFF00</pre>	<pre> UUID:FF00 0x0011 PROP:0x3E UUID:FF01 0x0014 PROP:0x3E UUID:FF02 0x0017 PROP:0x3E UUID:FF03 0x001A PROP:0x08 UUID:FF04 0x001C PROP:0x04 UUID:FF05 0x001E PROP:0x02 UUID:FF06 0x0020 PROP:0x10 UUID:FF07 0x0023 PROP:0x20 UUID:FF08 0x0026 PROP:0x30 UUID:FF09 0x0029 PROP:0x3E UUID:FF0A 0x002C PROP:0x3E UUID:FF0B 0x002F PROP:0x3E UUID:FF0C 0x0032 PROP:0x3E UUID:FF0D 0x0035 PROP:0x3E UUID:0000FF0A000010008000008025000000 0x0038 PROP:0x3E UUID:0000FF0B000010008000008025000000 0x003B PROP:0x3E UUID:0000FF0C000010008000008025000000 0x003E PROP:0x3E UUID:0000FF0D000010008000008025000000 OK </pre>
---------------------------------	--

The BlueMod+S/Central reports a list of GATT characteristics of the requested GATT service UUID: “FF00” from the peripheral device. This list of characteristics includes all characteristic specific values like, characteristic handle, characteristic properties, characteristic UUID.

The following example lists the information of the first characteristic in details:

```

characteristic handle:      0x0011
characteristic properties:  PROP:0x3E
characteristic UUID:       UUID:FF01

```

The characteristic handle is required for all access functions to use with this characteristic.

The characteristic properties inform about the possible access functions available on this characteristic, like: read, write, write without response, notify, indicate. In this example the properties PROP: 0x3E with the characteristic handle 0x0011 are set to all possible properties.

The characteristic UUID identifies the characteristic ID within this service.



3.1.1.4. Writing Data to a Characteristic

To write data to a characteristic it is required that the properties of this characteristic support “write” or “write without response”.

There are two different options to write data to the characteristic:

- AT+LEWRITE: Initiate a write with response access to the characteristic
- AT+LEWRITECMD: Initiate a write without response access (write command) to the characteristic

In addition it is important to know the data size of the GATT characteristic.

This information is listed in the service specification of the addressed service.

In the example the data size is defined to two bytes.

To write two data bytes (0xaa and 0xbb) to the GATT server on the peripheral side the host controller needs to use the connection handle and characteristic handle from the ATD and AT+LESRVD commands. Additionally the data content has to be added to the command line.

AT+LEWRITE=0x10,0x0011,aabb	OK
-----------------------------	----

The command “AT+LEWRITE” uses a “write request” command which is confirmed by the peripheral side with a “write response” message.

The result “OK” means that the value was written to the peripherals GATT server successfully.

AT+LEWRITECMD=0x10,0x0011,aabb	OK
--------------------------------	----

The command “AT+LEWRITECMD” uses a “write command” which is not confirmed by the peripheral side. The result “OK” means that the data was sent over the air.



3.1.1.5. Reading Data from a Characteristic

To read data from a characteristic it is required that the properties of this characteristic supports “read”, “notify” or “indicate”.

To read data bytes from a characteristic of the GATT server on the peripheral side the host controller needs to use the connection handle and characteristic handle from the ATD and AT+LESRVD commands.

AT+LEREAD=0x10,0x0011	LEREAD:0x10,0x0011,AABB OK
-----------------------	-------------------------------

The answer is separated into two parts:

The result message “OK” reports that reading to the required connection handle and characteristic handle was successful.

The “LEREAD:0x10,0x0011,AABB” message reports the read data of the requested connection handle “0x10” and characteristic handle “0x0011”.

The data is formatted as a hexadecimal stream “AABB” that includes two bytes 0xAA and 0xBB.

3.1.1.6. Reading Data with Indications or Notifications

Indications and notifications are messages that inform the GATT client when a characteristic on the GATT server changes its value.

- INDICATIONS: The GATT client generated a response to the GATT server when receiving data
- NOTIFICATIONS: The GATT client generated no response to the GATT server when receiving data

This feature has to be enabled by the client for a specific characteristic.

It is not possible to enable indications and notifications at the same time.

To use this feature, it is required that the properties of the characteristic supports “notify” or “indicate”. This information is given in the service discovery for the characteristic in the “PROP” value.



3.1.1.6.1. Enable Notifications:

AT+LECCCD=0x10,0x0011,1	OK
-------------------------	----

The result message “OK” reports that activating notifications to the required connection handle and characteristic handle was successful.

When the data of this characteristic on the GATT server changed to “0x36, 0x37” the BlueMod+S/Central generates an event (“LENOTI”) that reports these changes:

	LENOTI:0x10,0x0011,3637
--	-------------------------

The reported “LENOTI” event of the BlueMod+S/Central contains the new data of the characteristic with handle “0x0011” and connection handle “0x10”.

The data is formatted as a hexadecimal stream “3637” that includes two bytes 0x36 and 0x37.

Every data change on the remote GATT server characteristic generates a new “LENOTI” event until the notifications to this characteristic are switched off.

3.1.1.6.2. Disable Notifications:

AT+LECCCD=0x10,0x0011,0	OK
-------------------------	----

The result message “OK” reports that deactivating the notifications to the required connection handle and characteristic handle was successful.

3.1.1.6.3. Enable Indications:

AT+LECCCD=0x10,0x0011,2	OK
-------------------------	----

The result message “OK” reports that activating indications to the required connection handle and characteristic handle was successful.

When the data of this characteristic on the GATT server changed to “0x36, 0x38” the BlueMod+S/Central generates an event (“LEIND”) that reports these changes:

	LEIND:0x10,0x0011,3638
--	------------------------

The reported “LEIND” event of the BlueMod+S/Central contains the new data of the characteristic with handle “0x0011” and connection handle “0x10”.

The data is formatted as a hexadecimal stream “3638” that includes two bytes 0x36 and 0x38.

Every data change on the remote GATT server characteristic generates a new “LEIND” event until the indications to this characteristic are switched off.



3.1.2. Central Role as Terminal I/O Client

**) Supported since firmware version 3.004*

In central role the BlueMod+S/Central supports the possibility to connect to Bluetooth low energy peripheral devices running the Terminal I/O profile.

The following example lists the Terminal I/O client connection in multiple steps include an explanation of the different result messages.

3.1.2.1. Searching for Available Terminal I/O Peripheral Devices

If the Bluetooth address of the peripheral device is unknown the BlueMod+S/Central needs to scan for available peripheral devices first.

<pre>AT+LESCAN=GATT</pre>	<pre>D0A4E9658F65,t3 RSSI:-60 TYPE:CONN NAME:BM+S 8F65 MNF:8F0009B0011000 UUID:FEFB DE338F0D1A22,t3 RSSI:-68 TYPE:CONN NAME:BM+S 1A22 MNF:8F0009B0011000 UUID:FEFB 0080254978B3,t2 RSSI:-62 TYPE:CONN NAME:BM+SR 7 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB F1B9EB41D81E,t3 RSSI:-57 TYPE:CONN NAME:TESTDEVICE UUID:FF00 008025001162,t2 RSSI:-68 TYPE:CONN NAME:BM+SR 1 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB OK</pre>
---------------------------	--

This output lists 5 different peripheral devices with different services.



To list peripheral devices with Terminal I/O profile only it is possible to add this UUID value in the AT+LESCAN command.

AT+LESCAN=uFEFB	D0A4E9658F65,t3 RSSI:-60 TYPE:CONN NAME:BM+S 8F65 MNF:8F0009B0011000 UUID:FEFB OK
-----------------	---

The found peripheral device includes the following information:

Bluetooth address and type: D0A4E9658F65,t3
Signal strength in dbm: RSSI:-60
Advertisement type: TYPE:CONN
Device name: NAME: BM+S 8F65
Service UUID: UUID:FEFB (Terminal I/O Service)

For command details it is referred to the *BlueMod+S/Central AT Command Reference*.

3.1.2.2. Create a Terminal I/O Client Connection

To establish a Terminal I/O connection to a peripheral device supporting Terminal I/O service it is required to initiate a call request to the unique Bluetooth address.

ATDD0A4E9658F65,t3,TIO	CONNECT TIO 0x10
------------------------	------------------

The BlueMod+S/Central reports the created TIO connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x10”.

This connection handle is not set to a fixed value and will be different for each connection.

The given connection handle is required for further activities onto this peripheral device.

After receiving the “CONNECT” result message from the BlueMod+S/Central the module changes from the command mode to the transparent data mode. During the Terminal I/O connection all following data on the UART interface are transmitted to the destination side and all received Terminal I/O data is transmitted to the UART interface.

Configuration commands can be sent in the online command mode only after sending the required escape sequence “+++”. For command details it is referred to the *BlueMod+S/Central AT Command Reference*.

3.1.2.3. Close a Terminal I/O Client Connection:

When the Terminal I/O client connection is not needed anymore, it could be disconnected. To close a client connection to a peripheral device the host controller needs to use the connection handle.

+++ ATH=0x10	OK NO CARRIER 0x10
---------------------	---------------------------

To close a Terminal I/O connection it is required to change from the transparent data mode to the command mode first. Therefore the host controller needs to send the escape sequence “+++” to the BlueMod+S/Central.



After recognizing “+++” the BlueMod+S/Central reports “OK” to the host controller.

Now the connection changed to the online command mode and the host controller can send configuration commands like “ATH” include the given connection handle “0x10” to close the connection.

The module reports the event “NO CARRIER” followed by the disconnected connection handle.

The same event “NO CARRIER” is reported when the remote peripheral disconnects the connection.

It is also possible to disconnect all existing GATT connection to different peripheral devices by using the GPIO “HANGUP”.



3.1.3.1. Incoming Terminal I/O Connection

For a Terminal I/O connection it is necessary that the Terminal I/O service and the advertising mode are enabled. This is the default behavior of the BlueMod+S/Central.

The BlueMod+S/Central signals an incoming Terminal I/O connection with the following event:

	RING CONNECT TIO 0x01
--	--------------------------

The BlueMod+S/Central report the incoming Terminal I/O connection with the result message “RING”. The established Terminal I/O connection is reported with the message „CONNECT“ including the connection type „TIO“ and a connection handle “0x01”.

The given connection handle is required for detailed activities onto this Terminal I/O connection.

After reporting the “CONNECT” result message the BlueMod+S/Central changed from the AT based “command mode” to the “online data mode”.

3.1.3.2. Exchange Terminal I/O Data

All data send on the serial interface is transparently sent to the Terminal I/O client side.

All data send by the remote Terminal I/O client is binary output on the serial interface of the BlueMod+S/Central.

When a peripheral Terminal I/O server connection is active, it is not possible to create a GATT connection to a peripheral device.



3.1.3.3. Close Terminal I/O Connection

The Terminal I/O connection can be closed in the following two different options:

- By using the GPIO “HANGUP”
(only available if this GPIO is controlled by the host controller)
- Send the “ATH” command.

Using the GPIO “HANGUP”

set GPIO “HANGUP” to high level	NO CARRIER 0x01
set GPIO “HANGUP” to low level	

Using the “ATH” command

<wait 1 sec after data exchange> +++ ATH=0x01	OK NO CARRIER 0x01
---	---------------------------

The response of the disconnect request reports the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote Terminal I/O client side disconnects the connection.



3.1.4. Multiple GATT Connections

This chapter describes the possibility to connect to different GATT peripheral devices at the same time.

In complement to chapter 3.1.1 the following example demonstrates GATT connections to 3 different peripheral devices.

3.1.4.1. Searching for Available Peripheral Devices

Scan for available devices:

<pre>AT+LESCAN=GATT</pre>	<pre>D0A4E9658F65,t3 RSSI:-60 TYPE:CONN NAME:BM+S 8F65 MNF:8F0009B0011000 UUID:FEFB DE338F0D1A22,t3 RSSI:-68 TYPE:CONN NAME:BM+S 1A22 MNF:8F0009B0011000 UUID:FEFB 0080254978B3,t2 RSSI:-62 TYPE:CONN NAME:BM+SR 7 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB F1B9EB41D81E,t3 RSSI:-57 TYPE:CONN NAME:TESTDEVICE UUID:FF00 008025001162,t2 RSSI:-68 TYPE:CONN NAME:BM+SR 1 MNF:8F0009B0011000 UUID:53544D544552494F5345525631303030 UUID:FEFB OK</pre>
---------------------------	--

This output lists 5 different peripheral devices with different services.



3.1.4.2. Create Multiple GATT Connections

Initiate first GATT connection to a peripheral device.

ATDF1B9EB41D81E,t3,GATT	CONNECT GATT 0x10
-------------------------	-------------------

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x10”.

Initiate second GATT connection to a peripheral device.

ATDDE338F0D1A22,t3,GATT	CONNECT GATT 0x11
-------------------------	-------------------

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x11”.

Initiate third GATT connection to a peripheral device.

ATD0080254978B3,t2,GATT	CONNECT GATT 0x12
-------------------------	-------------------

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x12”.

For all further activities to each established GATT connections (read or write data), it is required to set the specific connection handle value.

This is already described here: 3.1.1 Central Role as GATT Client



3.2. MUX Mode

To handle connections to peripheral devices and the Terminal I/O server connection in parallel the BlueMod+S/Central supports the multiplexing (MUX) mode.

In this mode there is an always accessible AT command channel available. This command channel (channel ID= “FF”) enables the possibility to handle all four links in parallel (three GATT connections to peripheral devices and one Terminal I/O connection).

The host has to implement the simple to use multiplexing protocol.

Data has to be sent and are received in the following framing (all values in hexadecimal format):

Name	Description	Length	Value
Start	Start of frame	8 bit	CC
Data Channel ID	Channel identifier	8 bit	00 – FE
Command Channel ID	Channel identifier	8 bit	FF
Length	Length of data	8 bit	-
Data	Max. 255 bytes data	Min. 0 byte Max. 255 bytes	-

Start of frame, channel ID, length and data are always transmitted in direct, binary form.

A detailed description of the multiplexing mode is listed in the *BlueMod+S/Central AT Command Reference*.

This chapter describes connection examples for different roles:

- Central role: GATT client connections to BLE peripheral device (include a service and characteristic discovery, data exchange) and an incoming Terminal I/O peripheral connection in MUX mode.
- Central role: Terminal I/O client connection to BLE peripheral device (supporting Terminal I/O service) include Terminal I/O data exchange and an incoming Terminal I/O peripheral connection in MUX mode.
- Central role: Terminal I/O client connection to BLE peripheral device (supporting Terminal I/O service), a GATT client connections to BLE peripheral device and an incoming Terminal I/O peripheral connection in MUX mode.



3.2.1. Central Role as GATT Client

In the multiplexing mode the BlueMod+S/Central supports the possibility to connect to any Bluetooth low energy peripheral device and the Terminal I/O server connection in parallel.

The following example lists one GATT connection and one Terminal I/O connection in multiple steps.

3.2.1.1. Enable the Multiplexing Mode

As default the BlueMod+S/Central communicates to the serial interface in the AT command mode. This is the default behavior of the BlueMod+S/Central.

To enable the multiplexing mode during the run time it is required to send the following command:

AT+BMUX=1	OK
-----------	----

After this initial command the BlueMod+S/Central reports the response “OK” in the AT command mode and then changes to the multiplexing mode. All exchanged data requires to be sent in the defined MUX packet framing.

The multiplexing response message of the BlueMod+S/Central may be sent in several MUX frames.

The MUX mode can be left with the AT command “AT+BMUX=0” or a reset of the BlueMod+S/Central device.



The following example in the MUX mode is listing the serial data in hexadecimal coded form to identify the MUX framing. For a better understanding the corresponding text message (human readable) is added in italic letters.

3.2.1.2. Create GATT Connection

To establish a GATT connection to a peripheral device it is required to initiate a call request to the unique Bluetooth address.

cc ff 18 41 54 44 30 30 38 30 32 35 30 30 31 32 34 31 2c 74 32 2c 47 41 54 54 0d <i>ATD008025001241,t2,GATT</i>	
	cc ff 0e 0d 0a 43 4f 4e 4e 45 43 54 20 47 41 54 54 cc ff 05 20 30 78 31 30 cc ff 02 20 3c cc ff 0c 30 30 38 30 32 35 30 30 31 32 34 31 cc ff 05 20 30 78 30 32 cc ff 01 3e cc ff 02 0d 0a <i>CONNECT GATT 0x10 <008025001241 0x02></i>

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x10”.

This connection handle is not set to a fixed value and will be different for each connection.

The given connection handle is required for further activities onto this peripheral device.



3.2.1.3. Discovering Services and Characteristics

After the GATT connection gets established the BlueMod+S/Central is searching for available services.

<pre>cc ff 0f 41 54 2b 4c 45 53 52 56 44 3d 30 78 31 30 0d AT+LESRVD=0x10</pre>	<pre>cc ff 02 0d 0a cc ff 05 55 55 49 44 3a cc ff 04 31 38 30 30 cc ff 02 0d 0a cc ff 05 55 55 49 44 3a cc ff 04 31 38 30 31 cc ff 02 0d 0a cc ff 05 55 55 49 44 3a cc ff 04 31 38 30 41 cc ff 02 0d 0a cc ff 05 55 55 49 44 3a cc ff 04 46 45 46 42 cc ff 02 0d 0a cc ff 06 0d 0a 4f 4b 0d 0a UUID:1800 UUID:1801 UUID:180A UUID:FEFB OK</pre>
---	---

The BlueMod+S/Central reports a list of GATT services from the peripheral device. This list of available services also includes the UUID: “FEFB” which is used for further activities.



In addition to the service UUID value it is required to get the characteristic values of the required service UUID “FEFB”.

```

cc ff 15 41 54 2b 4c 45 53 52 56 44
3d 30 78 31 30 2c 75 46 45 46 42 0d
AT+LESRVD=0x10,uFEFB

cc ff 02 0d 0a
cc ff 05 55 55 49 44 3a
cc ff 04 46 45 46 42
cc ff 02 0d 0a
cc ff 08 20 20 30 78 30 30 31 31
cc ff 0b 20 50 52 4f 50 3a 30 78 30
34 20
cc ff 05 55 55 49 44 3a
cc ff 20 30 30 30 30 30 30 30 31 30
30 30 30 31 30 30 30 38 30 30 30 30
30 38 30 32 35 30 30 30 30 30 30
cc ff 02 0d 0a
cc ff 08 20 20 30 78 30 30 31 33
cc ff 0b 20 50 52 4f 50 3a 30 78 31
30 20
cc ff 05 55 55 49 44 3a
cc ff 20 30 30 30 30 30 30 30 32 30
30 30 30 31 30 30 30 38 30 30 30 30
30 38 30 32 35 30 30 30 30 30 30
cc ff 02 0d 0a
cc ff 08 20 20 30 78 30 30 31 36
cc ff 0b 20 50 52 4f 50 3a 30 78 30
38 20
cc ff 05 55 55 49 44 3a
cc ff 20 30 30 30 30 30 30 30 33 30
30 30 30 31 30 30 30 38 30 30 30 30
30 38 30 32 35 30 30 30 30 30 30
cc ff 02 0d 0a
cc ff 08 20 20 30 78 30 30 31 38
cc ff 0b 20 50 52 4f 50 3a 30 78 32
30 20
cc ff 05 55 55 49 44 3a
cc ff 20 30 30 30 30 30 30 30 34 30
30 30 30 31 30 30 30 38 30 30 30 30
30 38 30 32 35 30 30 30 30 30 30
cc ff 02 0d 0a
cc ff 06 0d 0a 4f 4b 0d 0a

UUID:FEFB
0x0011 PROP:0x04
UUID:00000001000010008000008025000000
0x0013 PROP:0x10
UUID:00000002000010008000008025000000
0x0016 PROP:0x08
UUID:00000003000010008000008025000000
0x0018 PROP:0x20
UUID:00000004000010008000008025000000
OK

```

The BlueMod+S/Central reports a list of characteristics of the required GATT service UUID: “FEFB” from the peripheral device. This list of characteristics includes all characteristic specific values like, characteristic handle, characteristic properties, characteristic UUID.



The list reports all characteristic information of the service UUID: “FEFB” in details:

characteristic handle:	0x0011
characteristic properties:	PROP:0x04
characteristic UUID:	UUID: 00000001000010008000008025000000
characteristic handle:	0x0013
characteristic properties:	PROP:0x10
characteristic UUID:	UUID: 00000002000010008000008025000000
characteristic handle:	0x0016
characteristic properties:	PROP:0x08
characteristic UUID:	UUID: 00000003000010008000008025000000
characteristic handle:	0x0018
characteristic properties:	PROP:0x20
characteristic UUID:	UUID: 00000004000010008000008025000000

The characteristic handle is required for all access functions to use with this characteristic.

The characteristic properties gives information about the possible access functions available on this characteristic, like: read, write, write without response, notify, and indicate. Detailed information is available in the *BlueMod+S/Central AT Command Reference*.

The characteristic UUID identifies the characteristic within this service.

3.2.1.4. **Add MUX Channel from a Characteristic of the Connected GATT Peripheral Device**

In the normal AT command mode data bytes needs to be written into the GATT server by using the connection handle and characteristic handle. Compare: 3.1.1.4 Writing Data to a Characteristic

In the MUX mode it is possible to create an own data channel to transfer the data bytes for this characteristic.



The example will add data channels for two characteristics of the service UUID: “FEFB”.

<pre>cc ff 1b 41 54 2b 4c 45 41 44 44 43 48 41 4e 3d 30 78 31 30 2c 30 78 31 33 2c 43 4d 44 0d AT+LEADDCHAN=0x10,0x13,CMD</pre>	<pre>cc ff 02 0d 0a cc ff 04 30 78 30 38 cc ff 02 0d 0a cc ff 06 0d 0a 4f 4b 0d 0a 0x08 OK</pre>
<pre>cc ff 1b 41 54 2b 4c 45 41 44 44 43 48 41 4e 3d30 78 31 30 2c 30 78 31 31 2c 43 4d 44 0d AT+LEADDCHAN=0x10,0x11,CMD</pre>	<pre>cc ff 02 0d 0a cc ff 04 30 78 30 37 cc ff 02 0d 0a cc ff 06 0d 0a 4f 4b 0d 0a 0x07 OK</pre>

To add a MUX data channel it is required to set the connection handle and characteristic handle of this peripheral device in addition to the “write type”.

As result of the “AT+LEADDCHAN” command the BlueMod+S/Central returns the MUX channel ID include the response message “OK”. The reported MUX channel ID value will be different to each AT+LEADDCHAN command during the connection.

The list reports all information of the service UUID: “FEFB” in details:

```
characteristic handle:      0x0011
characteristic properties:  PROP:0x04
characteristic UUID:       UUID: 00000001000010008000008025000000
MUX channel:               0x08

characteristic handle:      0x0013
characteristic properties:  PROP:0x10
characteristic UUID:       UUID: 00000002000010008000008025000000
MUX channel:               0x07
```

3.2.1.5. Enable Indications or Notifications for MUX Channel

If the GATT server characteristic uses the properties “indication” or “notification”, it is possible to enable this feature by the client side in the MUX mode as well.

The MUX based command structure is identical to the AT based command.
See also: 3.1.1.6 Reading Data with Indications or Notifications



The following example demonstrates activating “notifications” for the characteristic handle “0x13” in MUX mode:

cc ff 16 41 54 2b 4c 45 43 43 43 44 3d 30 78 31 30 2c 30 78 31 33 2c 31 0d <i>AT+LECCCD=0x10,0x13,1</i>	cc ff 06 0d 0a 4f 4b 0d 0a <i>OK</i>
---	---

The result message “OK” reports that activating notifications to the required connection handle and characteristic handle was successful.

3.2.1.6. Exchange Data on MUX Channel

After creating MUX data channels with the `AT+LEADDCHAN` command the BlueMod+S/Central uses these channels to exchange data between the local host and the GATT server characteristic during this active connection.

The following example demonstrates the data exchange between both given MUX channels of the service UUID: “FEFB”.

(GATT Server: reading data)

characteristic handle: 0x0011
 characteristic properties: PROP:0x04
 characteristic UUID: UUID: 00000001000010008000008025000000
 MUX channel: 0x08

(GATT Server: writing data)

characteristic handle: 0x0013
 characteristic properties: PROP:0x10
 characteristic UUID: UUID: 00000002000010008000008025000000
 MUX channel: 0x07

cc 08 08 41 42 43 44 45 46 47 0d <i>ABCDEFGH</i>	cc 07 0b 31 32 33 34 35 36 37 38 39 20 30 <i>123456789 0</i>
---	---

The BlueMod+S/Central received serial data on the MUX channel “0x08” and transfer these data bytes to the characteristic handle “0x13” of the GATT server.

The BlueMod+S/Central received Bluetooth data from the GATT server from the characteristic handle “0x11” and send them on the MUX channel “0x07” to the serial interface.



3.2.1.7. Accept Incoming Terminal I/O Connection

During the active GATT server connection to maximum three peripheral devices it is possible to handle one Terminal I/O connection in parallel.

The following example lists the serial communication of an incoming Terminal I/O connection (i.e. from a mobile phone).

	<pre>cc ff 06 0d 0a 52 49 4e 47 cc ff 02 0d 0a RING cc ff 0d 0d 0a 43 4f 4e 4e 45 43 54 20 54 49 4f cc ff 05 20 30 78 30 31 cc ff 02 0d 0a CONNECT TIO 0x01</pre>
--	--

The BlueMod+S/Central reports an incoming Terminal I/O connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x01”.

The given connection handle is required for further activities onto this Terminal I/O connection.

3.2.1.8. Exchange Data on the Terminal I/O Connection

During the active Terminal I/O connection in the multiplexing mode the data needs to be exchanged on the given connection handle which is also used as MUX channel ID.

The following example demonstrates the serial data exchange between the BlueMod+S/Central and the connected Bluetooth device using the Terminal I/O profile.

<pre>cc 01 0b 31 32 33 34 35 36 37 38 39 30 1234567890</pre>	<pre>cc 01 14 30 30 30 30 30 30 31 20 61 62 63 64 00000001 abcd</pre>
--	---

The BlueMod+S/Central received the serial MUX data content “1234567890” from the host controller and send it to the Terminal I/O client (i.e. mobile phone) with connection handle and MUX channel “0x01”.

The mobile phone sends back the response message “00000001 abcd” over the air to the BlueMod+S/Central which is transferred onto the MUX channel “0x01” to the serial interface.



3.2.1.9. Close Terminal I/O Connection

To disconnect the Terminal I/O connection (i.e. from a mobile phone) the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 30 31 0d ATH=0x01</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 30 31 NO CARRIER 0x01</pre>
---	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote peripheral disconnects the connection.

3.2.1.10. Close GATT Client Connection

To disconnect the GATT client connection to a peripheral device the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 31 30 0d ATH=0x10</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 31 30 NO CARRIER 0x10</pre>
---	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote peripheral device disconnects the GATT connection.



3.2.2. Central Role as Terminal I/O Client

**) Supported since firmware version 3.004*

In the multiplexing mode the BlueMod+S/Central supports the possibility to connect to any Bluetooth low energy peripheral device running the Terminal I/O profile and the Terminal I/O peripheral connection in parallel.

The following example lists one outgoing Terminal I/O connection and one incoming Terminal I/O server connection in multiple steps.

3.2.2.1. Enable the Multiplexing Mode

As default the BlueMod+S/Central communicates to the serial interface in the AT command mode. This is the default behavior of the BlueMod+S/Central.

To enable the multiplexing mode during the run time it is required to send the following command:

AT+BMUX=1	OK
-----------	----

After this initial command the BlueMod+S/Central reports the response “OK” in the AT command mode and then changes to the multiplexing mode. All exchanged data requires to be sent in the defined MUX packet framing.

The multiplexing response message of the BlueMod+S/Central may be sent in several MUX frames.

The MUX mode can be left with the AT command “AT+BMUX=0” or a reset of the BlueMod+S/Central device.



The following example in the MUX mode is listing the serial data in hexadecimal coded form to identify the MUX framing. For a better understanding the corresponding text message (human readable) is added in italic letters.

3.2.2.2. Create Terminal I/O Client Connection

To establish a Terminal I/O connection to a peripheral device supporting the Terminal I/O service it is required to initiate a call request to the unique Bluetooth address.

cc ff 18 41 54 44 30 30 38 30 32 35 30 30 31 32 34 31 2c 74 32 2c 47 41 54 54 0d <i>ATD008025001241,t2,TIO</i>	
	cc ff 0d 0d 0a 43 4f 4e 4e 45 43 54 20 54 49 4F cc ff 05 20 30 78 31 30 cc ff 02 20 3c cc ff 0c 30 30 38 30 32 35 30 30 31 32 34 31 cc ff 05 20 30 78 30 32 cc ff 01 3e cc ff 02 0d 0a <i>CONNECT TIO 0x10 <008025001241 0x02></i>

The BlueMod+S/Central reports the created Terminal I/O connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x10”.



This connection handle is not set to a fixed value and will be different for each connection.
The given connection handle is required for further activities onto this peripheral device.

3.2.2.3. Exchange Data on Terminal I/O Client Connection

To transfer data between the BlueMod+S/Central and the Terminal I/O peripheral device the data content needs to be sent on the given connection handle as MUX channel ID.

<pre>cc 10 0A 30 31 32 33 34 35 36 37 38 39 0123456789</pre>	<pre>cc 10 11 41 42 43 44 45 46 47 48 49 4a 4b 4c 4d 4E 4F 50 0D ABCDEF GHIJKLMNOP<cr></pre>
--	--

The BlueMod+S/Central receives serial data “0123456789” on the MUX channel “0x10” and transfers these data bytes as Terminal I/O data to the Terminal I/O peripheral device.

The BlueMod+S/Central receives Terminal I/O data from the peripheral device supporting Terminal I/O service and sends the data content “ABCDEF GHIJKLMNOP<cr>” in the MUX channel “0x10” to the serial interface.

3.2.2.4. Accept Incoming Terminal I/O Server Connection

During the active Terminal I/O client connection it is possible to handle one Terminal I/O server connection as peripheral role in parallel.

The following example lists the serial communication of an incoming Terminal I/O server connection (i.e. from a mobile phone).

	<pre>cc ff 06 0d 0a 52 49 4e 47 cc ff 02 0d 0a RING cc ff 0d 0d 0a 43 4f 4e 4e 45 43 54 20 54 49 4f cc ff 05 20 30 78 30 31 cc ff 02 0d 0a CONNECT TIO 0x01</pre>
--	--

The BlueMod+S/Central reports an incoming Terminal I/O server connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x01”.

The given connection handle is required for further activities onto this Terminal I/O server connection.

3.2.2.5. Exchange Data on the Terminal I/O Server Connection

To transfer data between the BlueMod+S/Central and the Terminal I/O client device the data content needs to be sent on the given connection handle as MUX channel ID.

<pre>cc 01 0A 30 31 32 33 34 35 36 37 38 39 0123456789</pre>	<pre>cc 01 11 41 42 43 44 45 46 47 48 49 4a 4b 4c 4d 4E 4F 50 0D ABCDEF GHIJKLMNOP<cr></pre>
--	--

The BlueMod+S/Central receives serial data “0123456789” on the MUX channel “0x01” and transfers these data bytes as Terminal I/O data to the Terminal I/O client device.



The BlueMod+S/Central receives data from the Terminal I/O client side and sends the data content “ABCDEFGHJKLMNOP<cr>” in the MUX channel “0x01” to the serial interface.

3.2.2.6. Close Terminal I/O Server Connection

To disconnect the Terminal I/O server connection (i.e. from a mobile phone) the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 30 31 0d ATH=0x01</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 30 31 NO CARRIER 0x01</pre>
---	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote client side disconnects the Terminal I/O connection.

3.2.2.7. Close Terminal I/O Client Connection

To disconnect the Terminal I/O client connection from a peripheral device supporting the Terminal I/O service the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 31 30 0d ATH=0x10</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 31 30 NO CARRIER 0x10</pre>
---	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote client side disconnects the Terminal I/O connection.



3.2.3. Central Role as GATT Client and Terminal I/O Client

**) Supported since firmware version 3.004*

In the multiplexing mode the BlueMod+S/Central supports the possibility to connect to any Bluetooth low energy peripheral device (GATT connection) and also to Bluetooth low energy devices running the Terminal I/O profile and the Terminal I/O peripheral connection in parallel.

The following example lists one outgoing Terminal I/O connection, one outgoing GATT Client connection and one incoming Terminal I/O server connection in multiple steps.

3.2.3.1. Enable the Multiplexing Mode

As default the BlueMod+S/Central communicates to the serial interface in the AT command mode. This is the default behavior of the BlueMod+S/Central.

To enable the multiplexing mode during the run time it is required to send the following command:

AT+BMUX=1	OK
-----------	----

After this initial command the BlueMod+S/Central reports the response “OK” in the AT command mode and then changes to the multiplexing mode. All exchanged data requires to be sent in the defined MUX packet framing.

The multiplexing response message of the BlueMod+S/Central may be sent in several MUX frames.

The MUX mode can be left with the AT command “AT+BMUX=0” or a reset of the BlueMod+S/Central device.



The following example in the MUX mode is listing the serial data in hexadecimal coded form to identify the MUX framing. For a better understanding the corresponding text message (human readable) is added in italic letters.

3.2.3.2. Create Terminal I/O Client Connection

To establish a Terminal I/O connection to a peripheral device supporting the Terminal I/O service it is required to initiate a call request to the unique Bluetooth address.

cc ff 18 41 54 44 30 30 38 30 32 35 30 30 31 32 34 31 2c 74 32 2c 47 41 54 54 0d <i>ATD008025001241,t2,TIO</i>	
	cc ff 0d 0d 0a 43 4f 4e 4e 45 43 54 20 54 49 4F cc ff 05 20 30 78 31 30 cc ff 02 20 3c cc ff 0c 30 30 38 30 32 35 30 30 31 32 34 31 cc ff 05 20 30 78 30 32 cc ff 01 3e cc ff 02 0d 0a <i>CONNECT TIO 0x10 <008025001241 0x02></i>

The BlueMod+S/Central reports the created Terminal I/O connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x10”.



This connection handle is not set to a fixed value and will be different for each connection.
The given connection handle is required for further activities onto this peripheral device.

3.2.3.3. Exchange Data on Terminal I/O Client Connection

To transfer data between the BlueMod+S/Central and the Terminal I/O peripheral device the data content needs to be sent on the given connection handle as MUX channel ID.

cc 10 0A 30 31 32 33 34 35 36 37 38 39 0123456789	cc 10 11 41 42 43 44 45 46 47 48 49 4a 4b 4c 4d 4E 4F 50 0D ABCDEFGHIJKLMN<cr>
--	--

The BlueMod+S/Central receives serial data “0123456789” on the MUX channel “0x10” and transfers these data bytes as Terminal I/O data to the Terminal I/O peripheral device.

The BlueMod+S/Central receives Terminal I/O data from the peripheral device supporting Terminal I/O service and sends the data content “ABCDEFGHIJKLMN<cr>” in the MUX channel “0x10” to the serial interface.

3.2.3.4. Create GATT Connection

To establish a GATT connection to a peripheral device it is required to initiate a call request to the unique Bluetooth address.

cc ff 18 41 54 44 30 30 38 30 32 35 30 30 31 32 34 36 2c 74 32 2c 47 41 54 54 0d ATD008025001246,t2,GATT	
	cc ff 0e 0d 0a 43 4f 4e 4e 45 43 54 20 47 41 54 54 cc ff 05 20 30 78 31 31 cc ff 02 20 3c cc ff 0c 30 30 38 30 32 35 30 30 31 32 34 36 cc ff 05 20 30 78 30 32 cc ff 01 3e cc ff 02 0d 0a CONNECT GATT 0x11 <008025001246 0x02>

The BlueMod+S/Central reports the created GATT connection with the result message „CONNECT“ include the connection type „GATT“ and a connection handle “0x10”.

This connection handle is not set to a fixed value and will be different for each connection.

The given connection handle is required for further activities onto this peripheral device.

Further information about this outgoing GATT connection like service discovery, characteristic discovery, read or write data is described in the MUX Mode in chapter 3.2.1.

3.2.3.5. Accept Incoming Terminal I/O Server Connection

During the active Terminal I/O client connection it is possible to handle one Terminal I/O server connection as peripheral role in parallel.

The following example lists the serial communication of an incoming Terminal I/O server connection (i.e. from a mobile phone).



	<pre>cc ff 06 0d 0a 52 49 4e 47 cc ff 02 0d 0a RING cc ff 0d 0d 0a 43 4f 4e 4e 45 43 54 20 54 49 4f cc ff 05 20 30 78 30 31 cc ff 02 0d 0a CONNECT TIO 0x01</pre>
--	--

The BlueMod+S/Central reports an incoming Terminal I/O server connection with the result message „CONNECT“ include the connection type „TIO“ and a connection handle “0x01”.

The given connection handle is required for further activities onto this Terminal I/O server connection.

3.2.3.6. Exchange Data on the Terminal I/O Server Connection

To transfer data between the BlueMod+S/Central and the Terminal I/O client device the data content needs to be sent on the given connection handle as MUX channel ID.

<pre>cc 01 0A 30 31 32 33 34 35 36 37 38 39 0123456789</pre>	<pre>cc 01 11 41 42 43 44 45 46 47 48 49 4a 4b 4c 4d 4E 4F 50 0D ABCDEFGHIJKLMN<cr></pre>
--	---

The BlueMod+S/Central receives serial data “0123456789” on the MUX channel “0x01” and transfers these data bytes as Terminal I/O data to the Terminal I/O client device.

The BlueMod+S/Central receives data from the Terminal I/O client side and sends the data content “ABCDEFGHIJKLMN<cr>” in the MUX channel “0x01” to the serial interface.

3.2.3.7. Close Terminal I/O Server Connection

To disconnect the Terminal I/O server connection (i.e. from a mobile phone) the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 30 31 0d ATH=0x01</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 30 31 NO CARRIER 0x01</pre>
---	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote client side disconnects the Terminal I/O connection.

3.2.3.8. Close GATT Client Connection

To disconnect the GATT client connection to a peripheral device the BlueMod+S/Central close the connection with the use of the connection handle.

<pre>cc ff 09 41 54 48 3d 30 78 31 31 0d ATH=0x11</pre>	<pre>cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 31 31 NO CARRIER 0x11</pre>
---	---



The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote peripheral device disconnects the GATT connection.

3.2.3.9. **Close Terminal I/O Client Connection**

To disconnect the Terminal I/O client connection from a peripheral device supporting the Terminal I/O service the BlueMod+S/Central close the connection with the use of the connection handle.

cc ff 09 41 54 48 3d 30 78 31 30 0d <i>ATH=0x10</i>	cc ff 0c 0d 0a 4e 4f 20 43 41 52 52 49 45 52 cc ff 05 20 30 78 31 30 <i>NO CARRIER 0x10</i>
--	---

The response of the disconnect request “ATH” is the event “NO CARRIER” followed by disconnected connection handle.

The same event is reported when the remote client side disconnects the Terminal I/O connection.



4. Startup Timing


The start-up time until the BlueMod+S/Central is able to accept link requests or serial data depends on:

- the firmware version
- the source for the slow clock
- the usage of the UART Interface Control Protocol (UICP)

For more details about the UICP protocol please refer to the document *UICP+ UART Interface Control Protocol*.

4.1. Firmware Version 2.104

The following diagram shows the startup timing of the BlueMod+S/Central based on firmware version 2.104 with external 32,768 kHz crystal signal and UICP deactivated.

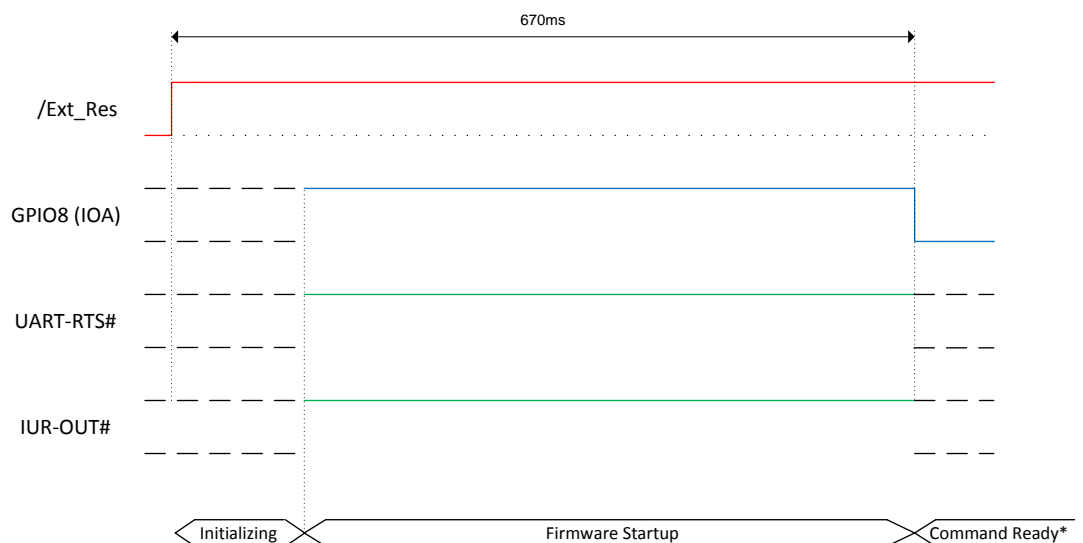

(*) The firmware is command ready ~700ms after the reset has been released and when GPIO8 (IOA) is low.

After GPIO8 gets low the state of the /RTS and /IUR-OUT lines depends on the UICP parameter. When UICP is disabled (AT+UICP=0) both output lines get low, otherwise the UICP function will be started.

For more details about the UICP protocol please refer to the document *UICP+ UART Interface Control Protocol*.



5. Security

This chapter describes the security mechanisms of the BlueMod+S/Central to control the access to the local Bluetooth devices characteristics. The pairing process is triggered automatically when an access to a characteristic is requested that requires security.

5.1. Pairable and Bondable Mode

In general we distinguish between pairing and bond. Pairing is the active process to generate a set of encryption keys. The pairing can be done with or without user interaction depending of the I/O capabilities. The pairing will result in a bond if the generated data is stored in the bonded device list (AT+BNDLIST).

AT+BPAIRMODE controls if a pairing is performed or not.

Value	Description
0	No pairing (pairing request will be refused)
1	Pairing

AT+BNDS controls the storing of the pairing information as bond.

Value	Description
0	No storing (no bond)
1	Storing (entry in the bonded device list)

The bonded device list is affected by the following commands:

- AT+BNDLIST shows the devices stored in the bonded device list
- AT+BNDSIZE determines the size of the bonded device list and deletes the whole list when modifying the size
- AT+BNDDEL deletes single entries or the whole list
- AT&F1 deletes the bonded device list

If the bonded device list is full and another device is bonded, the least recently used device will be overwritten by the new one. If bonds are not required please set AT+BNDS=0.

5.2. Security Levels for Terminal I/O

The behavior of LE Security is configurable using the parameters for I/O capabilities (AT+BIOCAP) and a man in the middle protection (AT+BMITM).

The security level of Terminal I/O is configurable using the parameter AT+LETIO.



Value	Description
0	Terminal I/O service disabled (no advertising, no characteristics)
1	Terminal I/O service enabled, security is required
2	Terminal I/O service enabled, no security required
3 ^{*)}	Terminal I/O service enabled, authenticated pairing with encryption (MITM required)

^{*)} Supported since firmware version 3.004

AT+BIOCAP sets the input and output capabilities of the device used for LE Security.

Value	Description
0	Display only
1	Display Yes/No
2	Keyboard only
3	No input no output (default)
4	Display and keyboard

AT+BMITM controls the man in the middle (MITM) protection of the device during LE Security.

Value	Description
0	Man in the middle protection disabled (default)
1	Man in the middle protection enabled

LE Security defines the following association models based on the Input/Output (I/O) capabilities of the two devices:

- **Just Works:**

This method is used when at least one of the devices does not have display capability of six digits and also is not capable of entering six decimal digits using a keyboard or any other means (no I/O).

This method does not provide MITM protection (see 5.3 Connection Example Terminal I/O “Just Works”).

- **Passkey Entry:**

This method may be used between a device with a display and a device with numeric keypad entry (such as a keyboard), or two devices with numeric keypad entry (see 5.4 Connection Example Terminal I/O “Passkey Entry”).

In the first case, the display is used to show a six digit numeric code to the user, who then enters the code on the keypad.

In the second case, the user of each device enters the same six digit numeric code. Both cases provide MITM protection.



Possible combinations of I/O capabilities and the possibility of MITM protection are listed in the table below. For each case of the “MITM protection” an example of the serial messages between the BlueMod+S/Central and the DTE are listed.

In case the user choose a scenario where MITM protection is not allowed but one of the communication devices is configured to MITM protection, the pairing is refused.



BlueMod+S/Central Software User Guide
1VV0301279 Rev. 03 – 2016-11-18

Remote device BM+S/Central	Display only	Display Yes/No	Keyboard only	No input no output	Display and keyboard
Display only AT+BIOCAP=0	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> <passkey>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> <passkey>
Display Yes/No AT+BIOCAP=1	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> <passkey>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> <passkey>
Keyboard only AT+BIOCAP=2	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>	Passkey entry (both input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>
No input no output AT+BIOCAP=3	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Just Works (both automatic confirmation) <i>No MITM protection</i>
Display and keyboard AT+BIOCAP=4	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey>	Passkey entry (one display, one input) <i>MITM protection</i> SSPPIN <BT addr> <passkey>	Just Works (both automatic confirmation) <i>No MITM protection</i>	Passkey entry (one display, one input) <i>MITM protection</i> incoming connection: SSPPIN <BT addr> ? AT+BSSPPIN <BT addr>,<passkey> outgoing connection: SSPPIN <BT addr> <passkey>

Green color: BM+S/Central output message

Blue color: BM+S/Central input request

SSPPIN <BT addr> ? (example)

AT+BSSPPIN <BT addr> <passkey> (example)



The following flow charts will give an example for the different SSP authentication methods “just works” and “passkey entry” within an incoming call request from an iPhone (or other compatible iOS device) using Telit’s Terminal I/O Utility app to the BlueMod+S/Central (see also the connection example in chapter 0).

The “*Target Application*” part will simulate the device at the end (DTE) which communicates to the BlueMod+S/Central with configuration commands.


The interesting part of the bonding procedure is placed between the yellow boxes “*Start of bonding procedure*” and “*End of bonding procedure*”.

All serial commands between the “*Target Application*” and the “*BlueMod+S/Central*” out of the bonding procedure are used for further configuration of LE Security.


The configuration commands and responses within the flow charts are described in the *BlueMod+S/Central AT Command Reference*.



5.3. Connection Example Terminal I/O “Just Works”

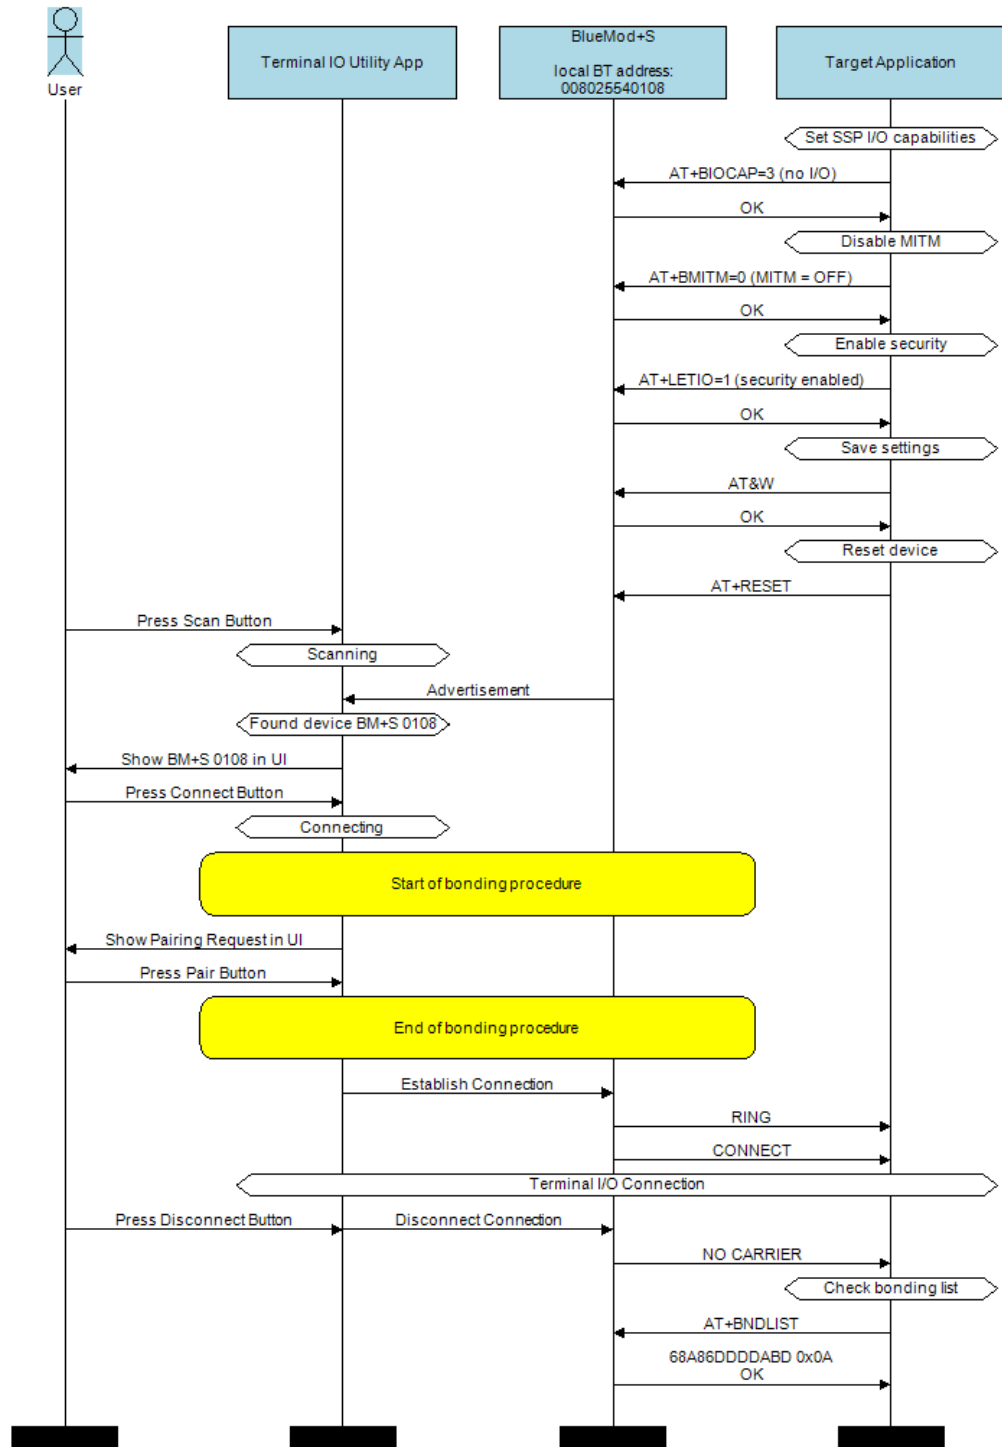

5.4. Connection Example Terminal I/O “Passkey Entry” with I/O capabilities “display only”

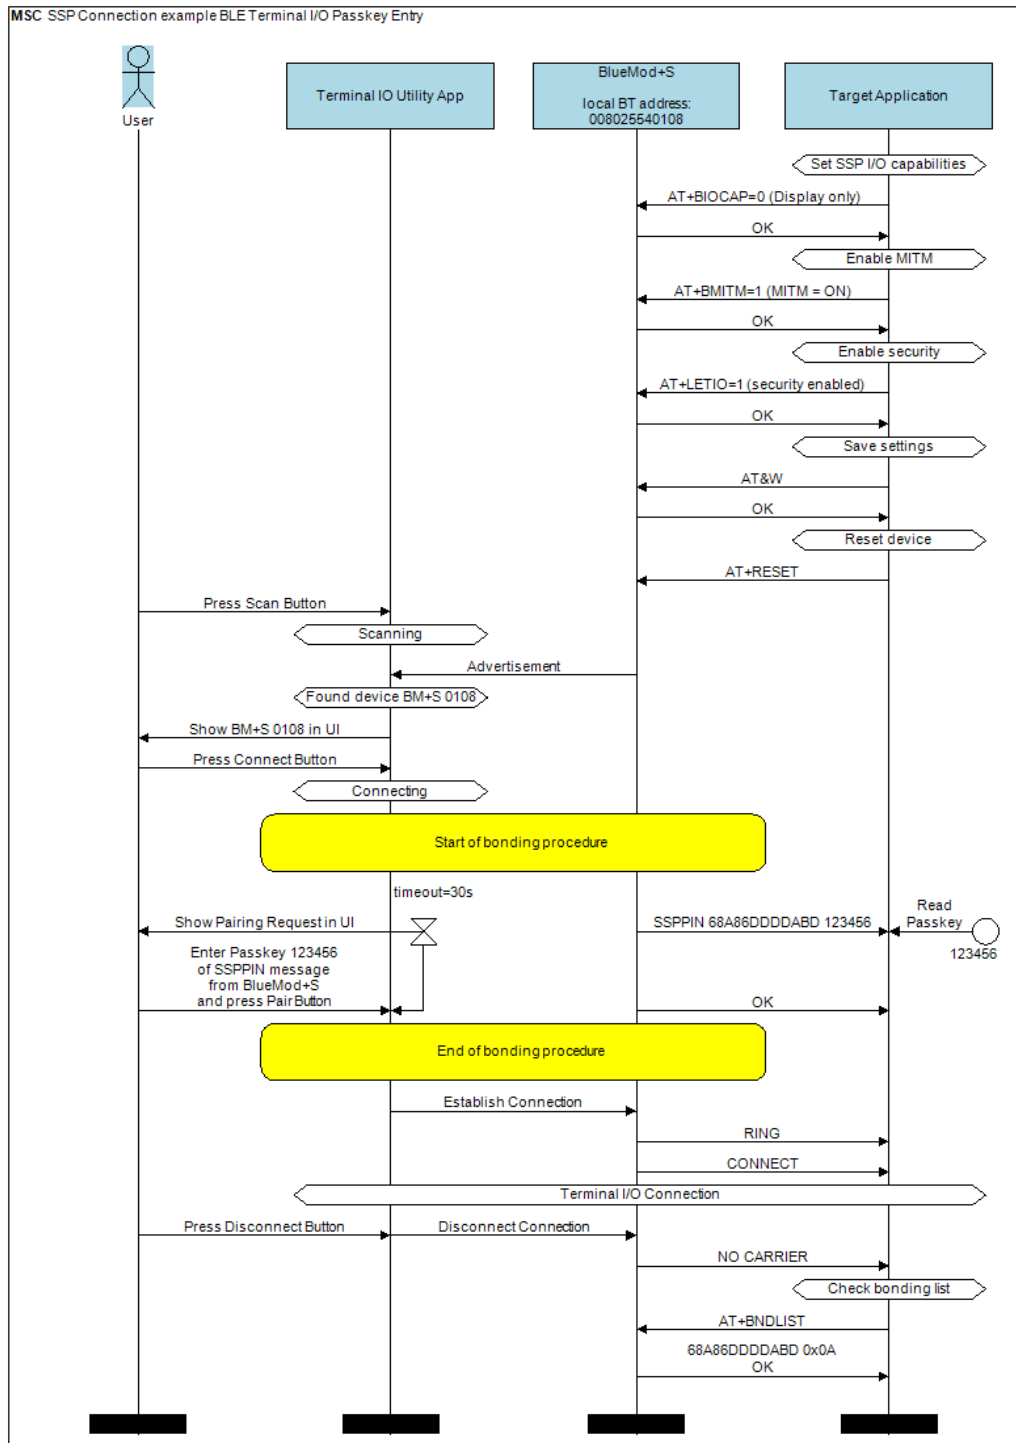

6. UART Interface Control Protocol (UICP)

6.1. General Protocol Description

Telit UART Interface Control Protocol (UICP) defines a protocol to control the logical state of an UART based interface, thereby peers to switch off local UART devices for power saving (or other) reasons.

The UICP+ is a bi-directional, symmetrical protocol that allows to negotiate UART interface states with a communication partner connected via UART by the use of standard UART signal lines.

The UICP+ mechanisms defined here enable the involved peers to negotiate UART interface states by signaling the remote peer that it is allowed to enter or exit an UART interface up state.

The UICP+ does not enforce any power saving support of the involved peers but implements mechanisms to allow the save usage of MCU power saving features like UART peripheral switched off.


6.2. Requirements of Using UICP on BlueMod+S/Central

To make use of UICP, the lines UART-TXD, UART-RXD, UART-RTS# (IUC-OUT#), UART-CTS# (IUC-IN#), IUR-OUT# and IUR-IN# should be connected between BlueMod+S/Central and the host and additionally the UICP protocol should be implemented on host site.

A detailed description of implementing UICP is described in the document *UICP+ UART Interface Control Protocol*.

To activate UICP on the BlueMod+S/Central the configuration parameter AT+UICP=1 needs to be set (followed by AT&W and AT+RESET).

6.3. Connection Example between BlueMod+S/Central and Host Controller

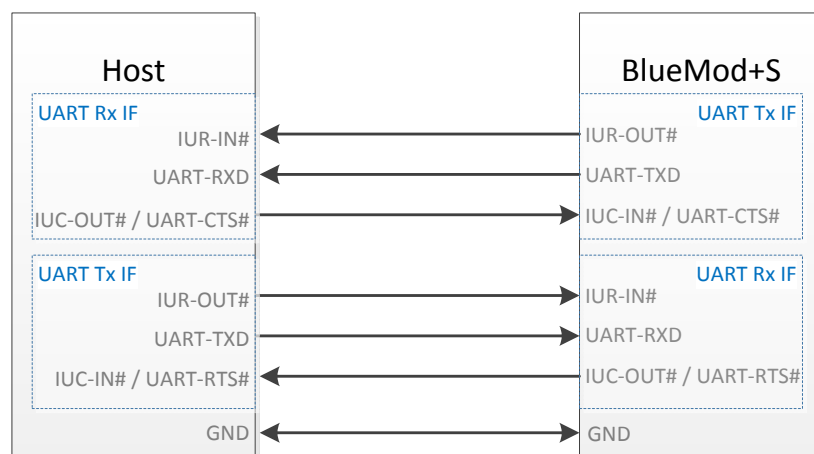


Further information about the BlueMod+S/Central UART interface is described in the document *BlueMod+S/Central Hardware User Guide*.



6.4. UICP Protocol States

The UICP protocol defines four states:

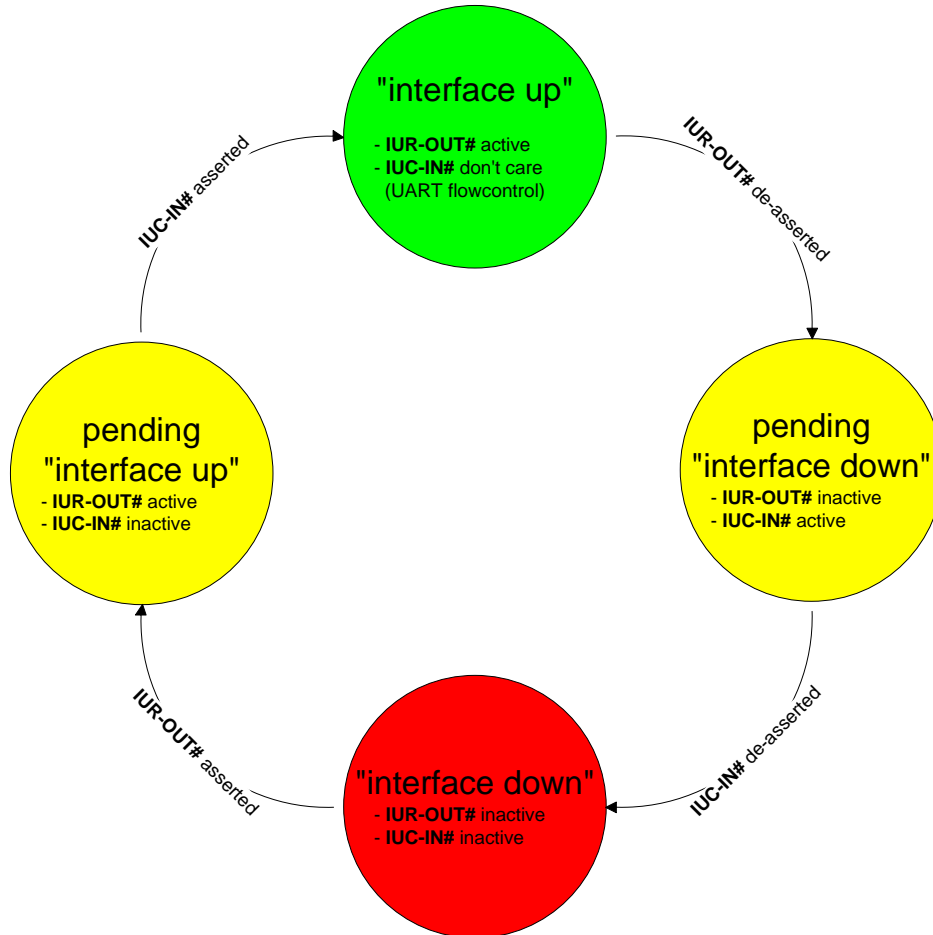

- **interface up**
normal operation, RTS/CTS hardware flow control is active
- **pending interface down**
IUR-OUT# is requested to go to "interface down" state
IUC-IN# is not confirmed
- **interface down**
IUR-OUT# and IUC-IN# are de-asserted in "interface down" state
and can enable MCU power saving
- **pending interface up**
IUR-OUT# is requested to go to "interface up" state,
IUC-IN# is not confirmed



All data received before the interface up state has been achieved shall be seen as invalid data and shall be discarded.




6.4.1. Drive from "interface up" to "interface down" State

Once a de-asserted IUR-OUT# signal of the initiator is detected by the acceptor, the acceptor shall confirm that signal by de-asserting its IUC-OUT# signal which is connected to the IUC-IN# signal of the initiator.

After the initiator detects a de-asserted IUC-IN# signal both devices go into "interface down" state and can enable MCU power saving mechanisms.

During MCU power saving, the MCU can switch off the UART but shall be able to detect an IUR# assert.

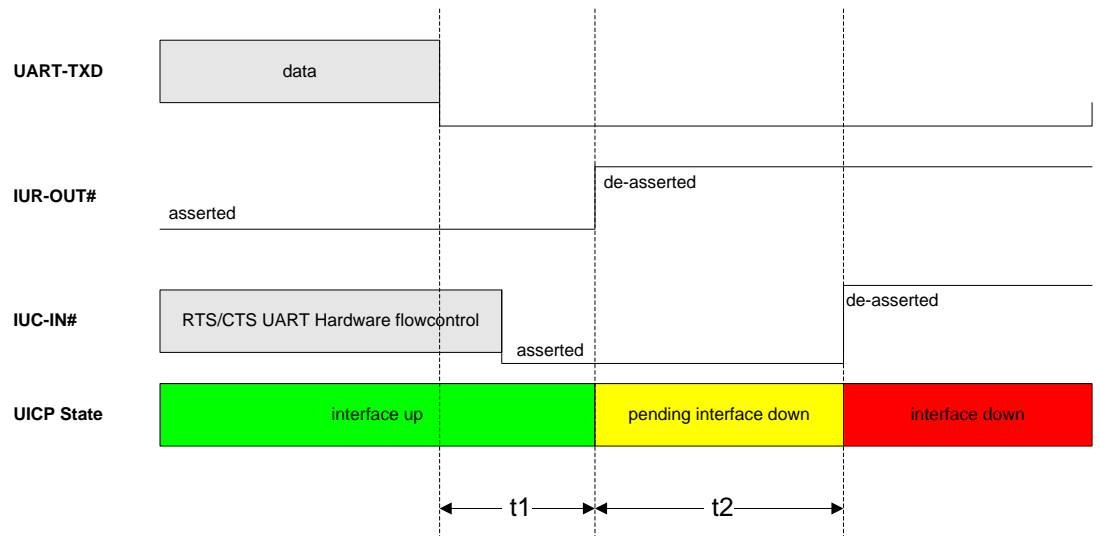

$t_1 \geq 100\text{ms}$ (see this chapter)

$t_2 < 1\text{s}$




6.4.2. Drive from "interface down" to "interface up" State

To initiate the state change from "interface down" state to "interface up" state the initiator shall assert the IUR-OUT# signal.

The acceptor confirms the IUR-IN# signal with asserting its IUC-OUT# signal which is connected to the IUC-IN# signal of the initiator.

Once the acceptor detects the assert of the IUR-OUT# signal from the initiator, it can disable MCU power saving mechanisms but shall ensure the UART is ready to receive data before it confirms asserting its IUC-OUT# signal which is connected to the IUC-IN# signal of the initiator.

Once the initiator detects the assert of the IUC-IN# signal of the acceptor, the in initiator can send data to the acceptor.

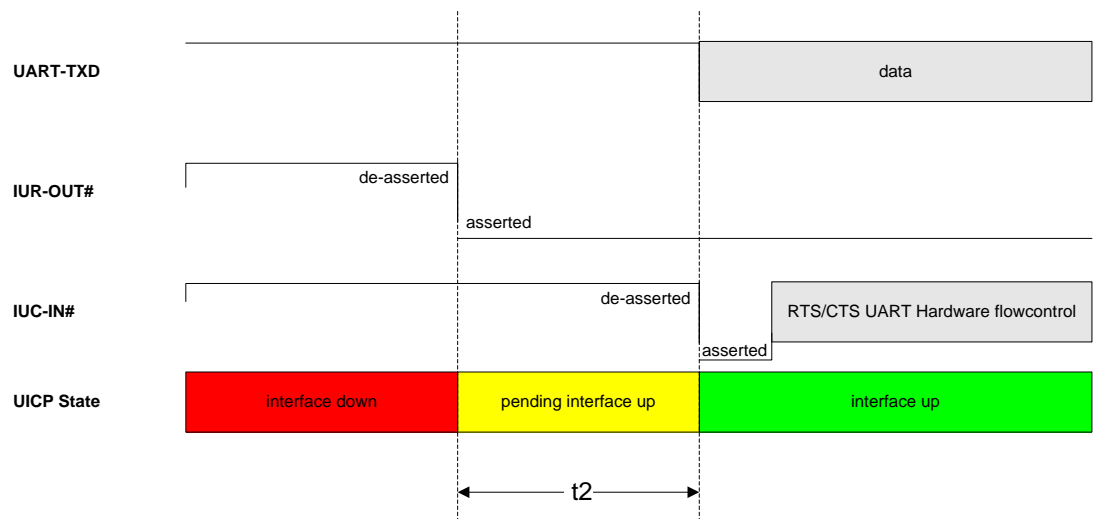

6.5. Example of UICP Usage

The following examples show the state change between the BlueMod+S/Central and the host.

The scenario here might be that both devices use the "interface down" state to drive the MCU into some kind of power saving mode that allows to "wake up" the MCU with external GPIO signals.


6.5.1. State Change from "interface up" to "interface down"

Host and BlueMod+S/Central are in the state "interface up" and exchange bidirectional data. After the host has send all data and is idle for **t1** in its Tx direction it signals the BlueMod+S/Central that it is allowed to go to "interface down" state by de-asserting IUR-OUT# signal.

Parallel to that UICP signaling from host to BlueMod+S/Central the BlueMod+S/Central has send all data as well and is idle for **t1** in its Tx direction, so it signals the host that it is allowed to go to "interface down" state by de-asserting IUR-OUT# signal.

The host and the BlueMod+S/Central each wait for a maximum time **t2** to detect the de-asserted IUC-IN# signal. After receiving this input change via the IUC-IN# signal both devices may change from state "pending interface down" to state "interface down".

Both UICP signaling sequences proceed in parallel until host and BlueMod+S/Central interfaces are in "interface down" state.

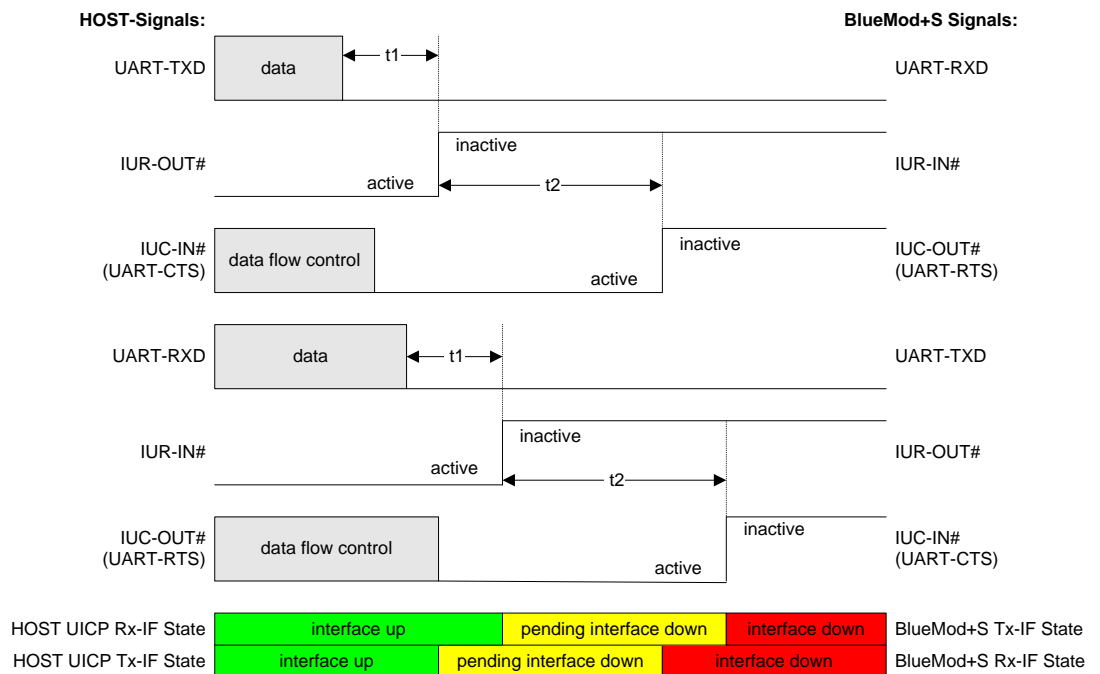

6.5.2. State Change from "interface down" to "interface up"


Host and BlueMod+S/Central are in the state "Interface down" and may have the MCU into some kind of power saving state.

The host wants to send data to the BlueMod+S/Central and asserts its IUR-OUT# signal.

Parallel to that UICP signaling from host to BlueMod+S/Central the BlueMod+S/Central wants to send data to the host and asserts its IUR-OUT# signal as well.

The host and the BlueMod+S/Central each wait for a maximum time t_2 to detect the assertion via the IUC-IN# signal. After receiving this input change of IUC-IN# both devices may assume that the interface of the remote device changed from state "pending interface up" to state "interface up".

Both UICP signaling sequences proceed in parallel until host and BlueMod+S/Central interfaces are in "interface up" state and data can be exchanged bidirectional.

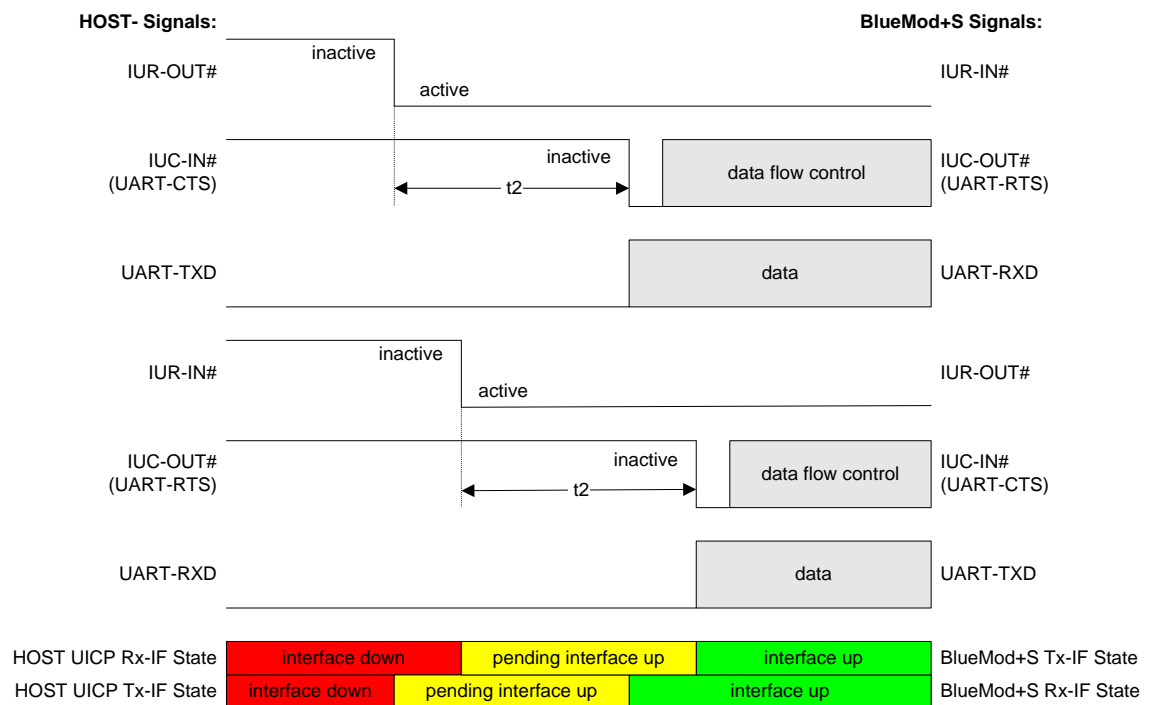

7. Firmware Upgrade

The firmware upgrade will be done locally by either

- A Telit provided firmware update tool. This is a Windows™ program that contains the firmware and uses a PC with a serial port for the update
- Implementing the firmware update protocol on the host system or over the air.

7.1. Serial Firmware Upgrade

7.1.1. Prerequisites for Serial Firmware Upgrade

You need to have access to the UART interface of the BlueMod+S/Central.

Serial firmware update requires at least the serial lines UART-RXD, UART-TXD, UART-CTS#, UART-RTS# and GND.

Serial firmware update requires a UART speed of 38400 bps.

Pin BOOT0 (E-1) shall be pulled high to access the bootloader at start-up.

7.1.2. Telit BlueMod+S Updater

The firmware upgrade will be done by a Telit provided firmware update tool. This is a Windows™ program that contains the firmware and uses a PC with a serial port for the update.

For example a firmware version V2.104 will result in the executable file “BM+S_Central_v2_104_FWupdate.exe”.

The software used for the upgrade is able to run on the following Win32/Win64 platforms:

- Windows XP
- Windows Vista
- Windows 7
- Windows 8




Testing was carried out on Windows 8 Pro, Windows 7 Ultimate and XP Professional platforms; however experience suggests that the described software runs on all XP platforms and all Windows 8 / 7 / Vista 32 and 64-bit platforms.



The program requires a PC with at least one free COM port.

The upload is processed via the serial port the device is attached to.

Before starting the update by pressing the “Update” button the device shall be reset.

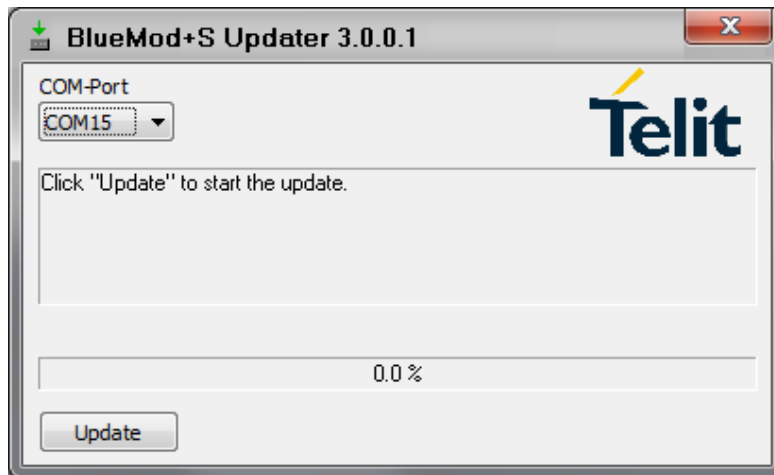

- COM-Port
The COM-Port the device is attached to
- Update
Starts the update procedure

After the successful update close the software, remove the high level on pin BOOT0 and reset the BlueMod+S/Central.



Do not disconnect the device while the update is in progress, otherwise the update will fail and has to be repeated. In case it is not possible to update the BlueMod+S/Central please contact the Telit support (e-mail: ts-srd@telit.com).



7.1.3. Firmware Update Protocol on the Host System

This chapter describes the protocol layer used for firmware update over serial on the BlueMod+S/Central.

The table below contains the maximum possible binary firmware sizes:


Firmware variant	Maximum possible binary firmware size
V2.104	84 kBytes
V3.004	128 kBytes



The actual size of each firmware binary file can be found in the firmware release notes.

7.1.3.1. Layer Structure

The device firmware update uses the HCI Three-Wire UART Transport Layer specified in *Bluetooth 4.0 Core Specification*. Instead of HCI frames, four different DFU packets are sent to the BlueMod+S/Central over the UART serial interface using this transport.

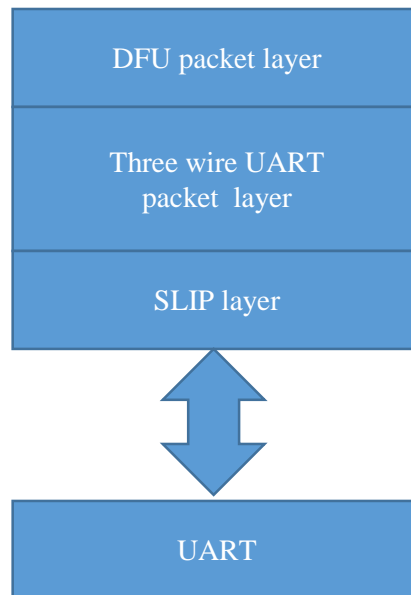

7.1.3.2. DFU Packet Layer

There are four different packet types in this layer. The packet type is an unsigned 32 bit integer in LSB first order.

- | | |
|----------------------------|------------|
| 1. Start packet | 0x00000003 |
| 2. Init packet | 0x00000001 |
| 3. Application data packet | 0x00000004 |
| 4. Stop packet | 0x00000005 |



Start packet

With the “Start packet” the DFU bootloader is informed about the kind of update and the length of the binary image. The length of the image is an unsigned 32 bit integer in LSB first order. It is length of the file with the “.bin” extension in the Telit delivery package (zip file). For a binary application with image size of 17,336 bytes (0x000043B8), the packet is coded as:

Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
0x03	0x00	0x00	0x00	0x04	0x00	0x00	0x00

Byte9	Byte10	Byte11	Byte12	Byte13	Byte14	Byte15	Byte16
0x00	0x00	0x00	0x00	0x00	0x00	0x00	0x00

Byte17	Byte18	Byte19	Byte20
0xB8	0x43	0x00	0x00

Init packet

The init packet contains information about the application that is transferred. The DFU bootloader checks this information to determine if the image is valid for the device. Please use as contents only the init packet provided by Telit. The data starting with “Device type” and ending with “CRC of the image that will be transferred” (see the Nordic documentation) is provided by Telit in the Telit delivery package (zip file). It is the contents of the file with the extension “.dat”. The binary application to load with the data packets is the file with the “.bin” extension.

The init packet is coded as:

Byte1	Byte2	Byte3	Byte4	Byte5 up to Byte n	Byte n+1	Byte n+2
0x01	0x00	0x00	0x00	Contents of the “.dat” file. The length is variable.	0x00	0x00

Required waiting

After accepting the init packet the bootloader prepares (erases) the internal flash memory to accommodate the new image. The bootloader accepts no data packets during this time. Please wait 10 seconds before sending the first data packet.

Application data packet

With the Application data packet the binary application image is transferred to the BlueMod+S/Central. The binary application to load with the data packets is the file with the “.bin” extension in the Telit delivery package (zip file). The maximum packet size is 512 bytes of data + header per packet. Each packet is coded:

Byte1	Byte2	Byte3	Byte4	Byte 5 ... up to Byte 516
0x04	0x00	0x00	0x00	Max 512 bytes of binary application data



Stop packet

When the Application image has been transferred to the BlueMod+S/Central boot loader the image must be activated. The stop packet will inform the boot loader that transferring of the image has completed and the application can be started. The packet is coded as:

Byte1	Byte2	Byte3	Byte4
0x05	0x00	0x00	0x00

7.1.3.3. Three Wire UART Packet Layer

Every packet that is sent over the Three-Wire UART Transport Layer has a packet header. It also has 16 bit CCITT-CRC at the end of the payload.

Each transport packet will contain one higher layer packet. A transport packet consists of a Packet Header of 4 octets, a payload of 4 to 516 octets, and a 16 bit CCITT-CRC.

The Packet header consists of a Sequence Number of 3 bits, an Acknowledge Number of 3 bits, a Data Integrity Check Present bit, a Reliable Packet bit, a Packet Type of 4 bits, a Payload Length of 12 bits and a 8 bit Header Checksum.

The used Packet Type is vendor specific (0xe).

LSB		MSB
4 Octets	1.. 156 Octets	2 Octets
Packet Header	DFU packet layer	16 bit CCITT-CRC

The detailed format description of the used packet header can be found in *Bluetooth 4.0 Core Specification*.

For a detailed description of the procedural requirements of this protocol have a look in the *Bluetooth 4.0 Core Specification*, chapter “Three-Wire UART Transport Layer”.

7.1.3.4. SLIP Layer

The SLIP layer performs octet stuffing on the octets entering the layer so that specific octet codes which may occur in the original data do not occur in the resultant stream.

The SLIP layer places octet 0xC0 at the start and end of every packet it transmits.

Any occurrence of 0xC0 in the original packet is changed to the sequence 0xDB 0xDC before being transmitted. Any occurrence of 0xDB in the original packet is changed to the sequence 0xDB 0xDD before being transmitted. These sequences, 0xDB 0xDC and 0xDB 0xDD are SLIP escape sequences.

For a detailed description of this protocol have a look in the *Bluetooth 4.0 Core Specification*, chapter “Three-Wire UART Transport Layer”.



7.2. Firmware Update over The Air (OTA)

The BlueMod+S/Central supports firmware over the air update. The firmware update over the air can be performed by using the Nordic nRF ToolBox app available for iOS and Android or by using the Nordic Master Control Panel and the corresponding Nordic Bluetooth hardware.

The firmware over the air update in the BlueMod+S/Central will be enabled with the commands below:

1. AT+DFUMODE=2
2. AT+DFUSTART

After sending the AT+DFUSTART command the BlueMod+S/Central is visible in the air as “BM+S_DFU” (name configured with command AT+DFUNAME) for a time period of 2 minutes. If no firmware update is performed during this time the BlueMod+S/Central will continue with normal operation.


The following chapter describes the firmware over the air update by using the Nordic nRF Toolbox app on Android.




7.2.1. Firmware Update Over The Air using Nordic nRF Toolbox on Android

Make sure the BlueMod+S/Central has already activated the firmware over the air update.


Open the nRF ToolBox app on the smartphone and choose “DFU”.

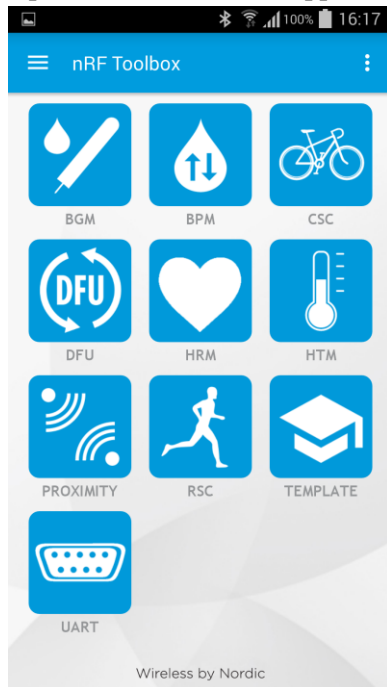


Press the button “SELECT FILE”.

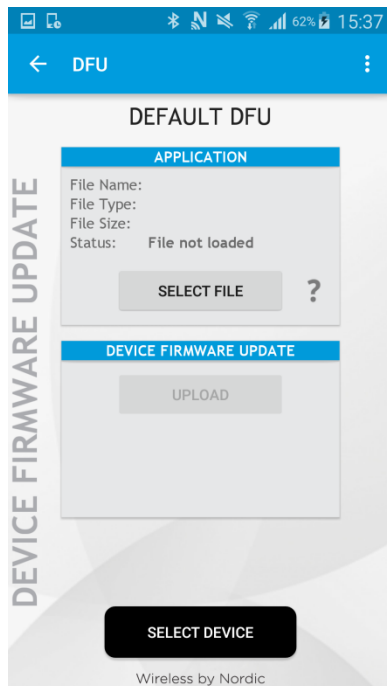


Select file type “Distribution packet (ZIP)”.

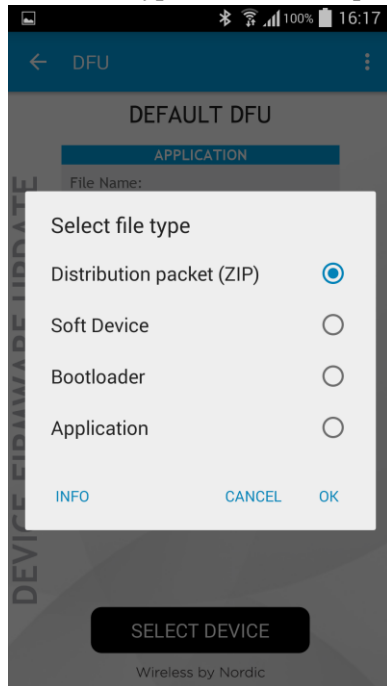


Search via file manager for the firmware package which was previously copied to the smartphone (e.g “SBS1304_V2_104.zip” in the example below).

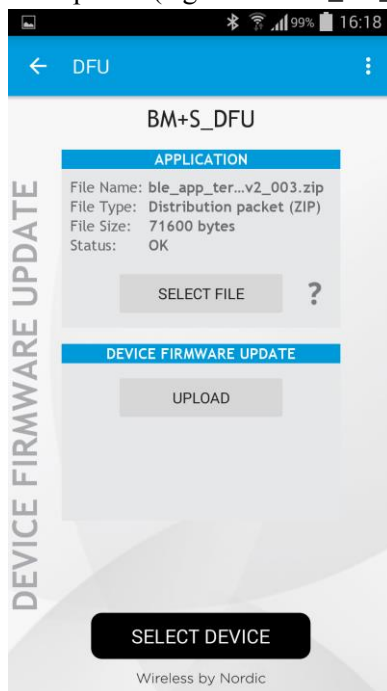

Press the button “SELECT DEVICE” and select the “BM+S_DFU” from the list of available devices.

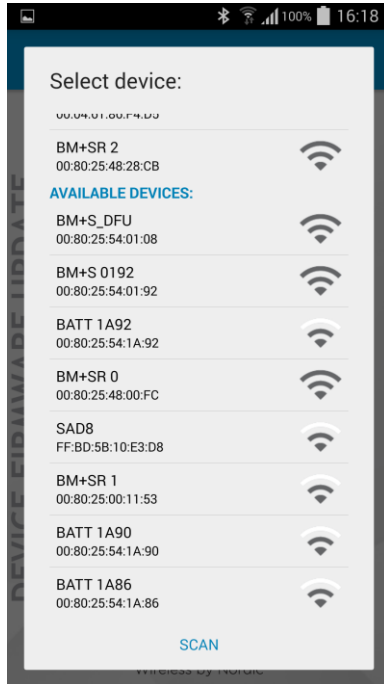

Press the “UPLOAD” button to upload the firmware package over the air to the BlueMod+S/Central.

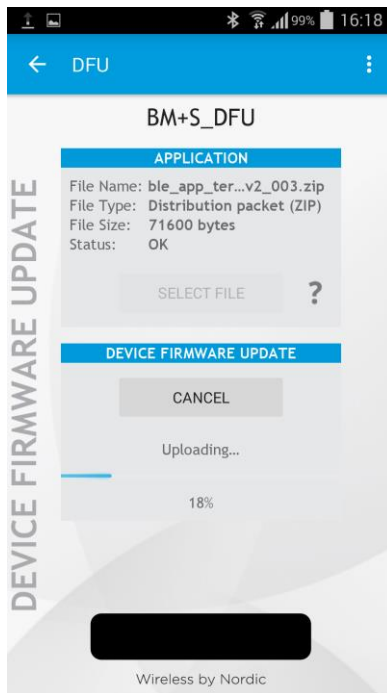

After the file was uploaded successfully the BlueMod+S/Central will start with the new firmware.



8. System OFF Mode

The BlueMod+S/Central supports the possibility to set the module into low power mode during the time the module is not used with the AT+SYSTEMOFF command.

The BlueMod+S/Central will restart on activity at the GPIO input lines UART-RTS#, IUR-IN# or GPIO[4].

The host controller can use the IOA pin (GPIO[8]) to monitor the system status. Please also verify the configuration of the AT+IOACFG parameter.

It is also possible to monitor the UART flow control line UART-RTS#.

8.1. Using System OFF Mode for Terminal I/O

The following example will list the communication between the host controller and the BlueMod+S/Central using the integrated Terminal I/O profile.

To set the BlueMod+S/Central into the low power mode the host controller needs to send the AT+SYSTEMOFF command.

The BlueMod+S/Central will respond “OK” before changing into low power mode.


To activate the BlueMod+S/Central from low power mode the host controller needs to activate one of the following GPIO lines: UART-RTS#, IUR-IN#, GPIO[4]

The module detects the GPIO change and starts the firmware.

After the firmware is started the host can continue the UART communication.

An incoming call is reported with RING and CONNECT.



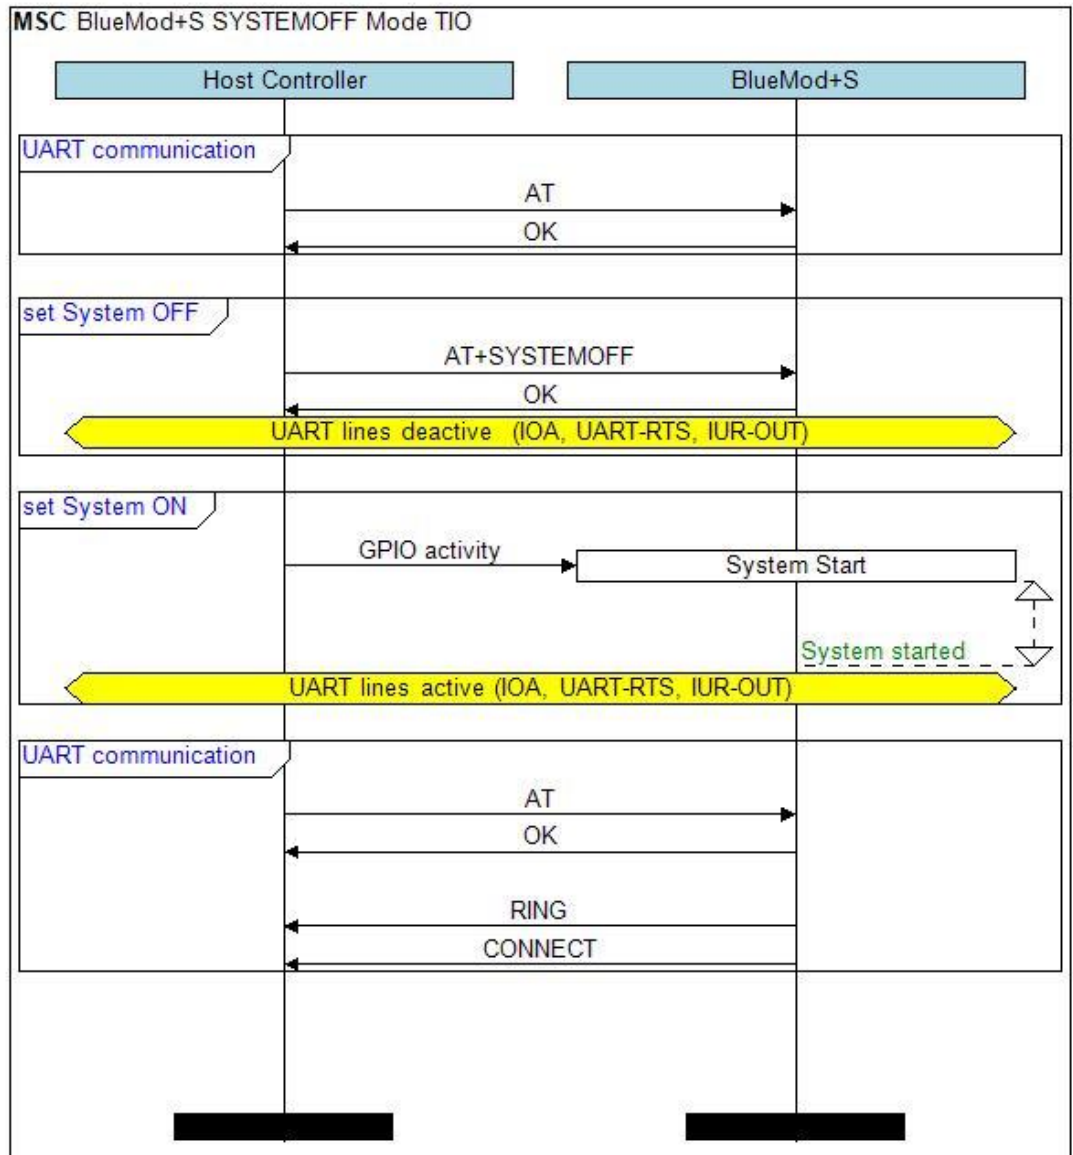

9. LE Connection Parameters

This chapter describes the kind of creating a BLE connection from the central device to the peripheral device include the usage of the LE connection parameters.

9.1. Create a Bluetooth Low Energy Connection

In a typical Bluetooth Low Energy system, the peripheral device advertises with specific data letting any central device know that it is a connectable device. This advertisement contains the device address, and can contain some additional data as well, such as the device name. The central device, upon receiving the advertisement, sends a “scan request” to the peripheral. The peripheral responds with a “scan response”. This is the process of device discovery, in that the central device is now aware of the peripheral device, and knows that it can form a connection with it. The central device can then send out a request to establish a link with the peripheral device. A connection request contains a few connection parameters:

- **Connection Interval**

In a BLE connection between two devices, a frequency-hopping scheme is used, in that the two devices each send and receive data from one another on a specific channel, then “meet” at a new channel (the link layer of the BLE stack handles the channel switching) at a specific amount of time later. This “meeting” where the two devices send and receive data is known as a “connection event”. Even if there is no application data to be sent or received, the two devices will still exchange link layer data to maintain the connection. The connection interval is the amount of time between two connection events, in units of 1.25ms. The connection interval can range from a minimum value of 6 (7.5ms) to a maximum of 3200 (4.0s).

The BlueMod+S/Central uses the configuration command AT+LECONINTMIN and AT+LECONINTMAX to set these predefined values of the connection interval.

- **Slave Latency**

This parameter gives the slave (peripheral) device the option of skipping a number of connection events. This gives the peripheral device some flexibility, in that if it does not have any data to send it can choose to skip connection events and stay asleep, thus providing some power savings. The decision is up to the peripheral device.

The slave latency value represents the maximum number of events that can be skipped. It can range from a minimum value of 0 (meaning that no connection events can be skipped) to a maximum of 499; however the maximum value must not make the effective connection interval (see below) greater than 32.0s.

The BlueMod+S/Central uses the configuration command AT+LESLAVELAT to set the predefined slave latency timeout value.



9.3. Identify the Required Connection Interval

Different applications may require different connection intervals. The advantage of having a very long connection interval is that significant power is saved, since the device can sleep most of the time between connection events. The disadvantage is that if a device has data that it needs to send, it must wait until the next connection event.

The advantage of having a very short connection interval is that there is more opportunity for data to be sent or received, as the two devices will connect more frequently. The disadvantage is that more power will be consumed, since the device is frequently waking up for connection events.

In many applications, the slave will skip the maximum number of connection events. Therefore it is useful to consider the effective connection interval when selecting the connection parameters. Selecting the correct group of connection parameters plays an important role in power optimization of the BLE device. The following list gives a general summary of the trade-offs in connection parameter settings:

Reducing the connection interval will:

- Increase the power consumption for both devices
- Increase the throughput in both directions
- Reduce the amount of time that it takes for data to be sent in either direction

Increasing the connection interval will:

- Reduce the power consumption for both devices
- Reduce the throughput in both directions
- Increase the amount of time that it takes for data to be sent in either direction

Reducing the slave latency (or setting it to zero) will:

- Increase the power consumption for the peripheral device
- Reduce the amount of time that it takes for data sent from the central device to be received by the peripheral device

Increasing the slave latency will:

- Reduce power consumption for the peripheral during periods when the peripheral has no data to send to the central device
- Increase the amount of time that it takes for data sent from the central device to be received by the peripheral device



9.4. Update the Connection Parameters

In some cases, the central device will request a connection with a peripheral device containing connection parameters that are unfavorable to the peripheral device. In other cases, a peripheral device might have the desire to change parameters in the middle of a connection, based on the peripheral application. The peripheral device can request the central device to change the connection settings by sending a “Connection Parameter Update Request”.

This request contains four parameters:

- minimum connection interval
- maximum connection interval
- slave latency
- timeout

These values represent the parameters that the peripheral device desires for the connection (the connection interval is given as a range). When the central device receives this request, it has the option of accepting or rejecting the new parameters.

The BlueMod+S/Central uses the configuration command AT+LECONPARAM to initiate the “Connection Parameter Update Request” message or report the current connection parameter set.

Changing the connection parameter set using the AT+LECONPARAM command effects in the current connection only. After disconnecting the GATT connection the BlueMod+S/Central uses the configured connection parameters (AT+LECONINTMIN, AT+LECONINTMAX, AT+SLAVELAT, and the calculated connection timeout) for further connections.

To automatically signal a “Connection Parameter Update Request” the BlueMod+S/Central uses the command “AT+LECPEVENT=1” that enables the reporting of connection parameter set changes to the local serial interface.


The BlueMod+S/Central accepts all valid “Connection Parameter Update Requests” values of a peripheral device in order to save power consumption for the peripheral device.

9.5. Connection Examples of Different Use Cases


The following examples will demonstrate Bluetooth LE GATT connections between different devices to demonstrate the initial connection parameter set and the possibility to monitor or change these connection parameter set.




9.5.1. Central Side Initiates a GATT Connection

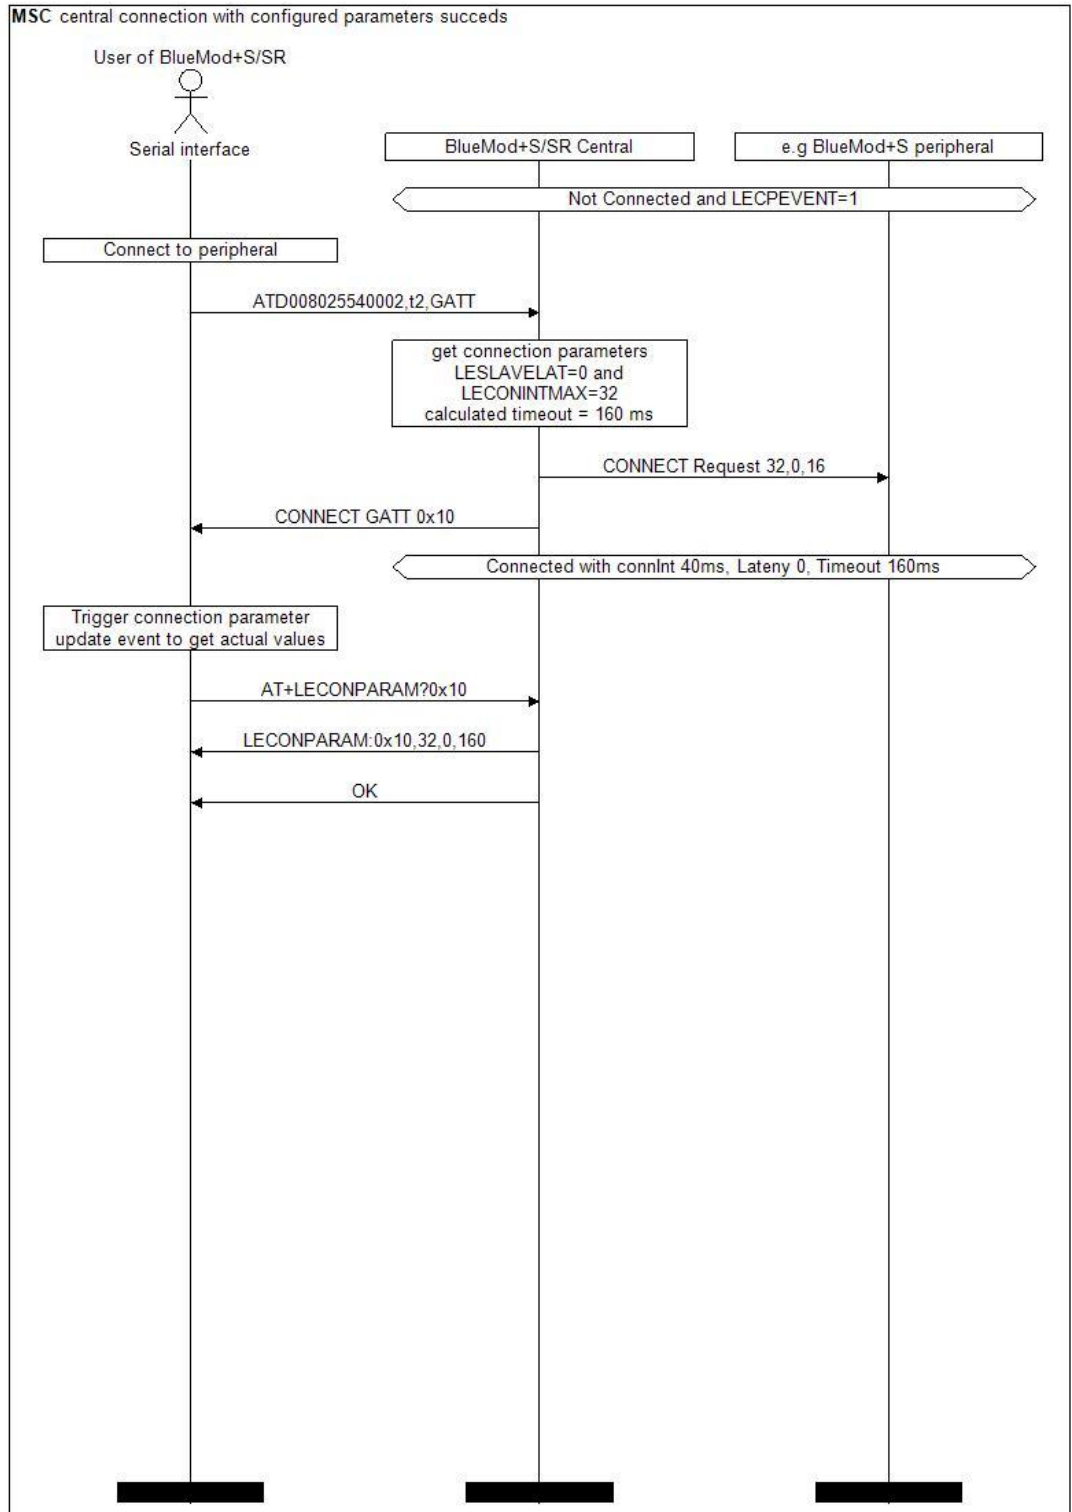

9.5.2. Central Side Changed Initial Connection Parameter

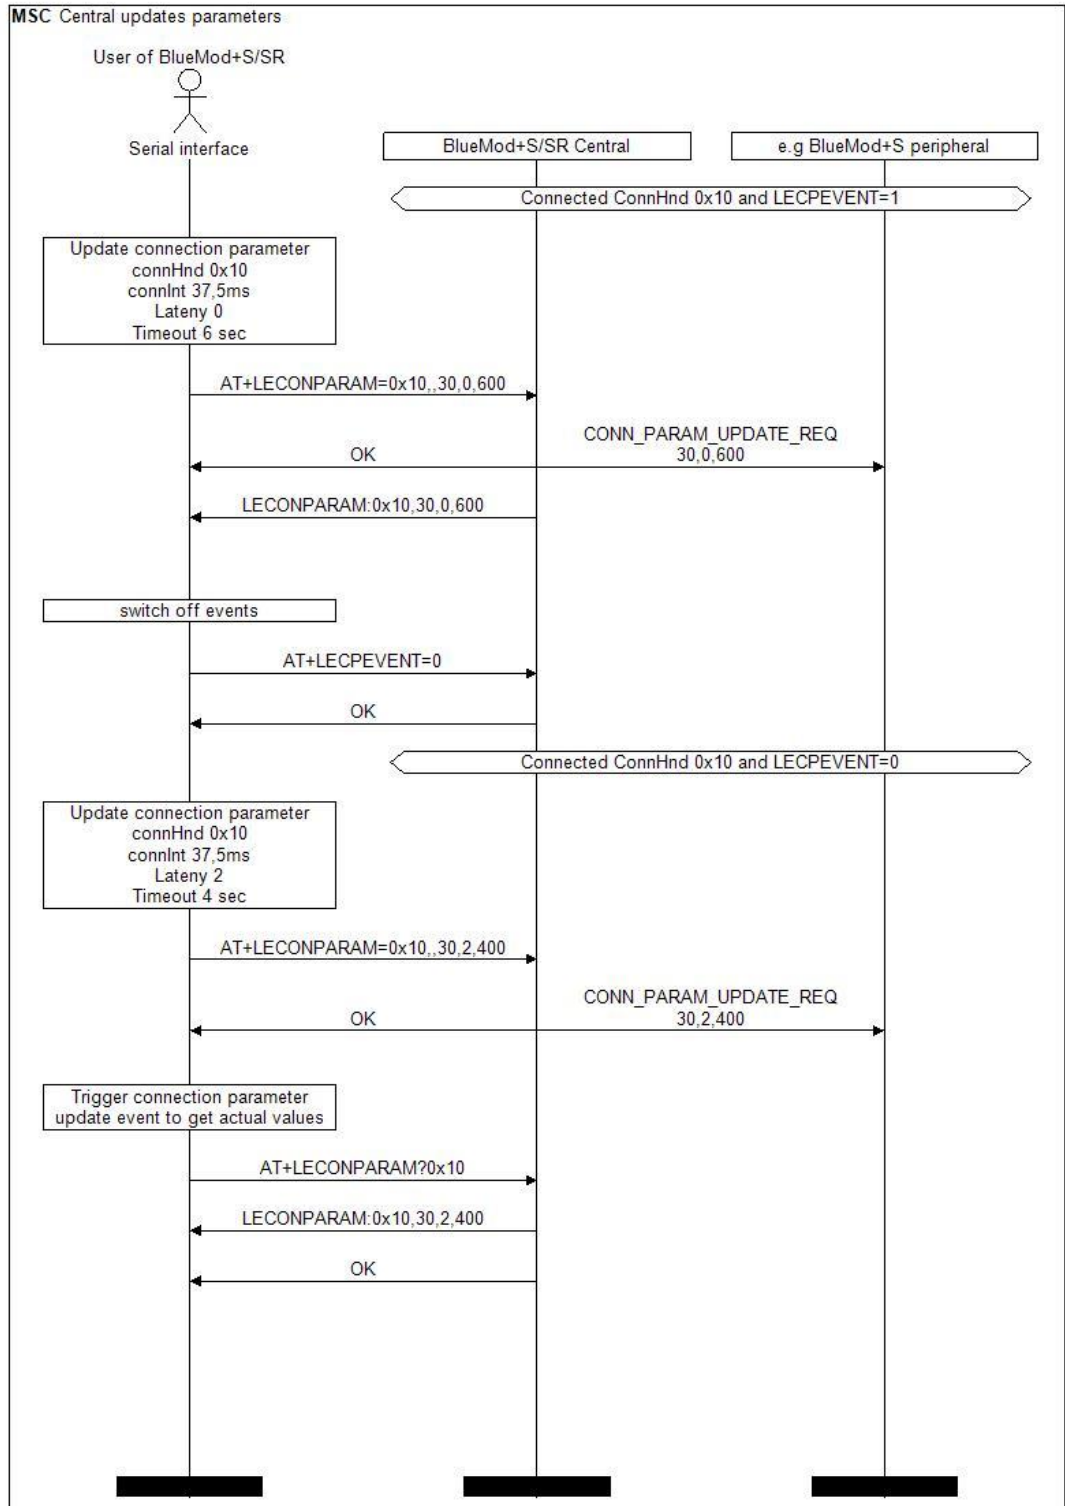

9.5.3. Peripheral Side Create a Connection Parameter Update Request

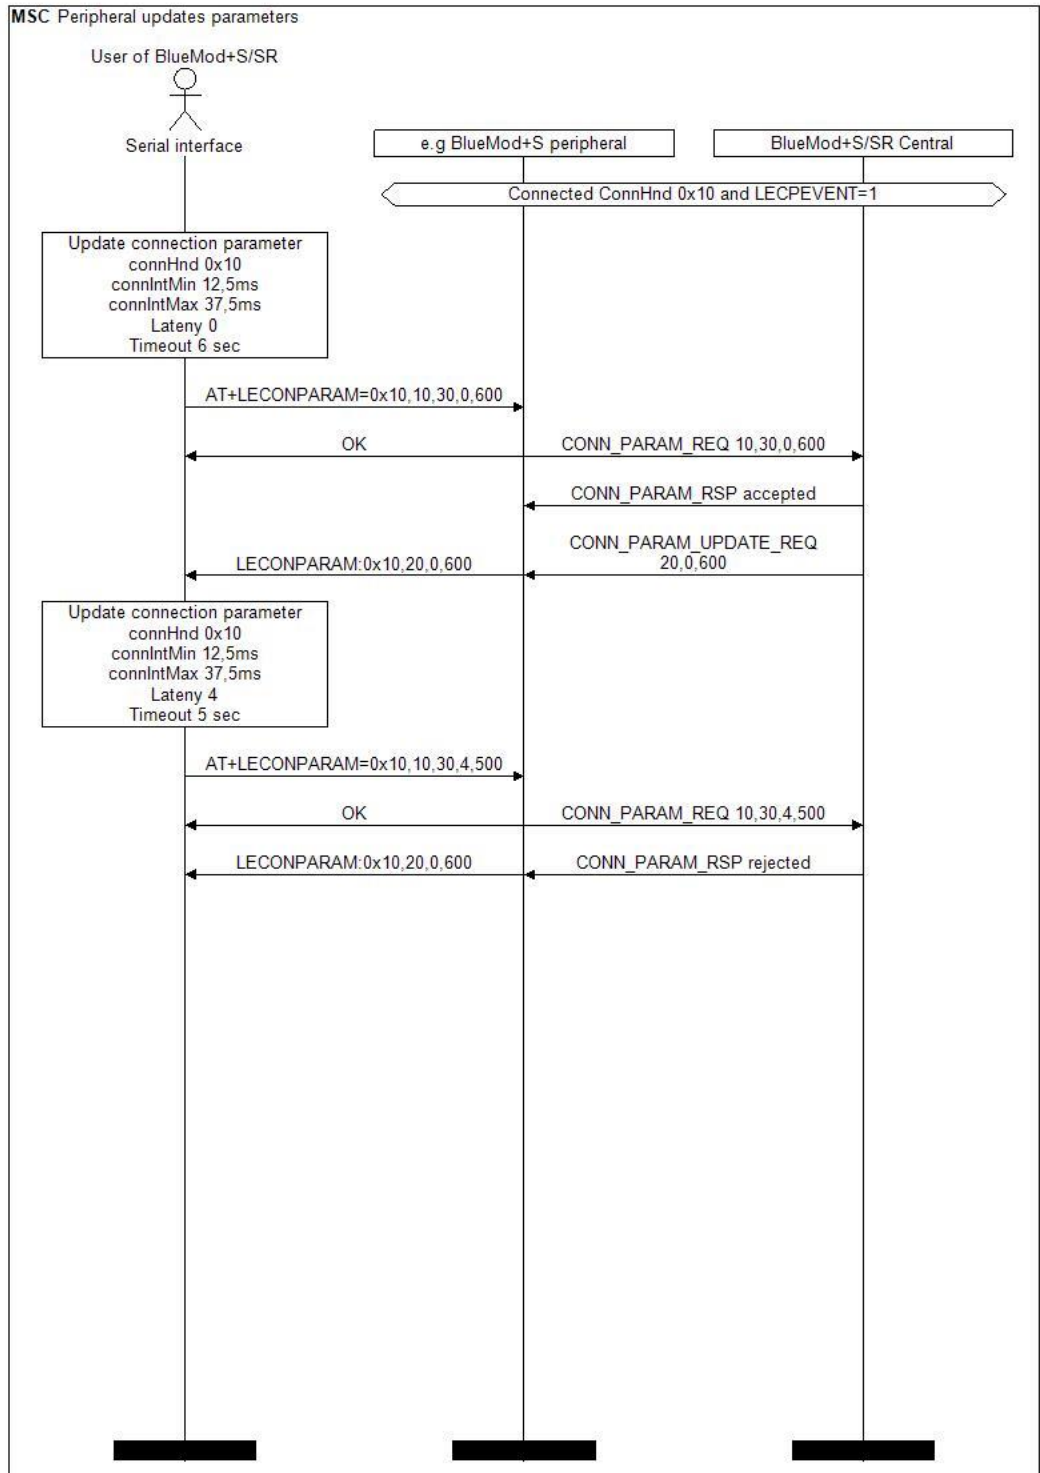

10. Document History

Revision	Date	Changes
r01	2016-04-22	Initial version based on „BM+S User Guide r04”
r02	2016-05-24	Telit cover page added
r03	2016-11-18	Document converted to Telit template Added Terminal I/O client Added new value “3” of +LETIO command

